 
 





Part No. B-41623-B Oil Line Remover

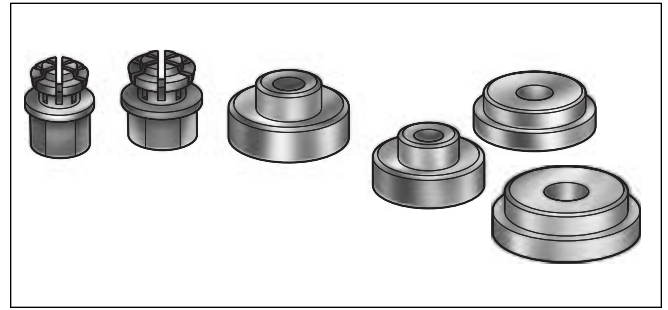


Part No. B-43993-7/-8 Wheel Bearing Collets

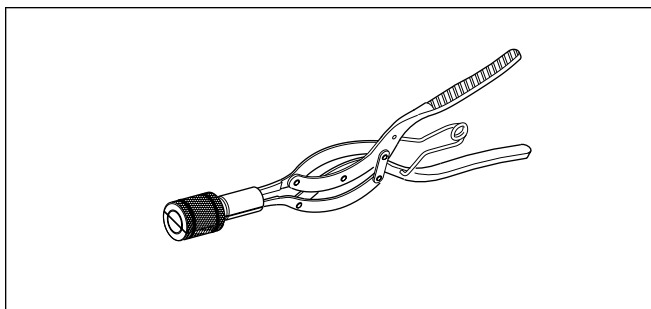

 
Part No. B-42887 Brake Caliper Piston Remover

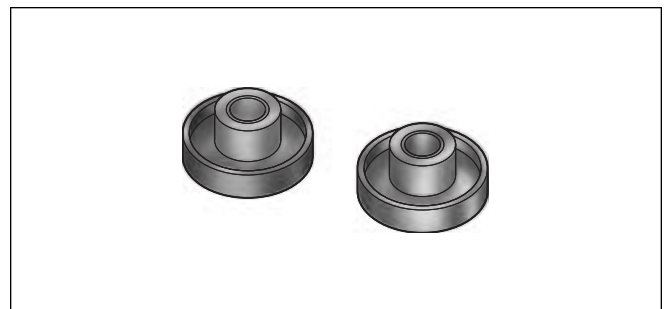

 
Part No. B-45521 Steering Head Bearing Remover/  
Installer

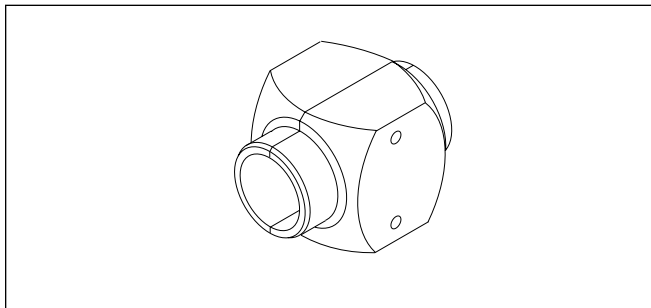


Part No. B-43721 Front Fork Seal Driver

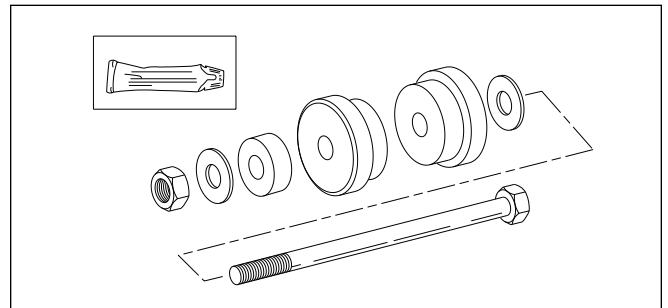 

 
Part No. HD-39302 Steering Head Bearing Race Installer  
(Used with B-45521)

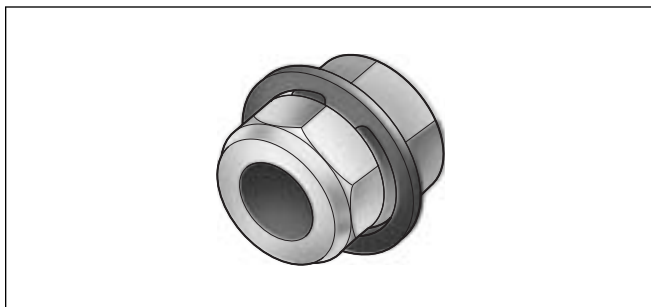


Part No. B-46279 7/8" Axle Wrench (Hex)

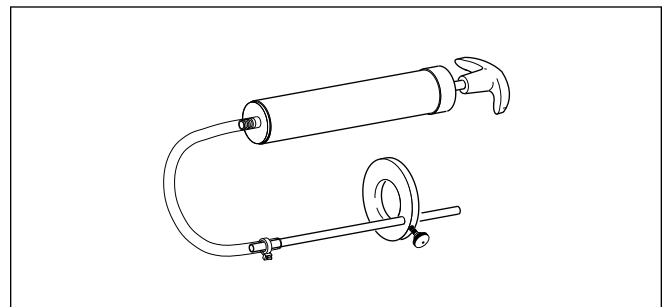 


Part No. B-59000B Pro Level Oil Gauge

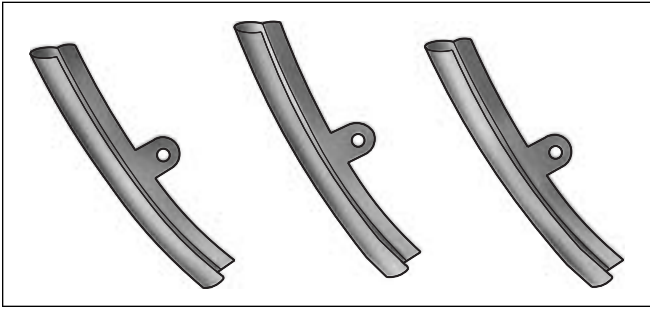 


**Part No. HD-01289 Rim Protectors**

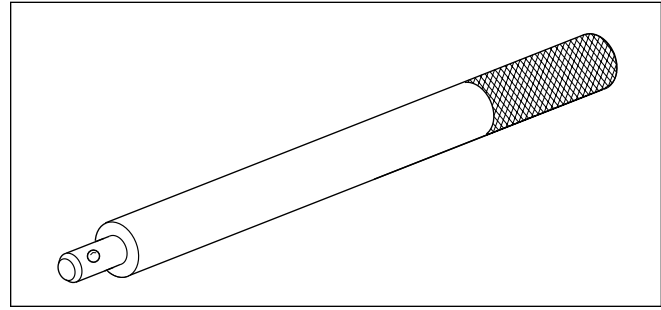 


**Part No. HD-33416 Universal Driver Handle**

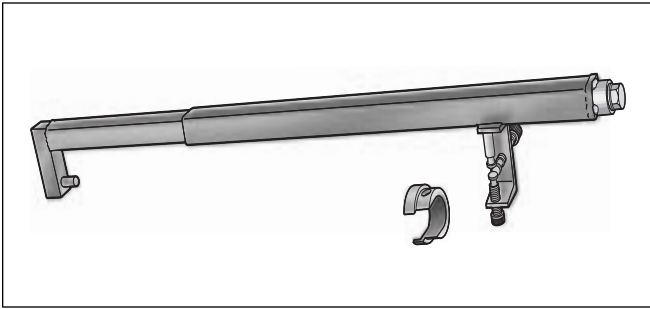 


**Part No. HD-45966 Fork Spring Compressing Tool**

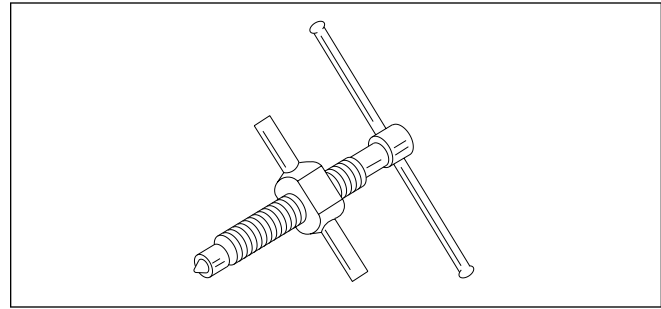 


**Part No. HD-33418 Universal Puller Forcing Screw**

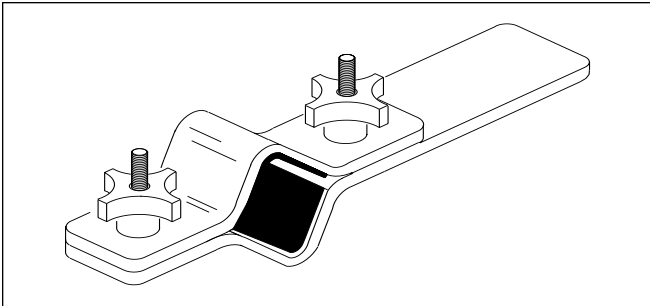 


**Part No. HD-41177 Fork Tube Holder**

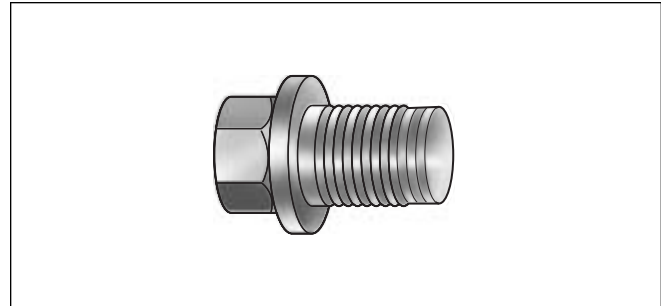 


**Part No. HD-B-45520 Gear Detent Assembly Aid**

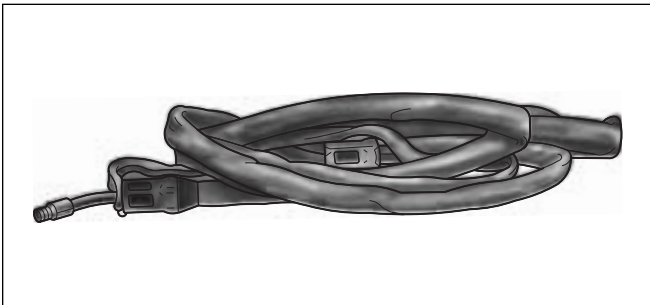 


**Part No. HD-28700 Tire Bead Expander**

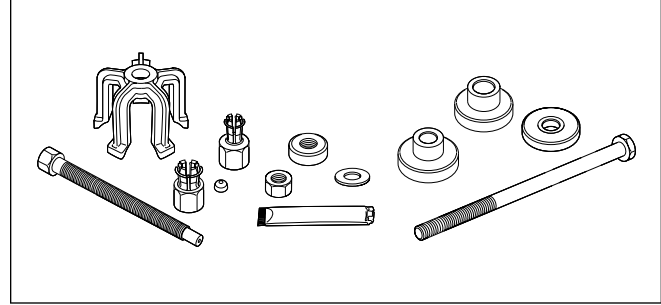 


**Part No. HD-44060 Wheel Bearing Remover/Installer**

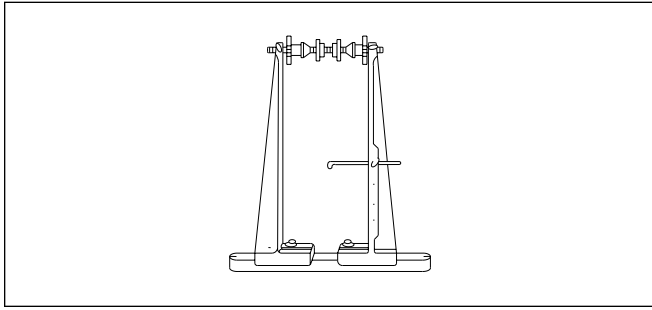 


**Part No. HD-99500-80 Wheel Truing and Balancing Stand**

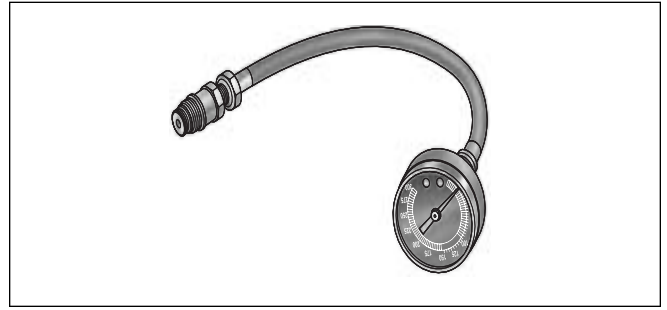 


**Part No. HD-33223-1 Cylinder Compression Gauge**

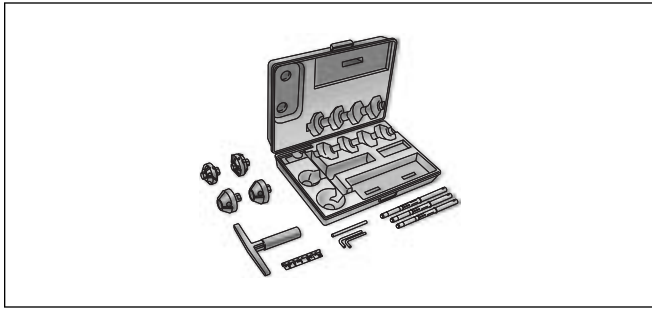 


**Part No. HD-35758-B Neway Valve Seat Cutter Set**

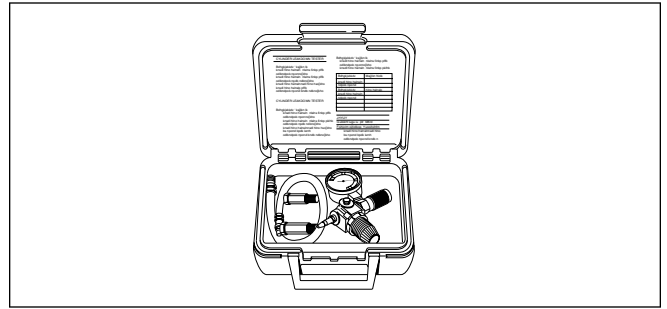 


**Part No. HD-35667A Cylinder Leakdown Tester**

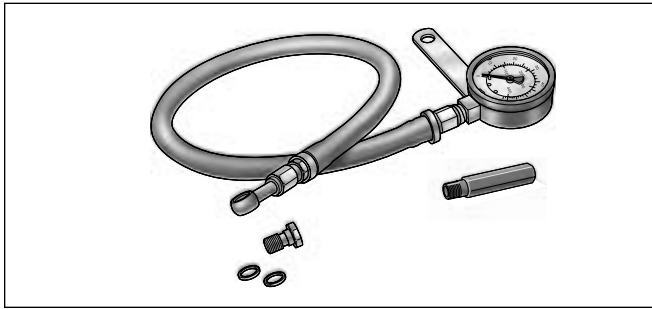 


**Part No. HD-96921-52A Oil Pressure Gauge**

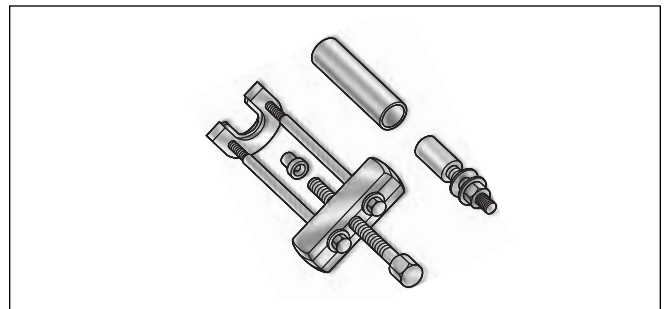 


**Part No. HD-34902-B Bearing Race Remover/Installer**

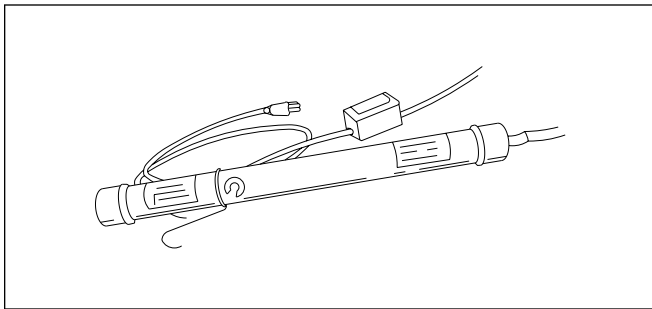 


**Part No. HD-35457 Black Light Leak Detector**

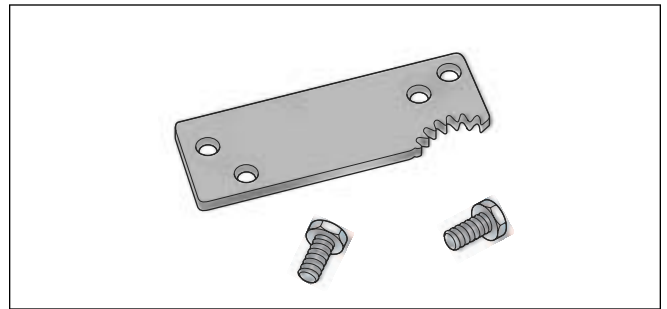 


**Part No. HD-43984 Crankshaft Locking Tool**

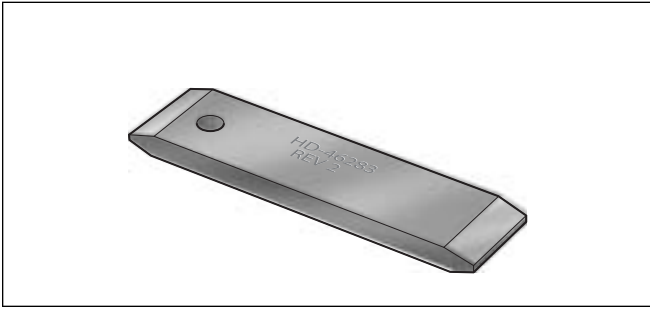 


**Part No. HD-46283 Primary Drive Locking Tool**

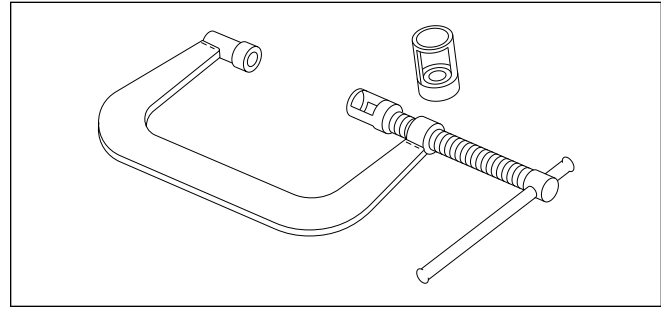 


**Part No. HD-34736B Valve Spring Compressor**

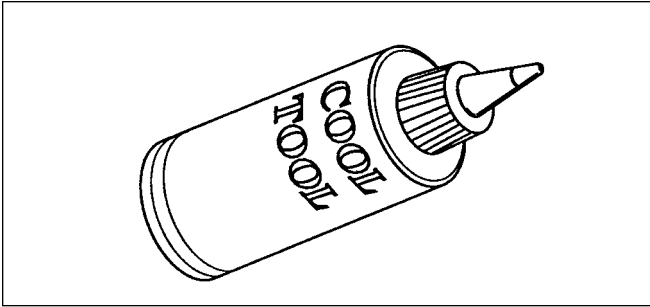 


**Part No. HD-39964 Reamer Lubricant (Cool Tool)**

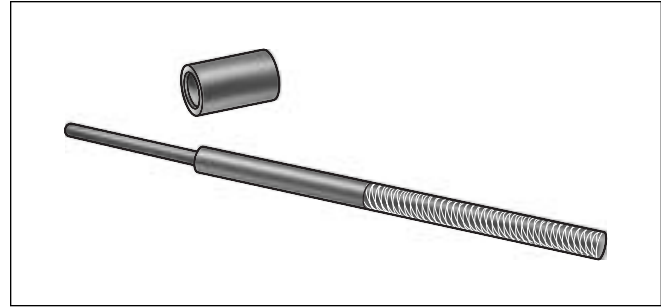 


**Part No. B-45524 Valve Guide Installer**

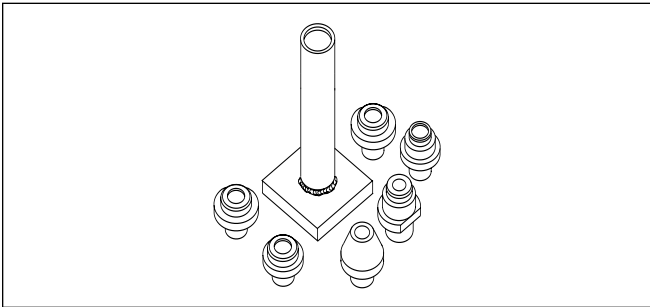 


**Part No. HD-39782 Cylinder Head Support**

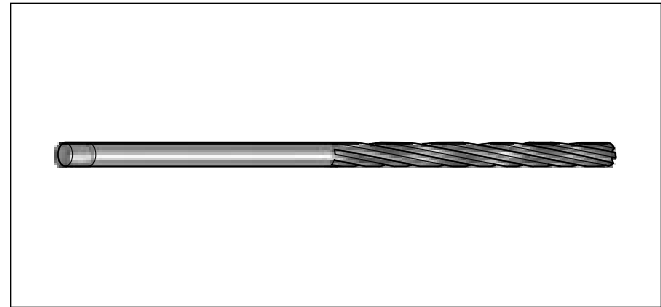 


**Part No. B-45523 Valve Guide Reamer (7mm)**

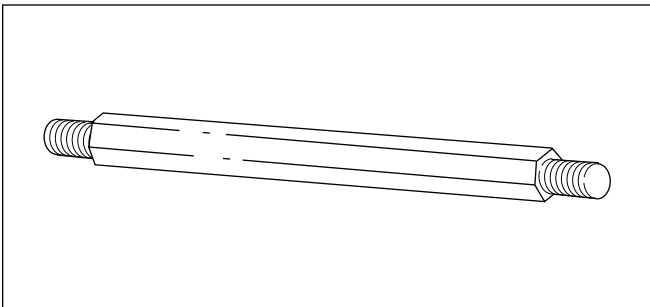 


**Part No. HD-39786 Cylinder Head Holding Fixture**

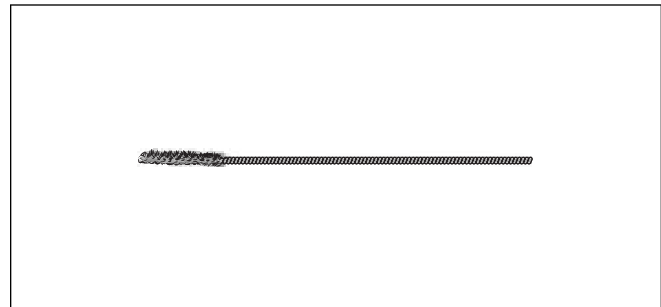 


**Part No. B-45525 Valve Guide Hone**

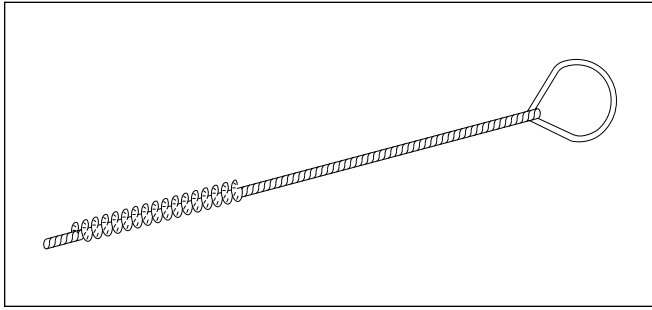 


**Part No. HD-34751 Nylon Valve Guide Brush**

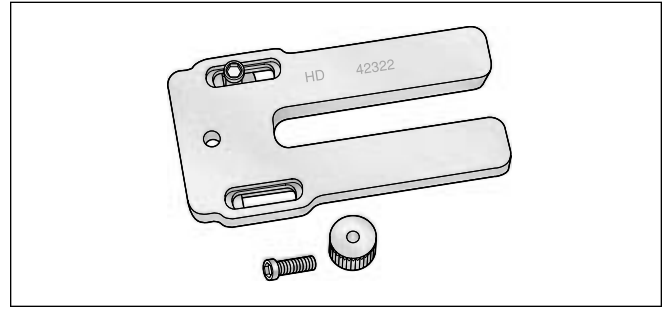 


**Part No. HD-42322 Piston Support Plate**

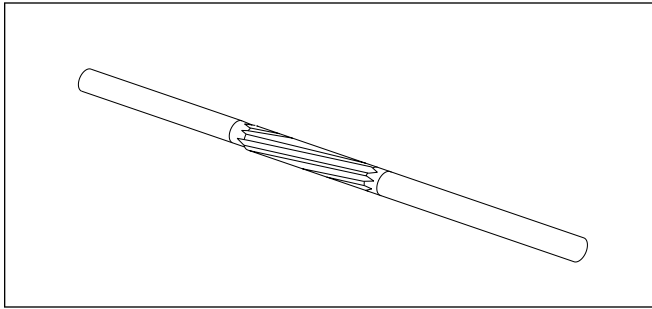 


**Part No. HD-94804-57 Rocker Arm Bushing Reamer**

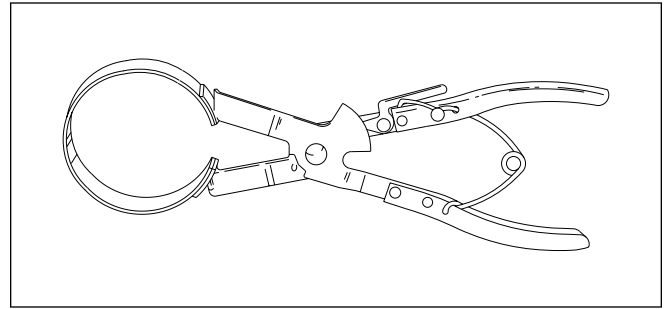 


**Part No. HD-96333-51C Piston Ring Compressor**

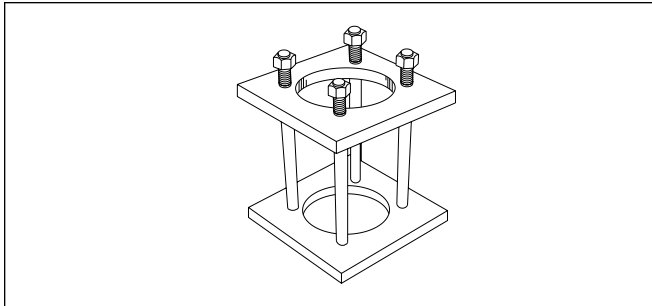 


**Part No. HD-33446A Cylinder Torque Plates and Torque Plate Bolts Part No. HD-33446-86**

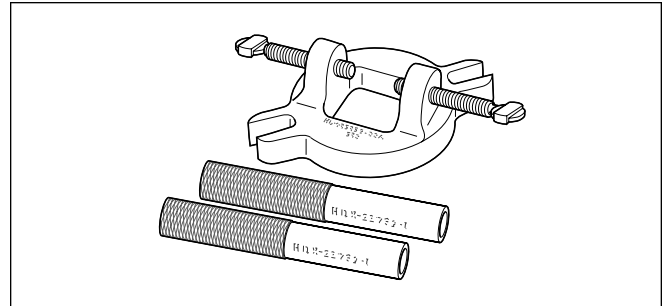 


**Part No. HD-95952-33B Connecting Rod Clamping Tool**

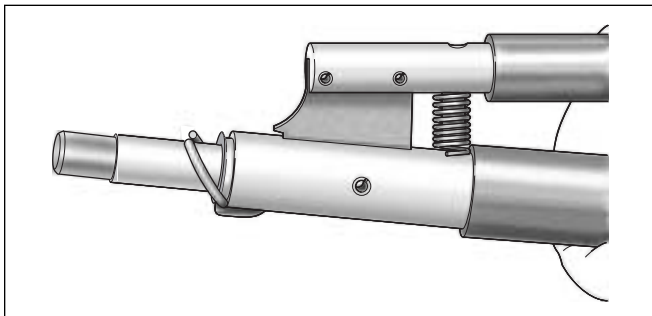 


**Part No. HD-34623C Piston Pin Retaining Ring Installer/Remover**

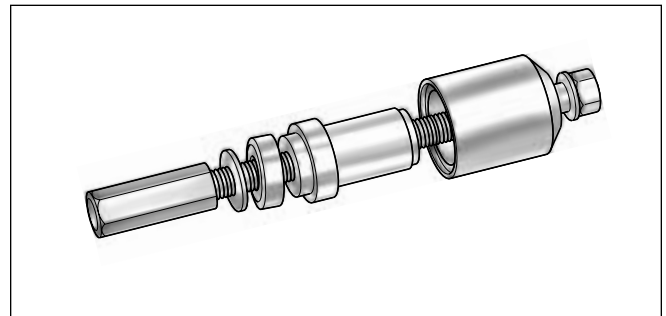 


**Part No. HD-95970-32D Piston Pin Bushing Tool**

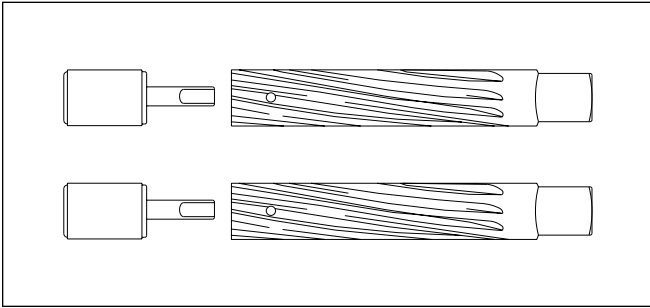 


**Part No. HD-94800-26A Connecting Rod Bushing Reamers and Pilots**

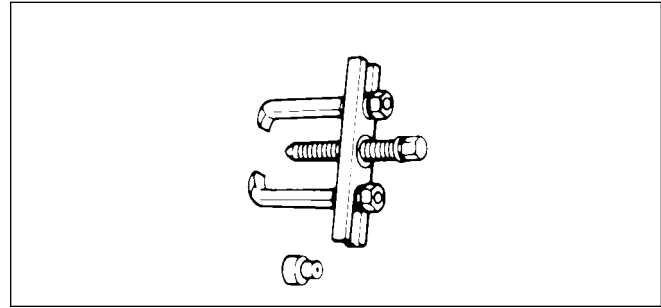 


**Part No. HD-97292-61 Two Claw Puller**

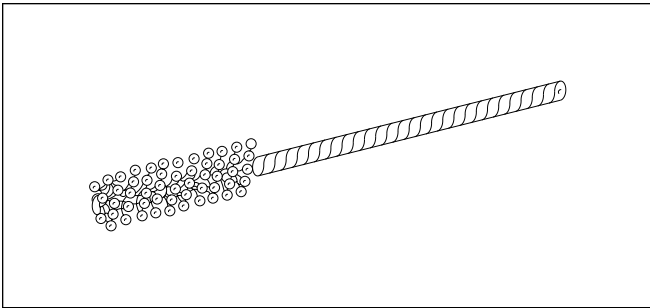 


**Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)**

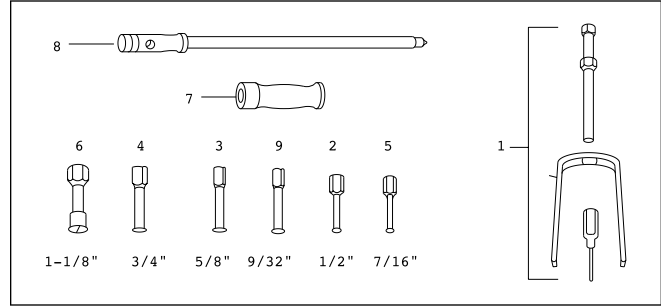 

 
**Part No. HD-95760-69A Bushing/Bearing Puller Tool Set.** Set includes items 1-5 and 9. Items 6 (HD-95769-69), 7 (HD-95770-69) and 8 (HD-95771-69) are optional.

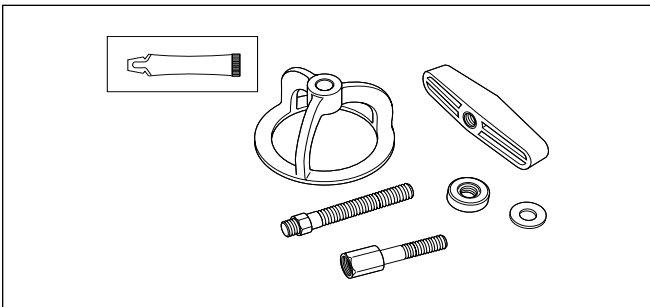

**Part No. HD-38515-A Clutch Spring Compressing Tool and Part No. HD-38515-91 Forcing Screw**

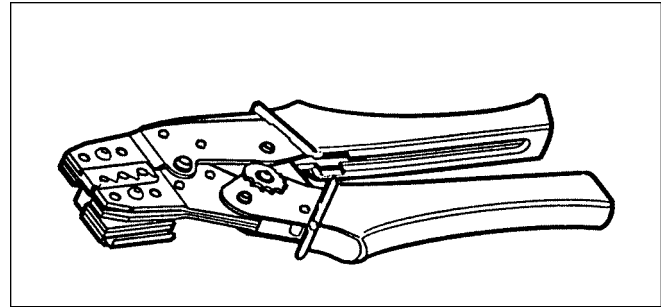 


**Part No. HD-39965 Deutsch Terminal Crimp Tool**

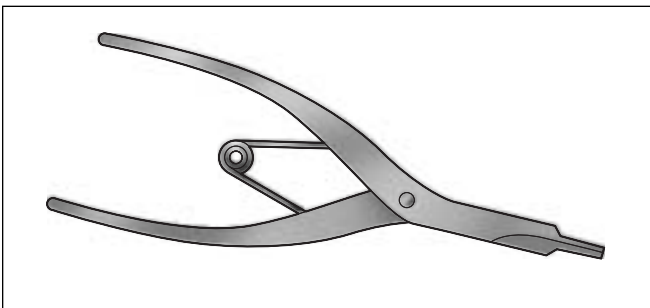 


**Part No. J-5586 Transmission Shaft Retaining Ring Pliers**



 
**Part No. HD-41354 Speedometer Tester**

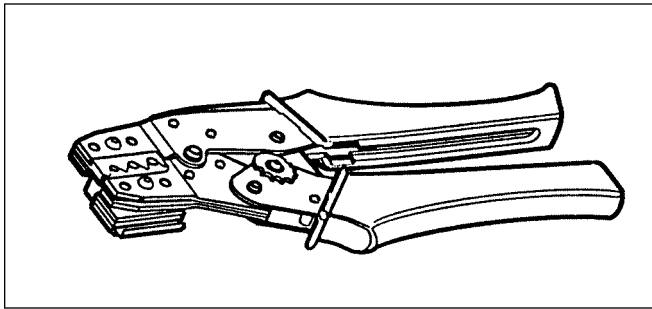


**Part No. HD-41609 Amp Terminal Crimp Tool**

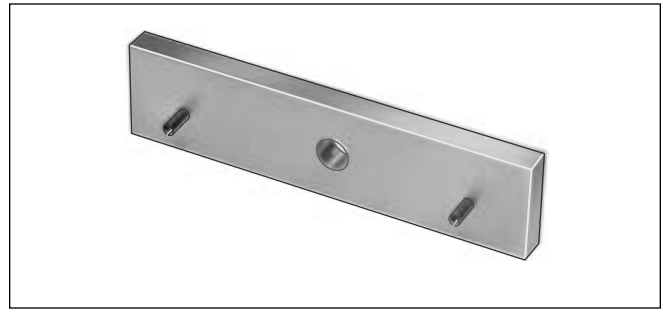 


**Part No. HD-45847 Cross Plate**

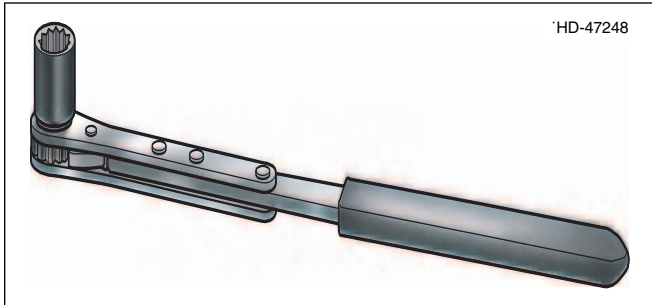 


**Part No. HD-47248 Rocker Housing Wrench**

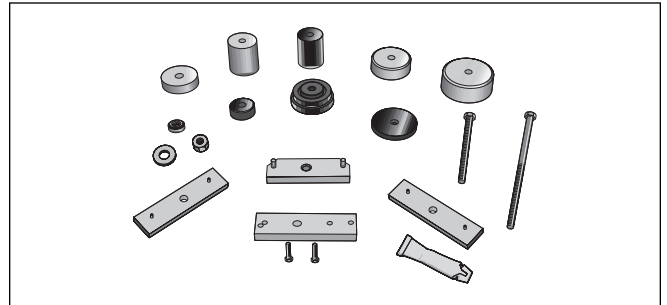 


**Part No. HD-35316-C Main Drive Gear Remover/Installer and Main Drive Gear Bearing Installer**

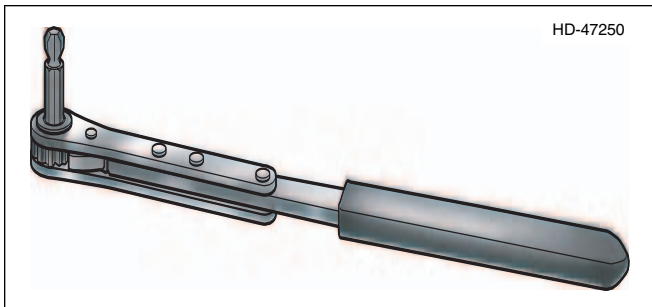 


**Part No. HD-47250 Intake Manifold Wrench**

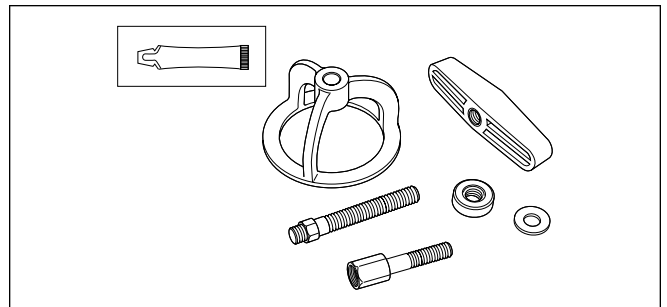 


**Part No. HD-38515-A Clutch Spring Compressor**

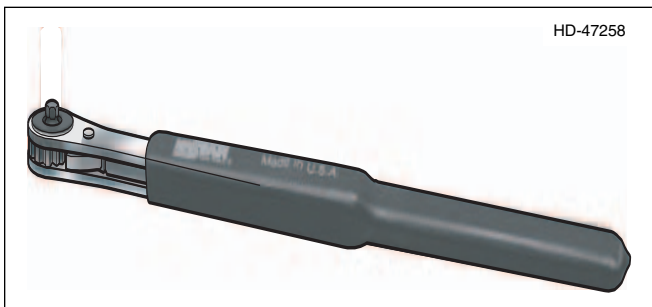 


**Part No. HD-47258 Rocker Cover Wrench**

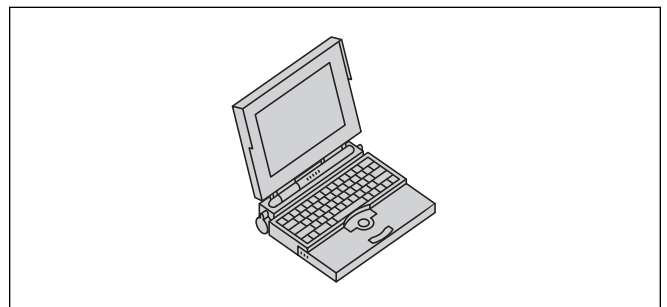 


**Part No. HD-44750-P29 Panasonic Toughbook (touch screen) and HD-44750-P50 Panasonic Toughbook (non-touch screen)**

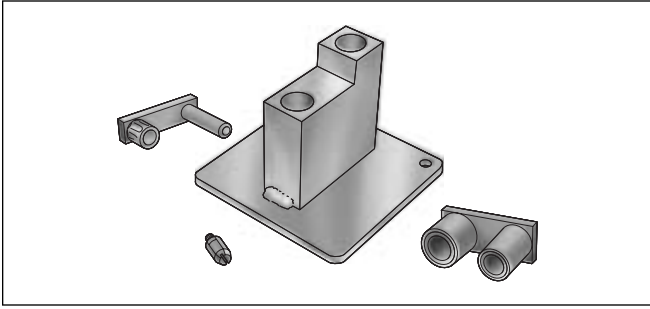 


**Part No. HD-46285 Transmission Assembly Fixture**

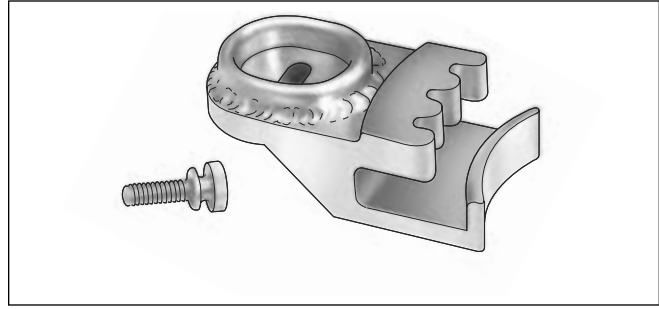 


**Part No. B43982 Transmission Locking Tool**

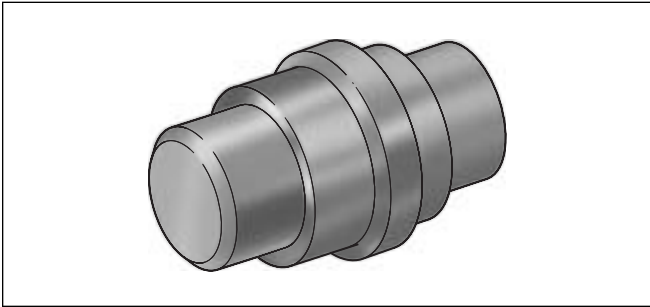 


**Part No. HD-47855 Main Drive Gear Needle Bearing Installer**

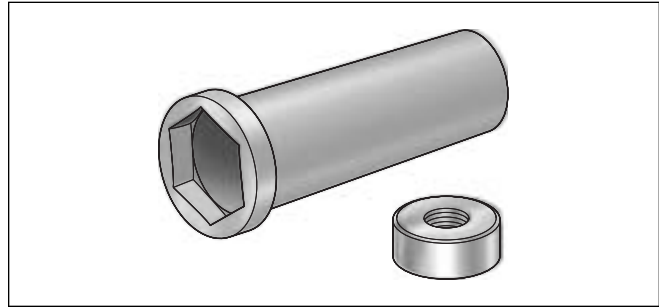 


**Part No. HD-94660-37B Mainshaft Locknut Wrench**

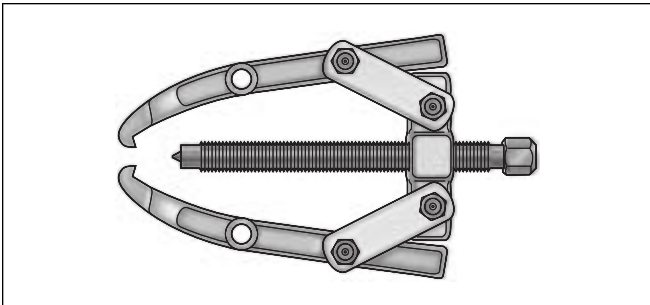 

 
**Part No. HD-95635-46 All-Purpose Claw Puller  
(use with HD-95637-46A)**

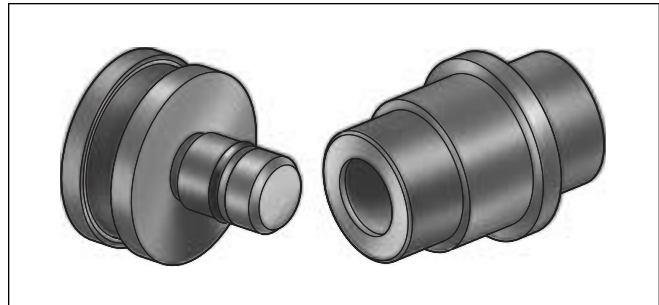

**Part No. HD-45926 Clutch Shell Bearing Remover**

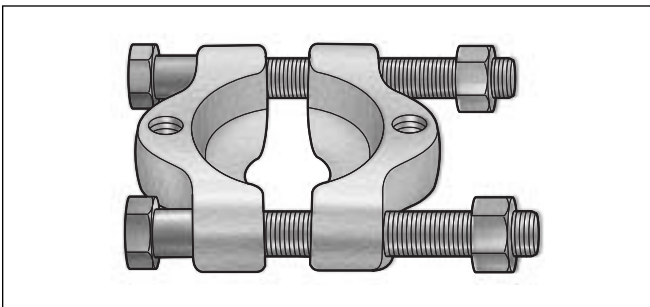 


 **Part No. HD-95637-46A Wedge Attachment of Claw Puller  
(use with HD-95635-46)**

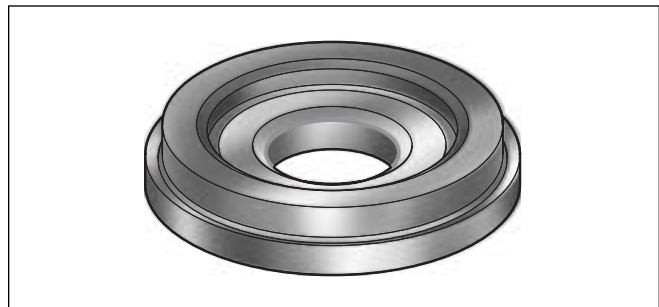


**Part No. B-45676 Sprocket Shaft Seal Installer**




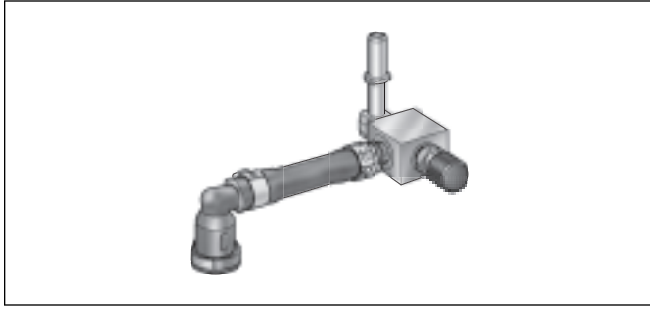 


**Part No. B-45522 Fuel Pressure Gauge Adapter**

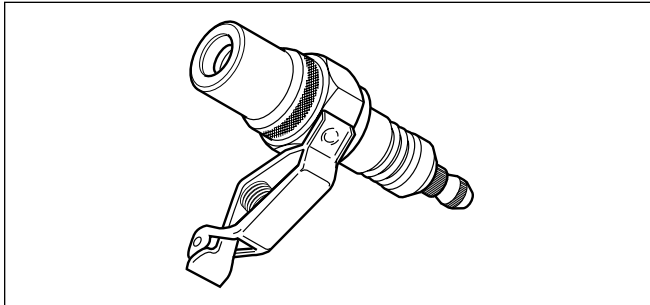 

**Part No. HD-26792 Spark Tester**

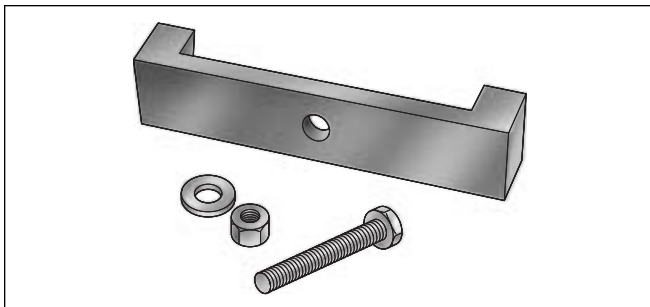 

**Part No. B-45657 Fuel Pump Puller**

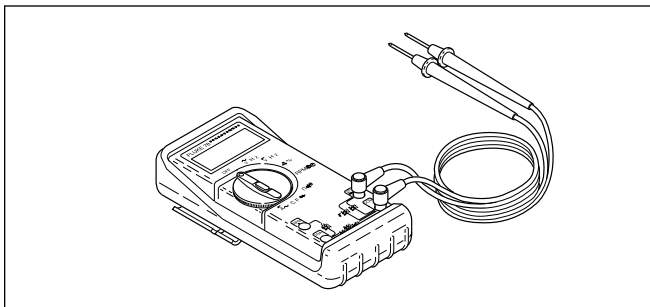 

**Part No. HD-39978 Fluke 78 Multimeter (DVOM)F**

# NOTES

---