 
 



**Part No. HD-25070 Robinair Heat Gun  
(Use with HD-41183)**

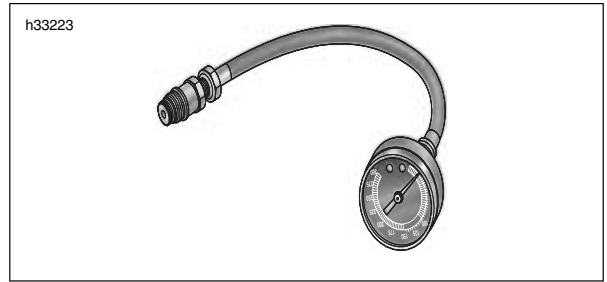


**Part No. HD-33223-1 Cylinder Compression Gauges**

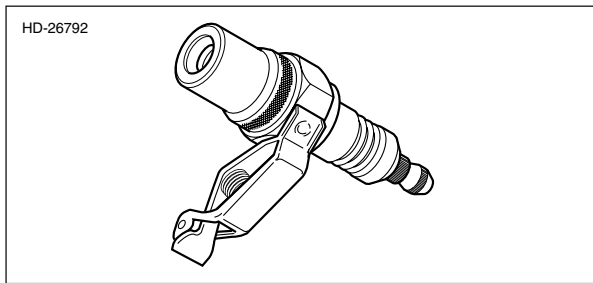

 
**Part No. HD-26792 Spark Tester**

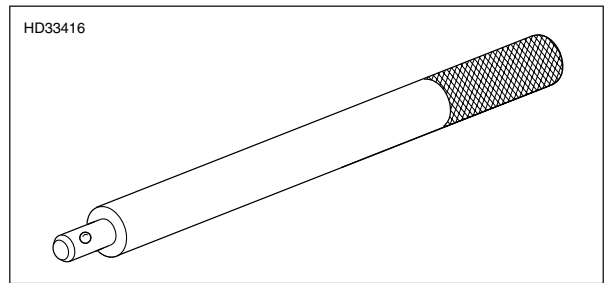

**Part No. HD-33416 Universal Driver Handle**

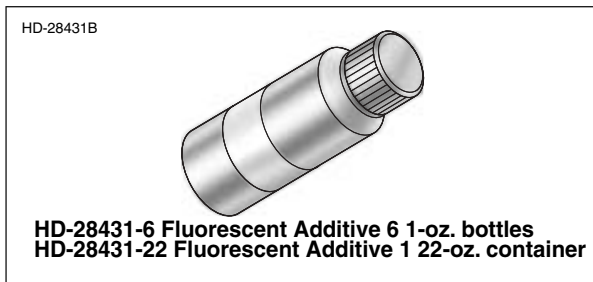 


 **Part No. HD-28431-B Black Light Fluorescent Additive  
(Use with HD-)**

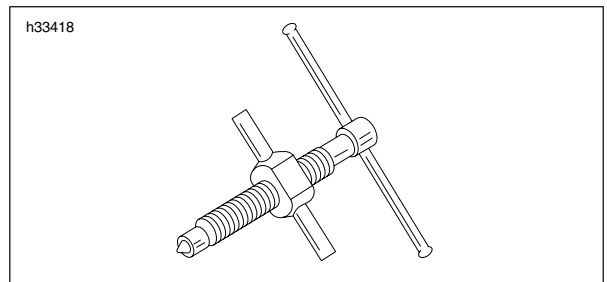


**Part No. HD-33418 Universal Puller Forcing Screw**

 h33446

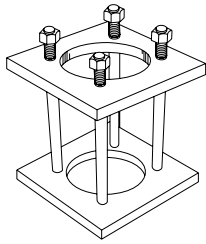


**Part No. HD-33446A Cylinder Torque Plates and Torque Plate Bolts Part No. HD-33446-86**

 h34902b

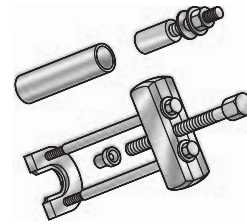


**Part No. HD-34902-B Mainshaft Primary Bearing Race Remover And Installer**

 b1001a3x

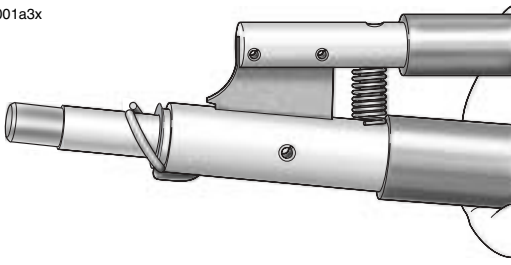


**Part No. HD-34623C Piston Pin Retaining Ring Installer/Remover**

 h35102

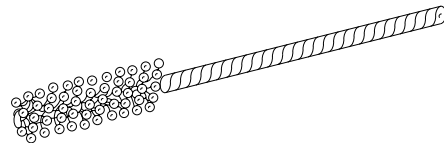


**Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)**

 h34726B

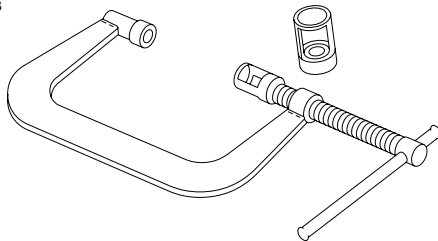


**Part No. HD34736-B Valve Spring Compressor**

 HD-35316C

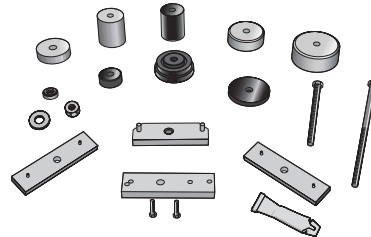


**Part No. HD-35316-C Main Drive Gear Remover/Installer and Main Drive Gear Bearing Installer**

 h34751

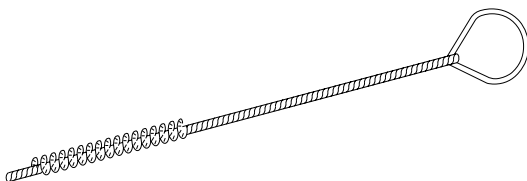


**Part No. HD-34751 Nylon Valve Guide Brush**

 
h35457

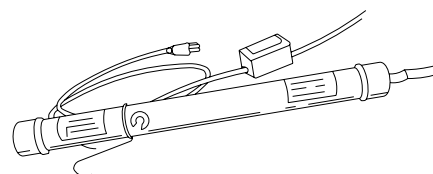


**Part No. HD-35457 Black Light Leak Detector**

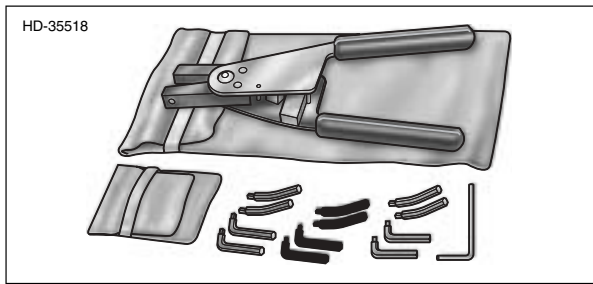 

 
Part No. HD-35518 Internal/External Retaining Ring Pliers

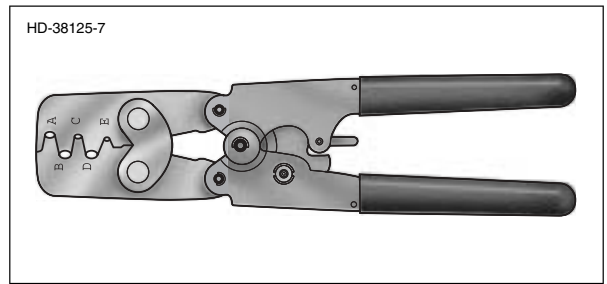

 Part No. HD-38125-7 Packard Terminal Crimp Tool (Nonsealed)

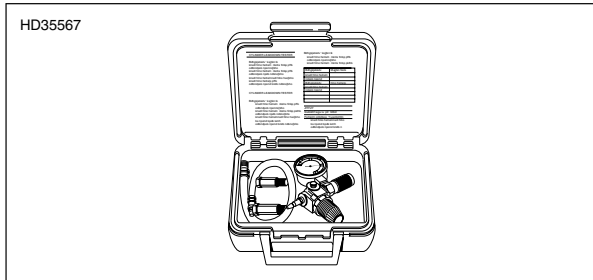

 
Part No. HD-35667A Cylinder Leakdown Tester

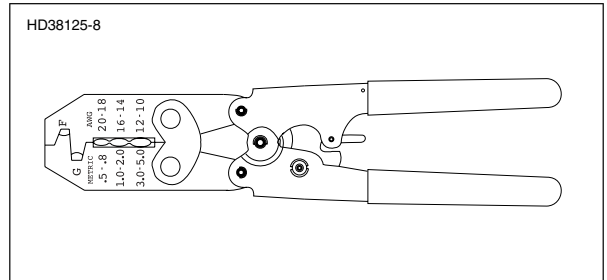


Part No. HD-38125-8 Packard Terminal Crimp Tool



 
Part No. HD-35758-B Neway Valve Seat Cutter Set

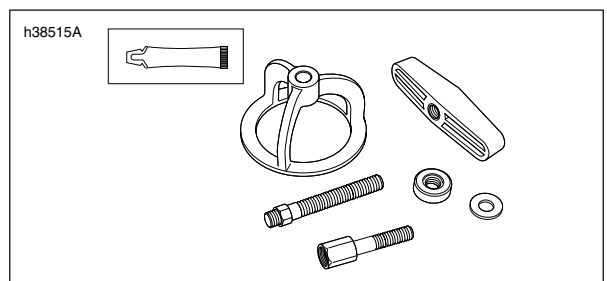

 
Part No. HD-38515-A Clutch Spring Compressor

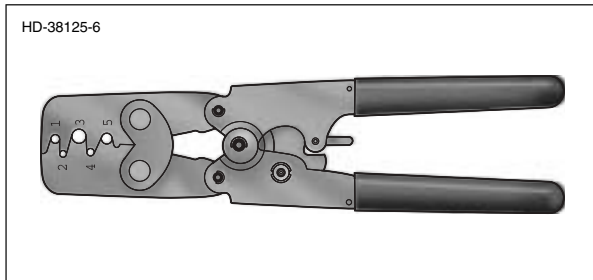

 Part No. HD-38125-6 Packard Terminal Crimp Tool (Sealed)

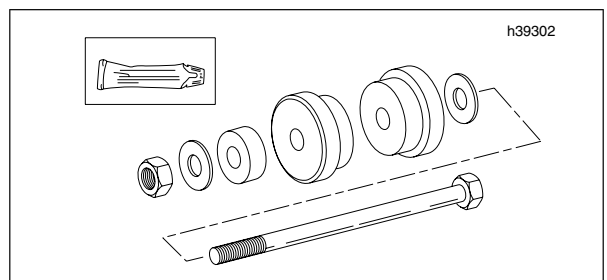


 Part No. HD-39302 Steering Head Bearing Race Installer (Used with B-45521)

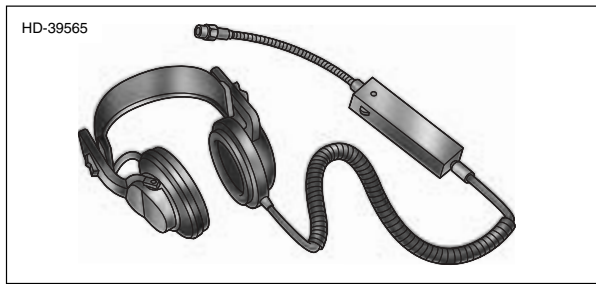


HD-39565

**Part No. HD-39565 Engine Sound Probe**

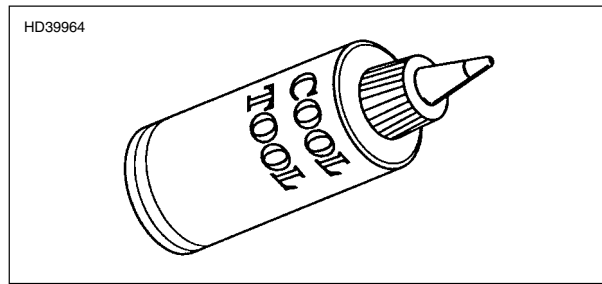 


HD39964

**Part No. HD-39964 Reamer Lubricant (Cool Tool)**

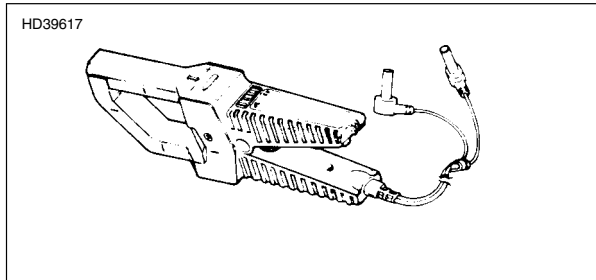 


HD39617

**Part No. HD-39617 Fluke AC/DC Current Problem**

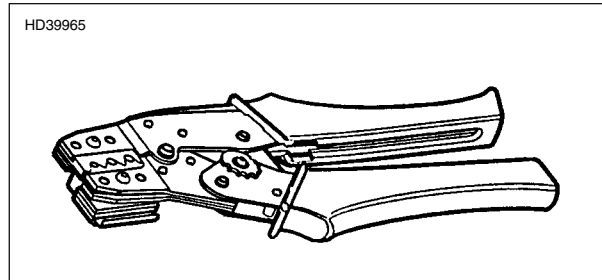 

HD39965

**Part No. HD-39965 Deutsch Terminal Crimp Tool**

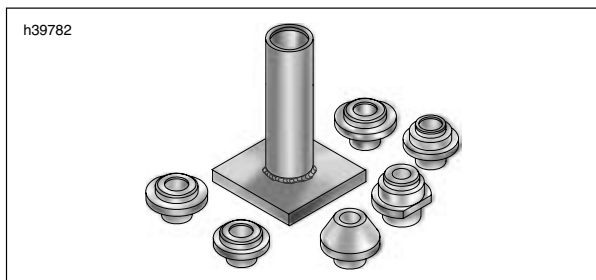 


h39782

**Part No. HD-39782-A Cylinder Head Support Stand**



 
HD-39969

**Part No. HD-39969 Ultra-Torch UT-100**

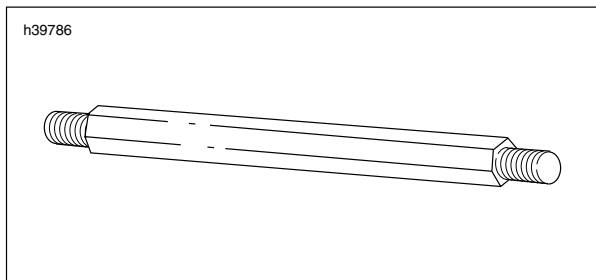


h39786

**Part No. HD-39786 Cylinder Head Holding Fixture**

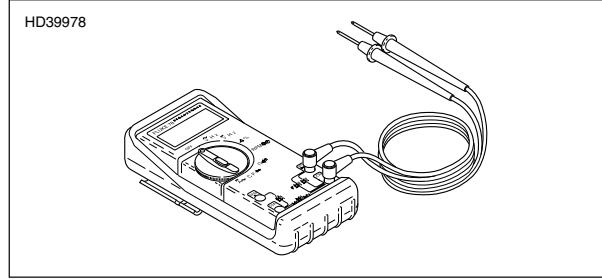 


HD39978


**Part No. HD-39978 Fluke 78 Multimeter (DVOM)F**

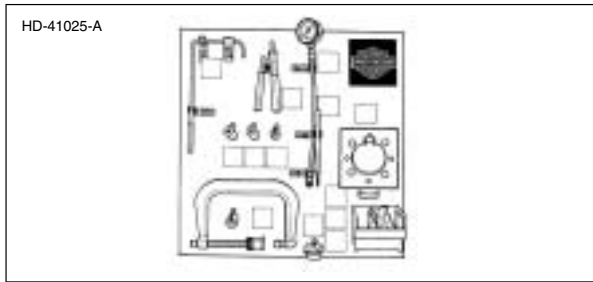 


**Part No. HD-41025-A Tool Board System**

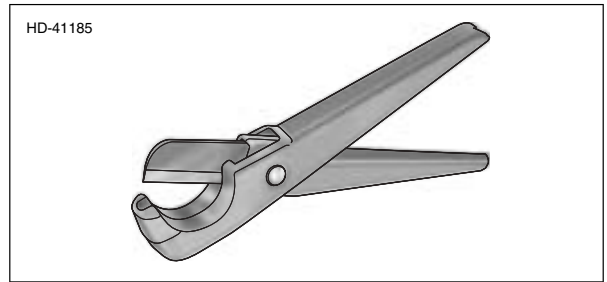 


**Part No. HD-41185 Hose Cutting Tool**

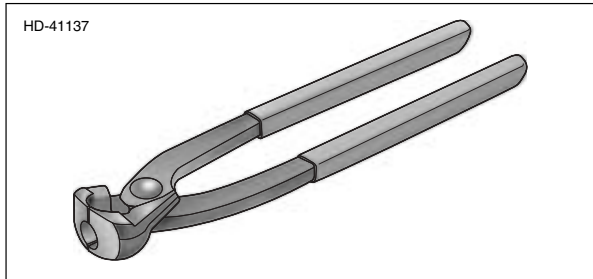 

**Part No. HD-41137 Two-Way Hose Clamp Pliers**

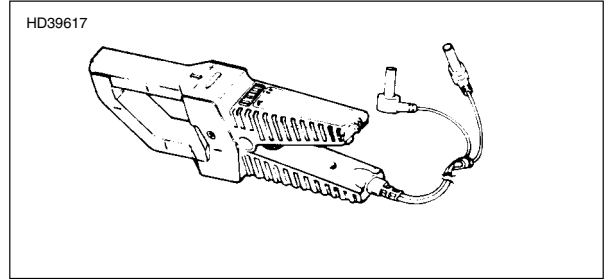 


**Part No. HD-41334 RPM Inductive Pickup**

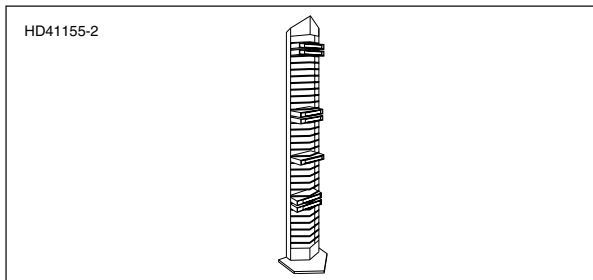 

**Part No. HD-41155 VHS Tape Storage Rack**



 
**Part No. HD-41354 Speedometer Tester**

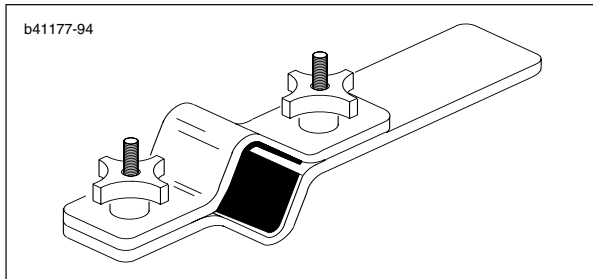


**Part No. HD-41177 Fork Tube Holder**



 
**Part No. HD-41404 Harness Connector Test Kit**

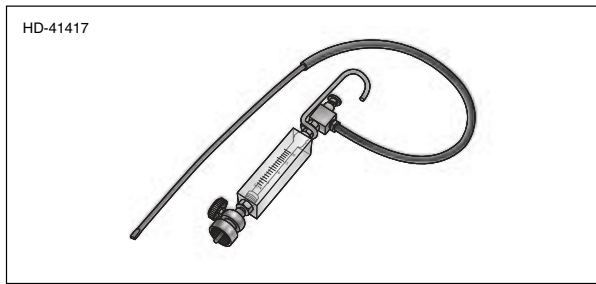

 
Part No. HD-41417 Propane Enrichment Kit

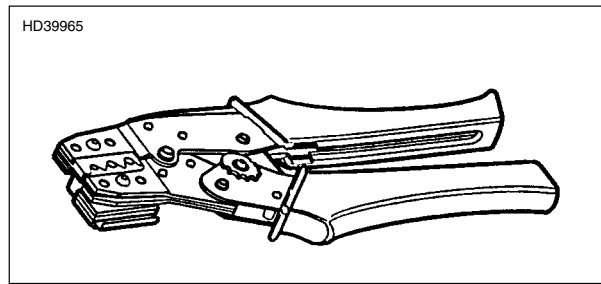

 
Part No. HD-41609 Amp Multi-Lock Crimper

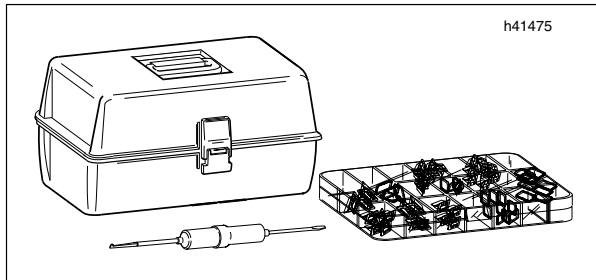

 
Part No. HD-41475 Deutsch Terminal Repair Kit

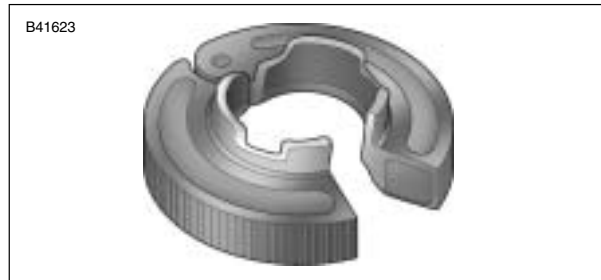


Part No. B-41623-B Oil Line Remover

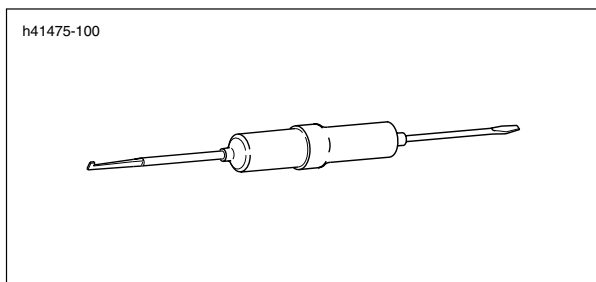 

 
Part No. HD-41475-100 Deutsch Connector Pick Tool

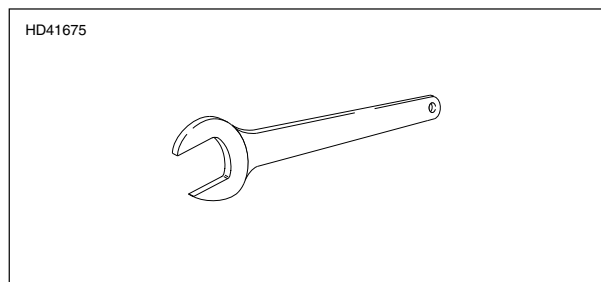

 
Part No. HD-41675 Oil Pressure Sending Unit Wrench

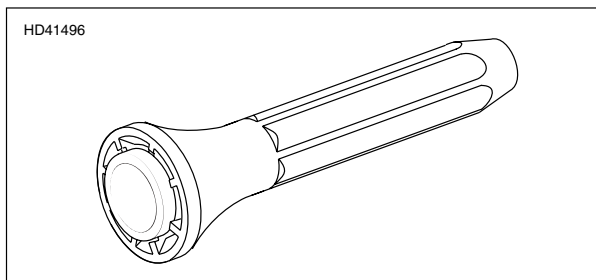

 
Part No. HD-41496 Main Drive Gear Seal Installer

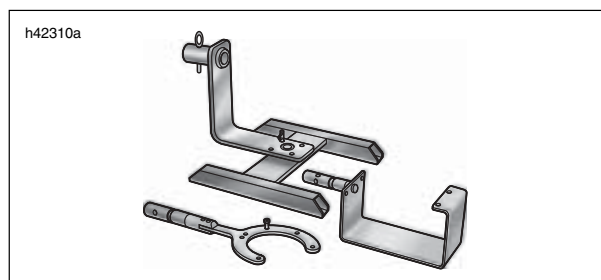

 
Part No. HD-42310 Engine Transmission Stand

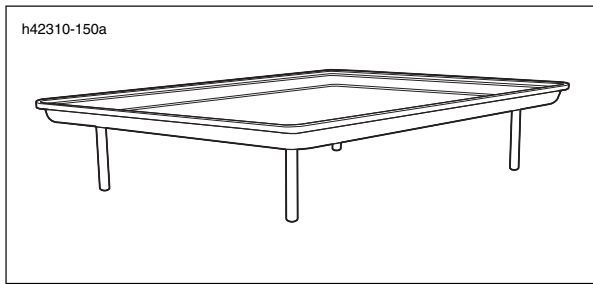

 
Part No. HD-42310-150 Engine Stand Drip Tray

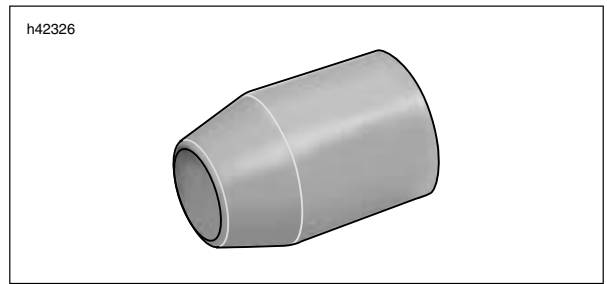


Part No. HD-42326-A Crankshaft Guide

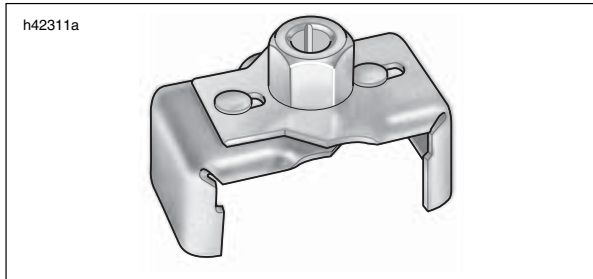 


Part No. HD-42311 Oil Filter Wrench

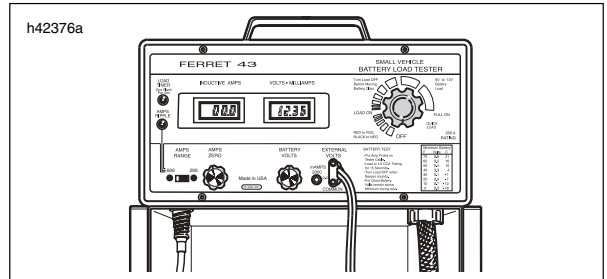 


Part No. HD-42376 Battery Load Tester

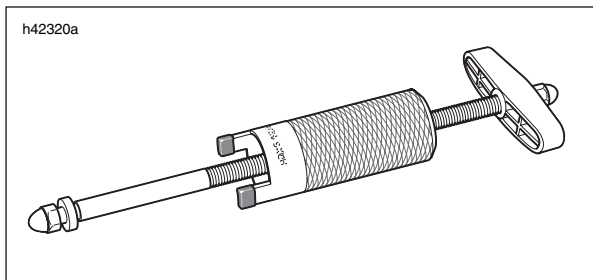 

 
Part No. HD-42320-A Piston Pin Extractor

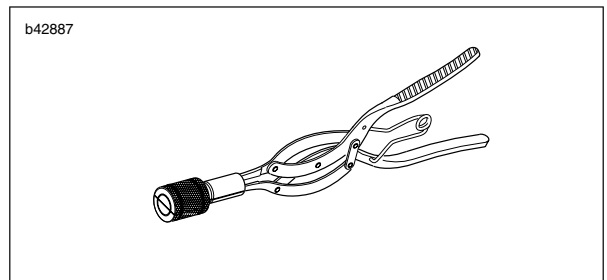

 
Part No. B-42887 Brake Caliper Piston Remover

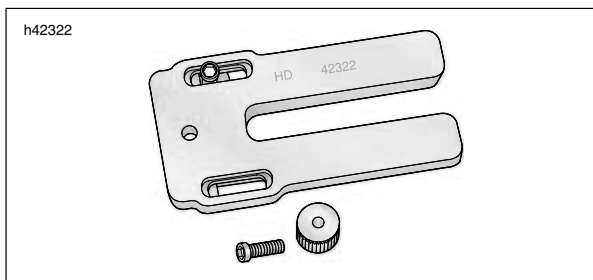


Part No. HD-42322 Piston Support Plate

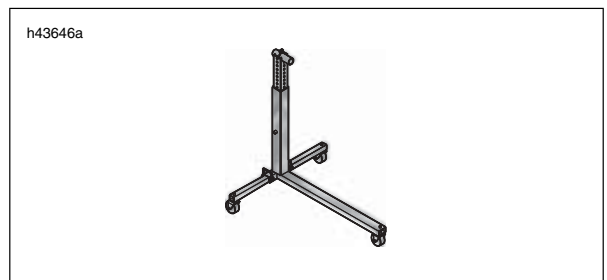 


Part No HD-43646-A Rolling Engine Stand

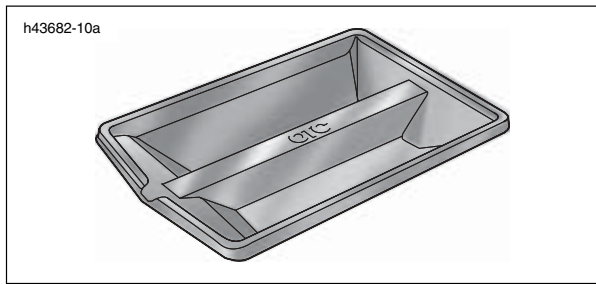 


Part No. HD-43646-10 Oil Drip Tray

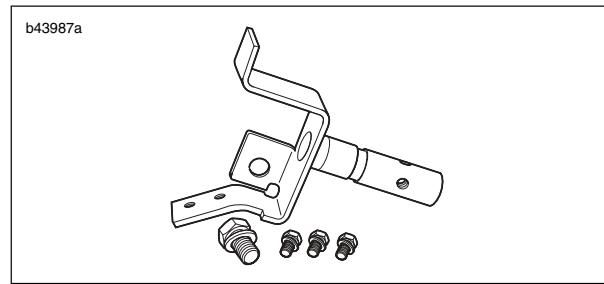 


Part No. B-43987 Engine Cradle

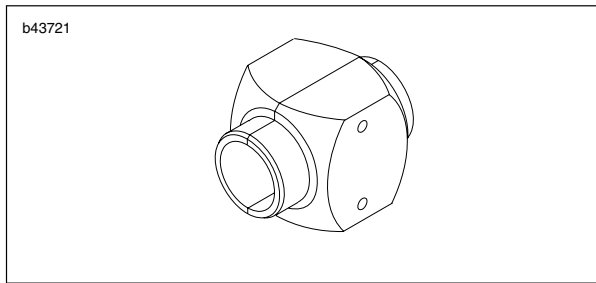 


Part No. B-43721 Front Fork Seal Driver

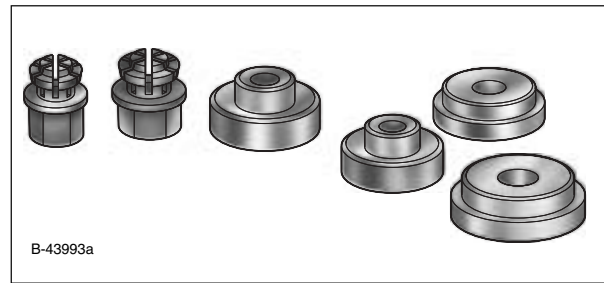 


Part No. B-43993 Wheel Bearing Collets

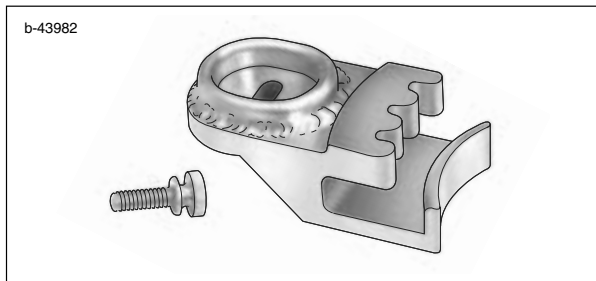 

 
Part No. B43982 Transmission Locking Tool

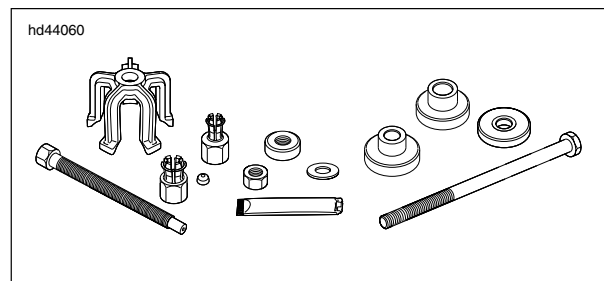

 Part No. HD-44060 Wheel Bearing Remover/Installer

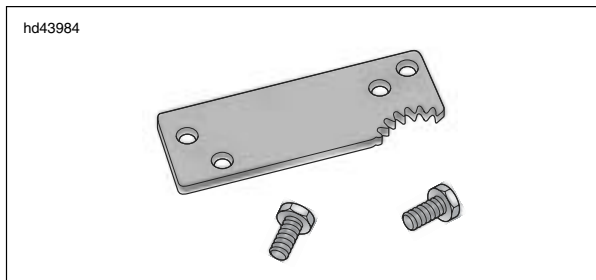


 Part No. HD-43984 Crankshaft Locking Tool

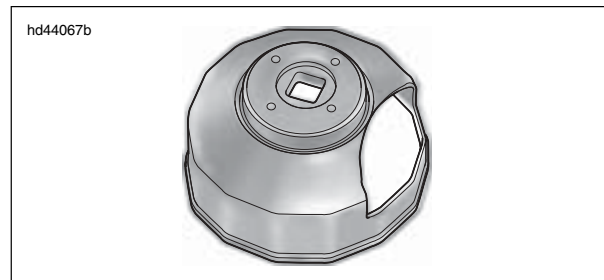


Part No. HD-44067-A Oil Filter Wrench




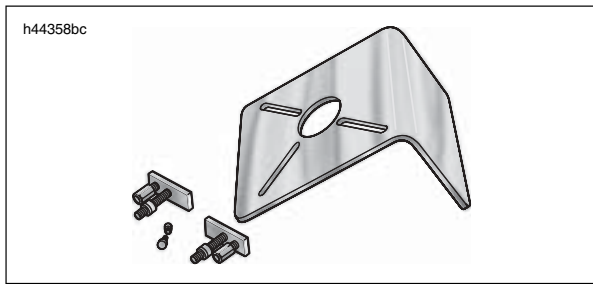 


**Part No. HD--44358 Flywheel Support Fixture**

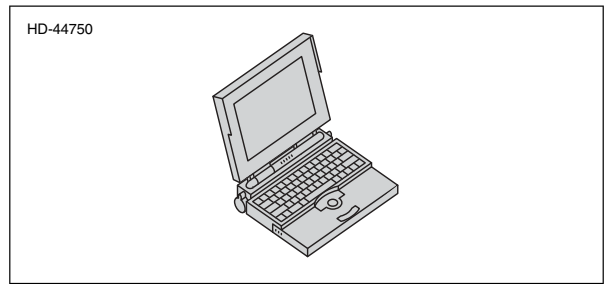 


**Part No. HD-44750-P29 Panasonic Toughbook (touch screen) and HD-44750-P50 Panasonic Toughbook (non-touch screen)**

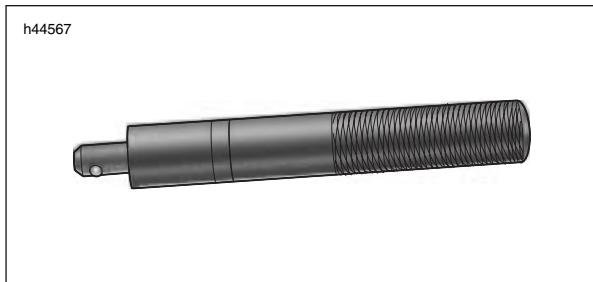 


**Part No. HD-44567 7" Universal Driver Handle**

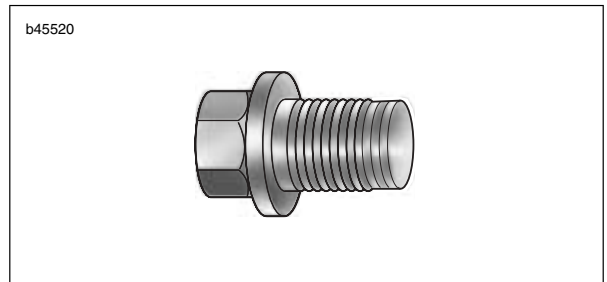 


**Part No. B-45520 Gear Detente Assembly Aid**

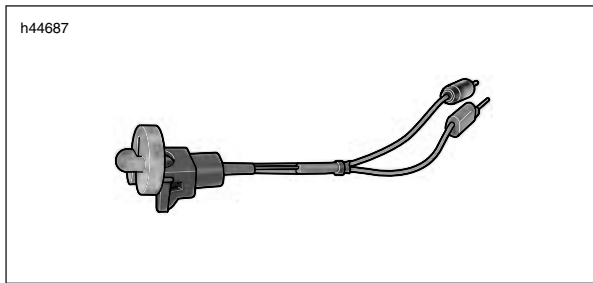 


**Part No HD-44687 Ignition Coil Test Adapter**

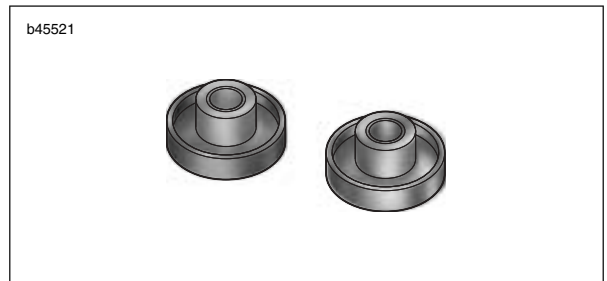 

**Part No. B-45521 Steering Head Bearing Remover/Installer**

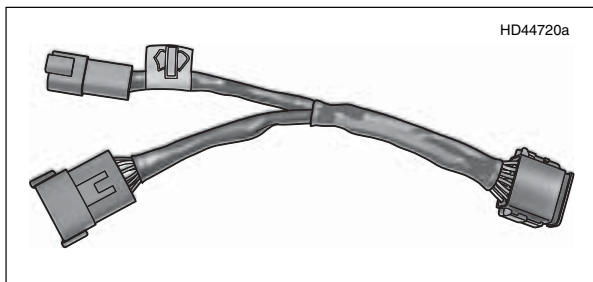 

**Part No. HD-44720 TSSM Adapter Cable**

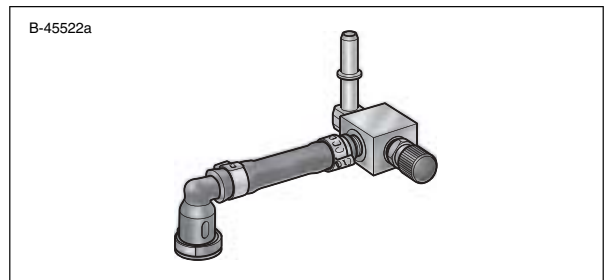 


**Part No. B-45522 Fuel Pressure Gauge Adapter**

B-45523




**Part No. B-45523 Valve Guide Reamer (7mm)**

 B-45676

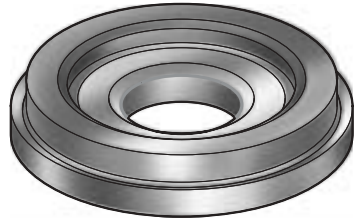


**Part No. B-45676 Sprocket Shaft Seal Installer**

 B-45524

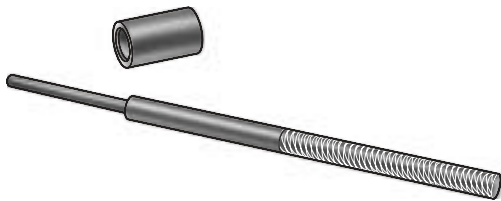

**Part No. B-45524 Valve Guide Installer**

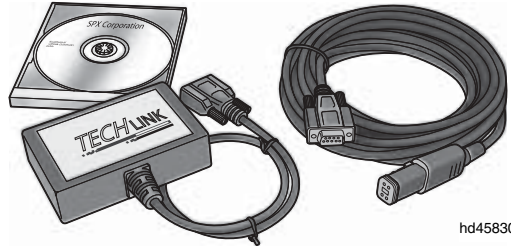 

hd45830a


**Part No. HD-45830 Techlink Kit**

B-45525




**Part No. B-45525 Valve Guide Hone**

 HD45835a

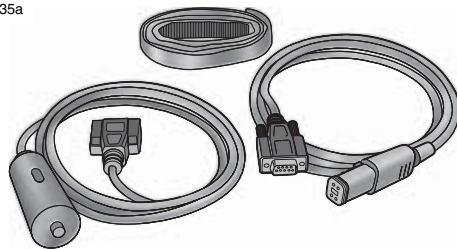

**Part No. HD-45835 Road Test Kit**

 b45657

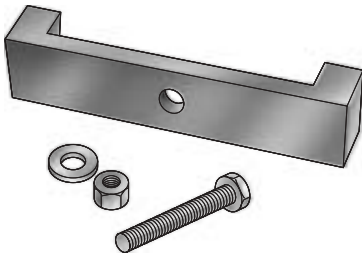


**Part No. B-45657 Fuel Pump Puller**


B43983



 
**Part No. B-45847 Cross Plate**

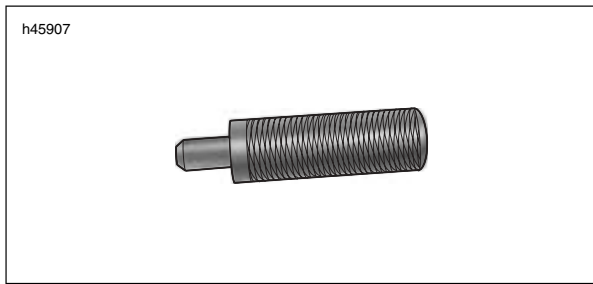


**Part No. HD-45907 4" Universal Driver Handle**

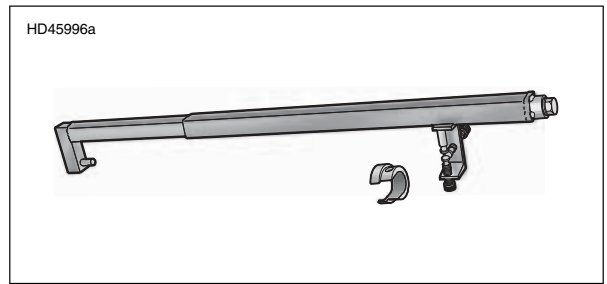 


**Part No. HD-45966 Front Fork Compressor**

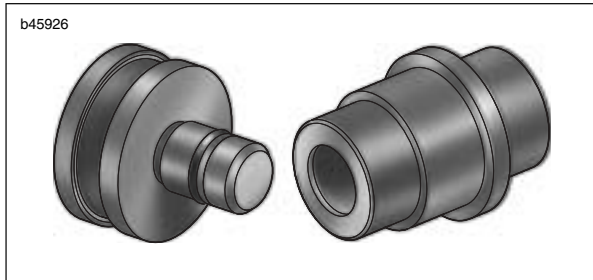 


**Part No. B-45926 Clutch Shell Bearing Remover**

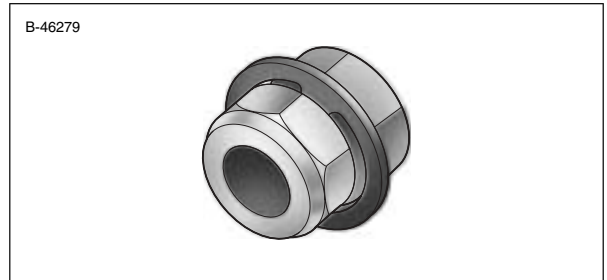 

**Part No. B-46279 7/8" Axle Wrench (Hex)**

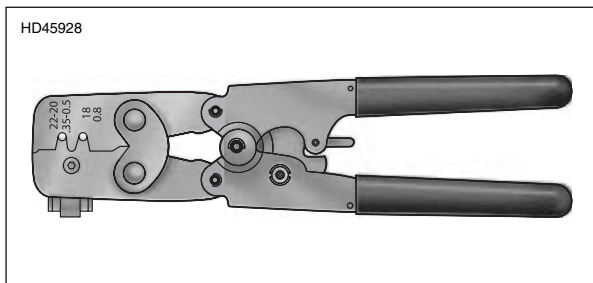 


**Part No. HD-45928 Terminal Crimper**

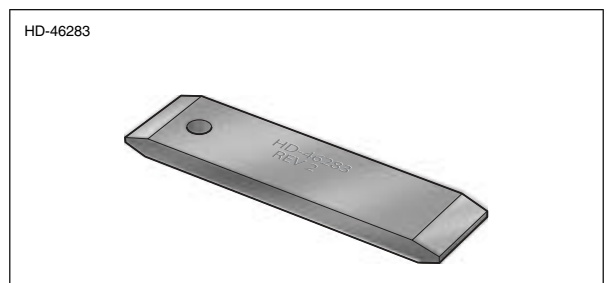 


**Part No. HD-46283 Primary Drive Locking Tool**



 
**Part No. HD-45929 Terminal Remover**

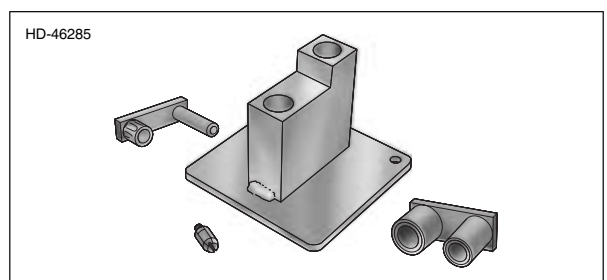


**Part No. HD-46285 Transmission Assembly Fixture**

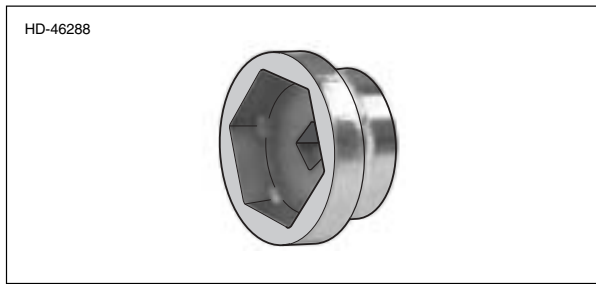 


**Part No. HD-46288 Mainshaft Locknut Wrench**

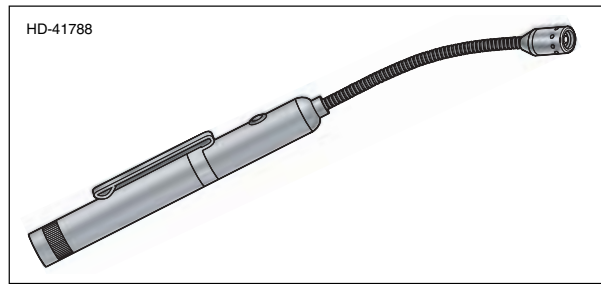 


**Part No. HD-41788 Technician Flex Light**

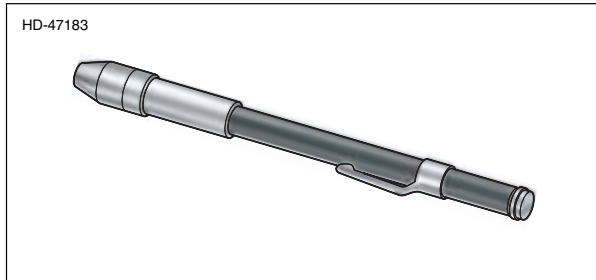 


**Part No. HD-47183 Leak Detector Penlight**

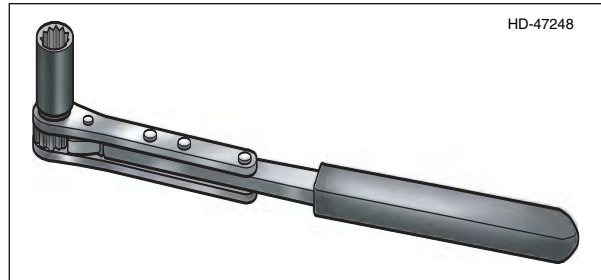 


**Part No. HD-47248 Rocker Housing Wrench**

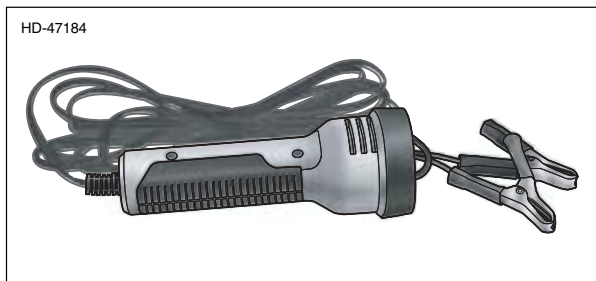 


**Part No. HD-47184 Leak Detector Flashlight**

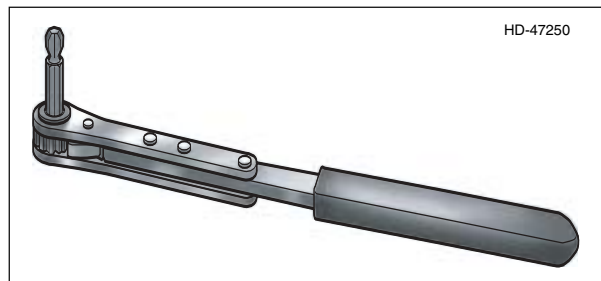 


**Part No. HD-47250 Intake Manifold Wrench**

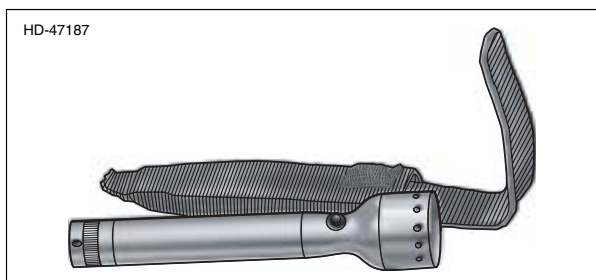 


**Part No. HD-47187 Technician Pen Light**

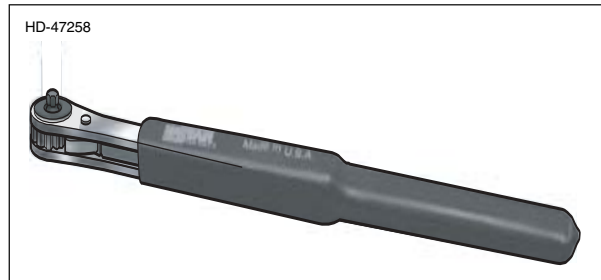 


**Part No. HD-47258 Rocker Cover Wrench**

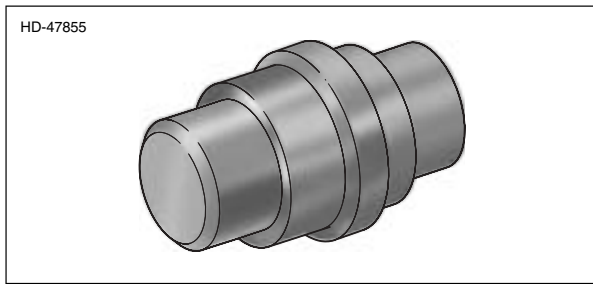 

 
**Part No. HD-47855 Main Drive Gear  
Needle Bearing Installer**

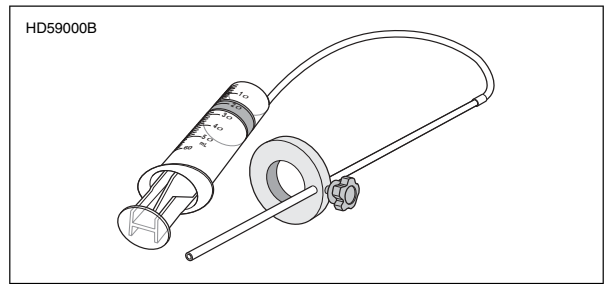


**Part No. B-59000-B Oil Level Gauge**

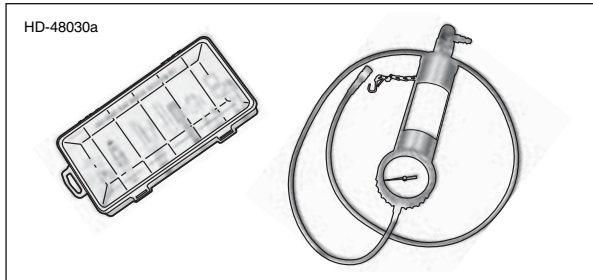 

 
**Part No. HD-48030 Fuel Injector Fitting and Canister  
Cleaner Kit**

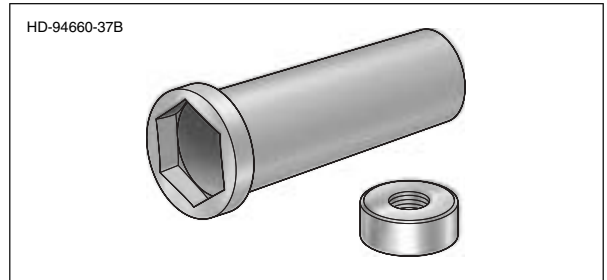


**Part No. HD-94660-37B Mainshaft Locknut Wrench**

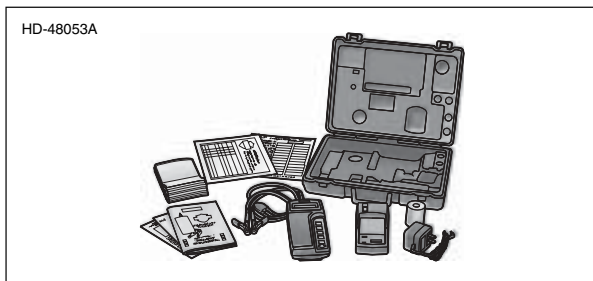 

 
**Part No. HD-48053 Advanced Battery Conductance  
and Electrical System Analyzer**

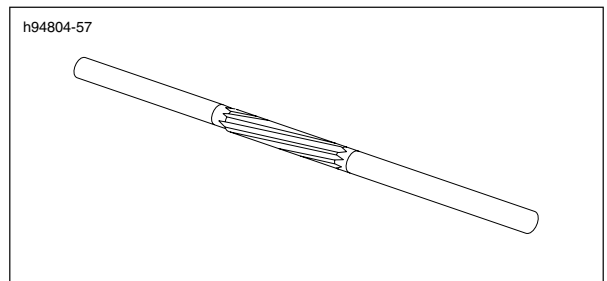


**Part No. HD-94804-57 Rocker Arm Bushing Reamer**

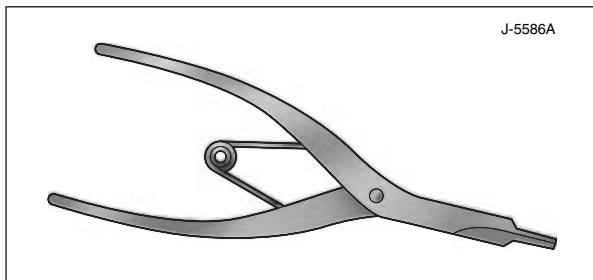 

 **Part No. J-5586 Transmission Shaft  
Retaining Ring Pliers**

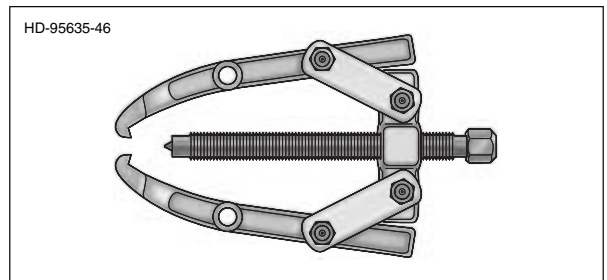


 **Part No. HD-95635-46 All-Purpose Claw Puller  
(use with HD-95637-46A)**

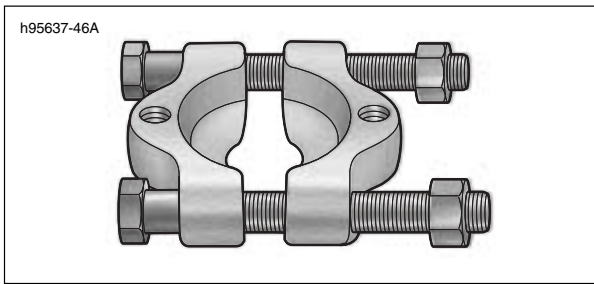


h95637-46A

 Part No. HD-95637-46A Wedge Attachment of Claw Puller  
(use with HD-95635-46)

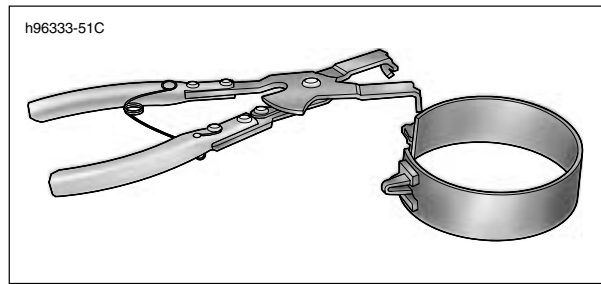


h96333-51C

 Part No. HD-96333-51E Piston Ring Compressing Tool

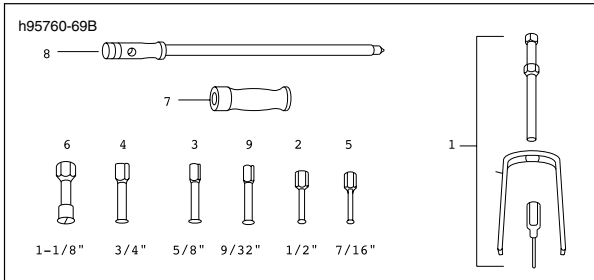


h95760-69B

 Part No. HD-95760-69A Bushing/Bearing Puller Tool Set.  
Set includes items 1-5 and 9. Items 6 (HD-95769-69), 7 (HD-95770-69) and 8 (HD-95771-69) are optional.

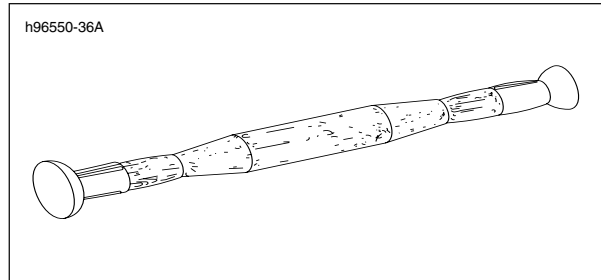


h96550-36A

 Part No. HD-96550-36B Valve Lapping Tool

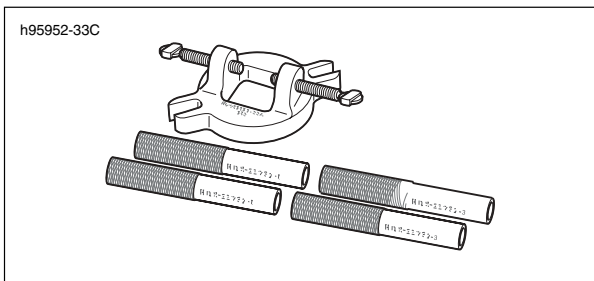


h95952-33C

 Part No. HD-95952-33C Connecting Rod Clamping Tool

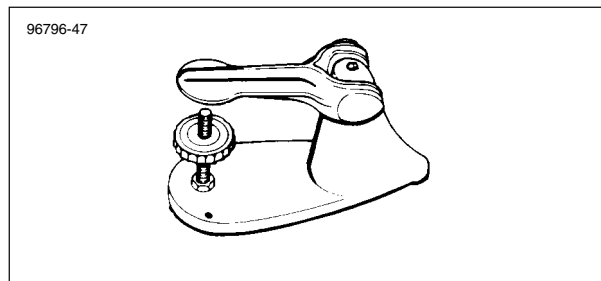


96796-47

 Part No. HD-96796 Valve Spring Test Fixture

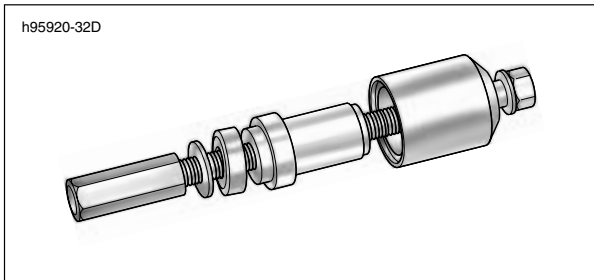


h95920-32D

 Part No. HD-95970-32D Piston Pin Bushing Tool

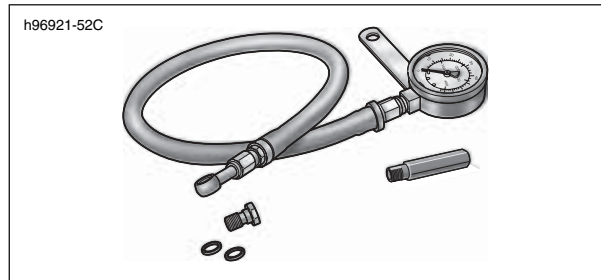

h96921-52C

 Part No. HD-96921-52B

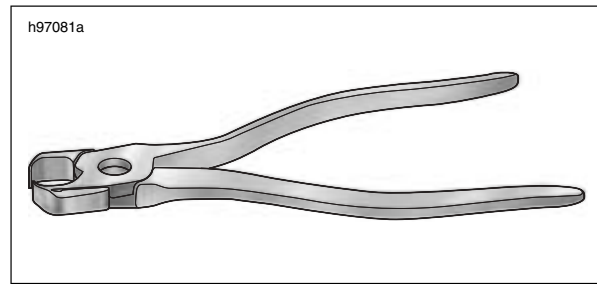

**Part No. HD97097-65B Hose Clamp Pliers**



**Part No. HD-99500-80 Wheel Truing & Balancing Stand**

# NOTES

---