




**Part No. B-41174 Rear Wheel Support Stand and  
Part No. B-41174-2 Replacement Pad**

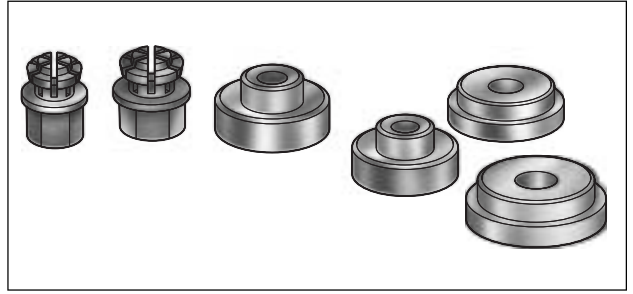


**Part No. B-43993-7/-8 Wheel Bearing Collets**

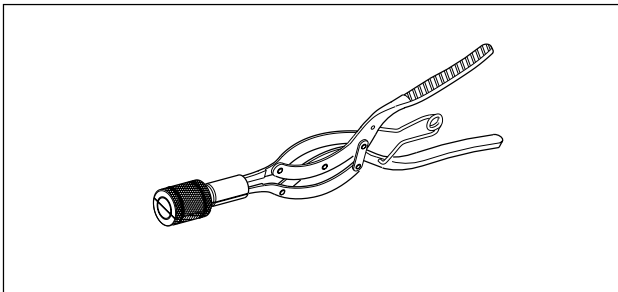


**Part No. B-42887 Brake Caliper Piston Remover**

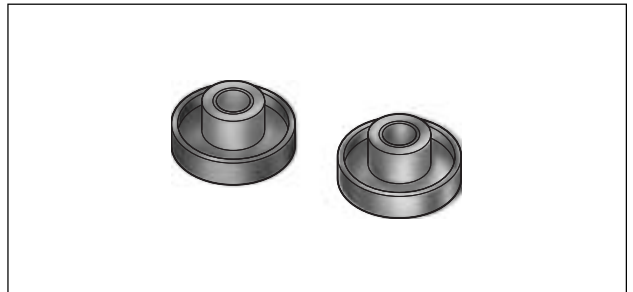


**Part No. B-45521 Steering Head Bearing Remover/  
Installer**

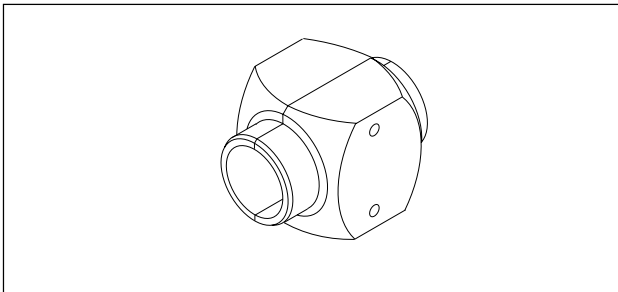


**Part No. B-43721 Front Fork Seal Driver**

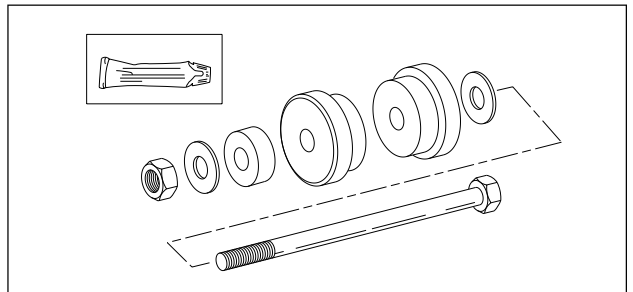


**Part No. HD-39302 Steering Head Bearing Race Installer  
(Used with B-45521)**

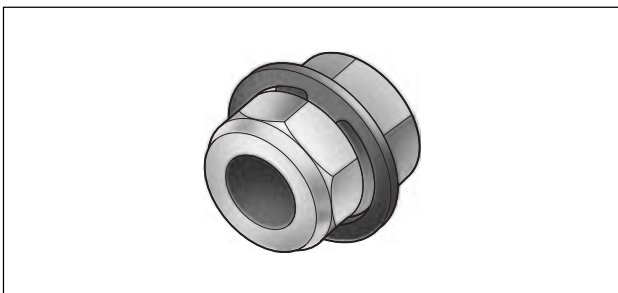


**Part No. B-46279 7/8" Axle Wrench (Hex)**

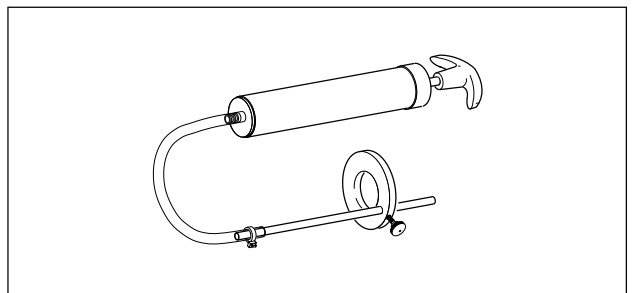


**Part No. B-59000B Pro Level Oil Gauge**

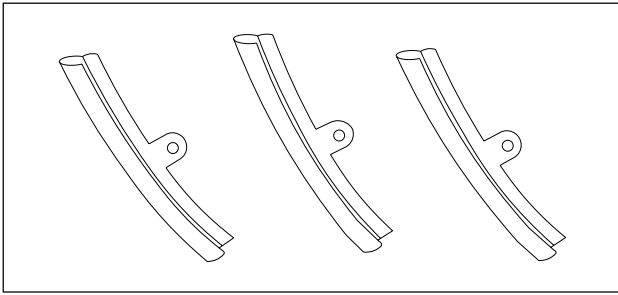


**Part No. HD-01289 Rim Protectors**

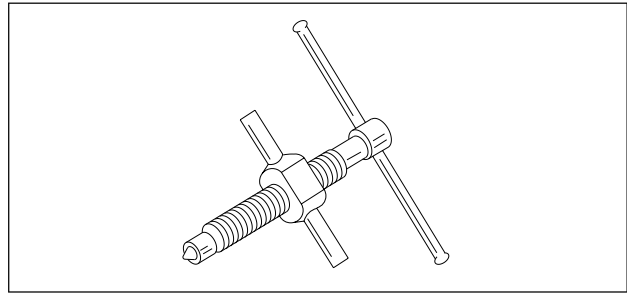


**Part No. HD-33418 Universal Puller Forcing Screw**

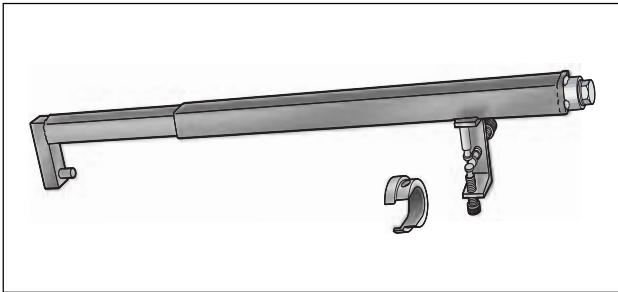


**Part No. HD-45966 Fork Spring Compressing Tool**

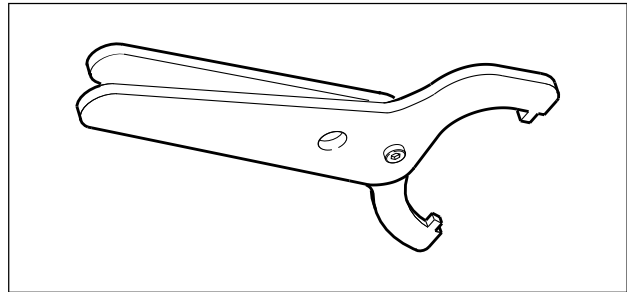


**Part No. HD-94700-52C Shock Spanner Preload Adjustment Tool**

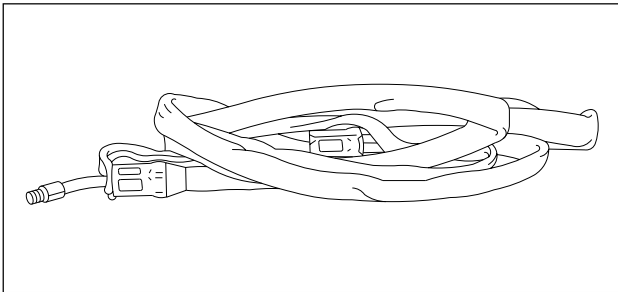


**Part No. HD-28700 Tire Bead Expander**

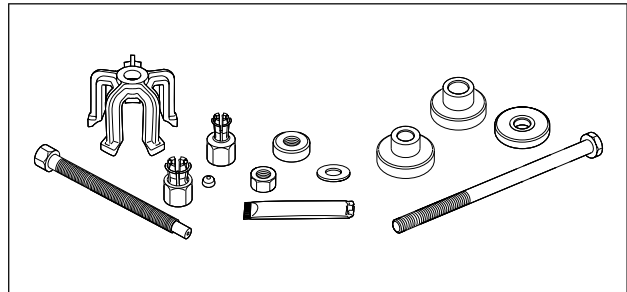


**Part No. HD-44060 Wheel Bearing Remover/Installer**

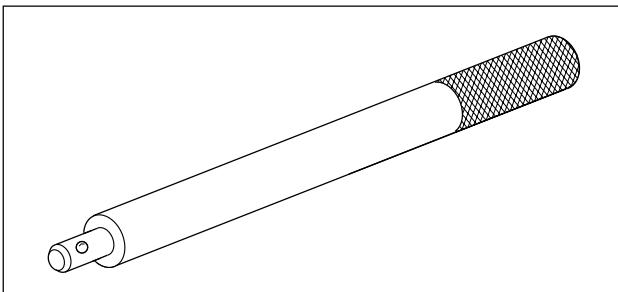


**Part No. HD-33416 Universal Driver Handle**

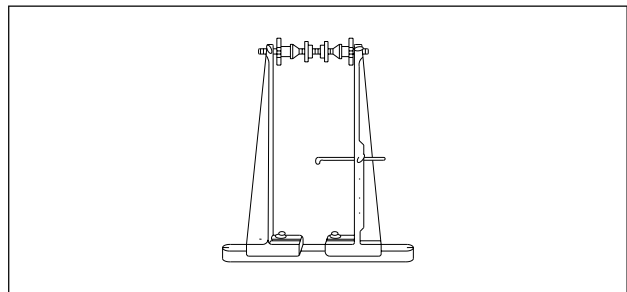


**Part No. HD-99500-80 Wheel Truing and Balancing Stand**

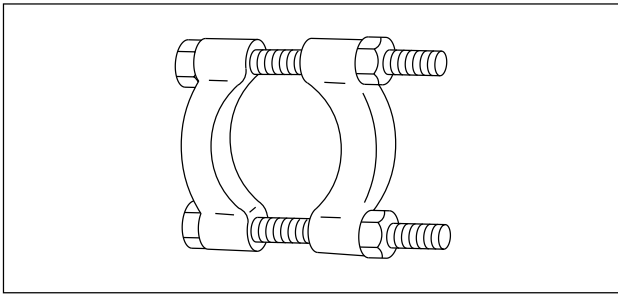


**Part No. HD-95637-46A Wedge Attachment for Claw Puller. Use with HD-95635-46.**

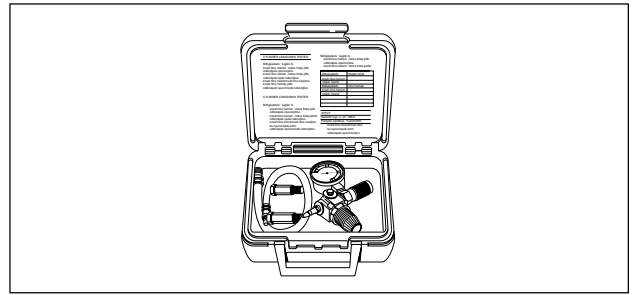


**Part No. HD-35667A Cylinder Leakdown Tester**

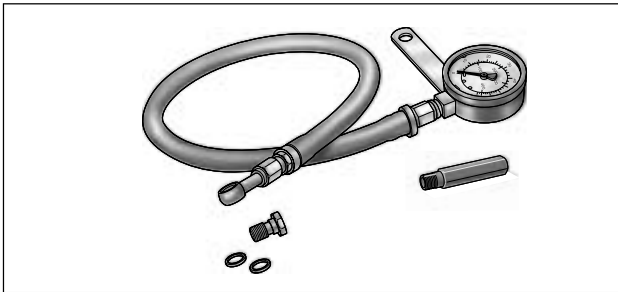


**Part No. HD-96921-52A Oil Pressure Gauge**

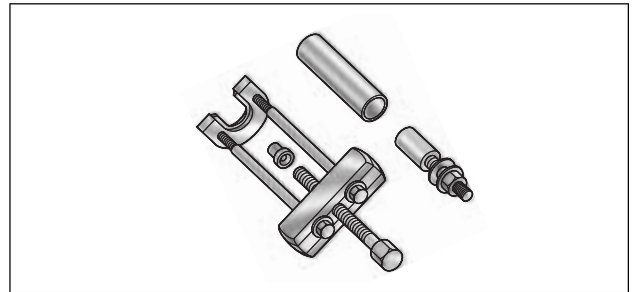


**Part No. HD-34902-B Bearing Race Remover/Installer**

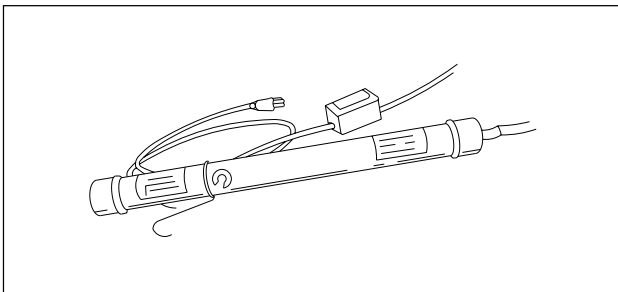


**Part No. HD-35457 Black Light Leak Detector**

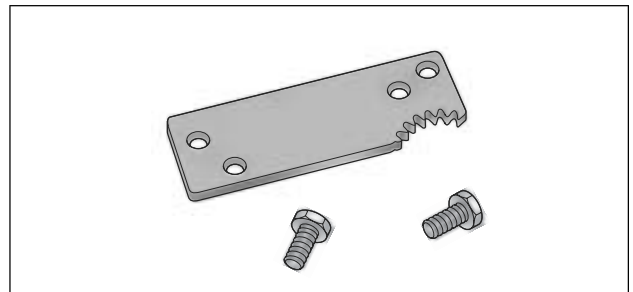


**Part No. HD-43984 Crankshaft Locking Tool**

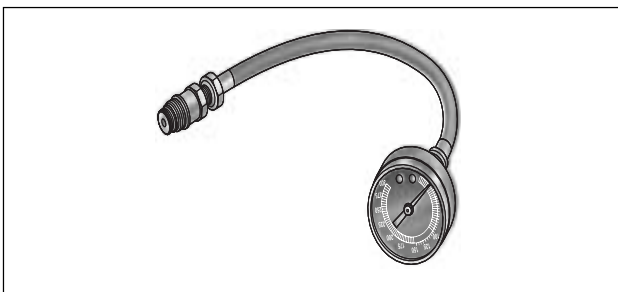


**Part No. HD-33223-1 Cylinder Compression Gauge**

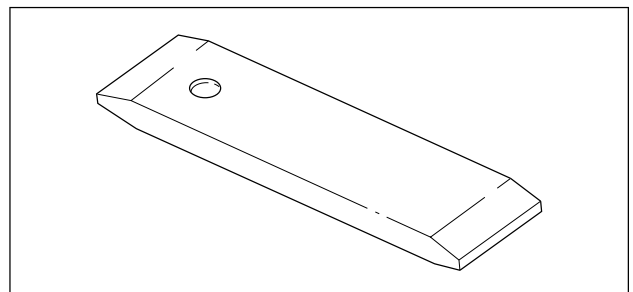


**Part No. HD-38362 Sprocket Locking Link (XB9 Models)  
Part No. HD-46283 Sprocket Locking Link (XB12 Models)**

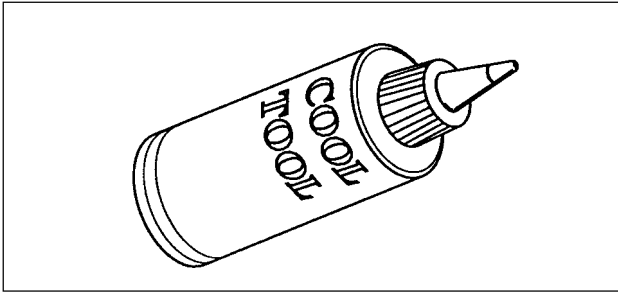


**Part No. HD-39964 Reamer Lubricant (Cool Tool)**

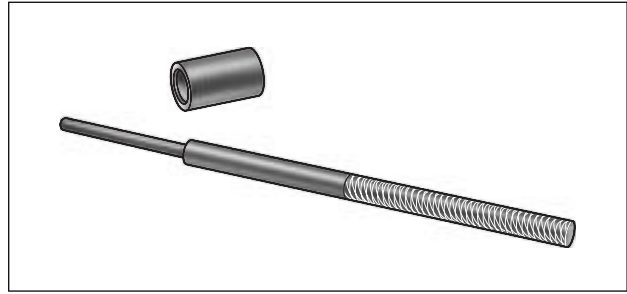


**Part No. B-45524 Valve Guide Installer**

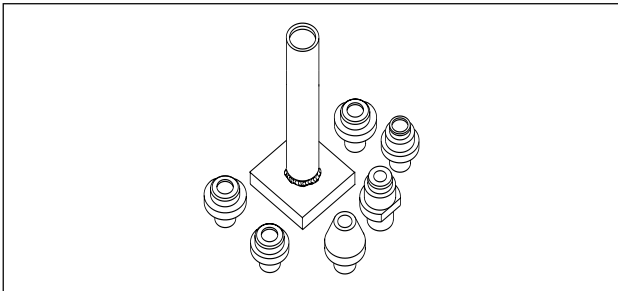


**Part No. HD-39782 Cylinder Head Support**

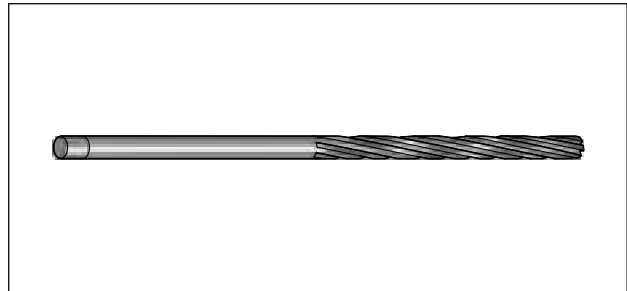


**Part No. B-45523 Valve Guide Reamer (7mm)**

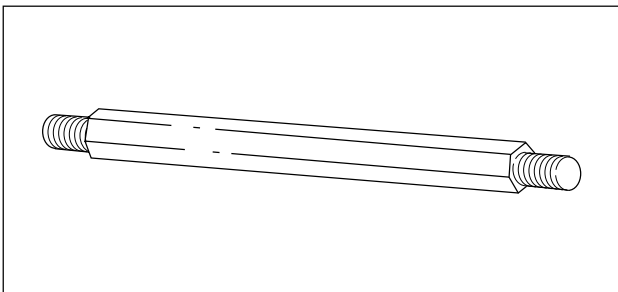


**Part No. HD-39786 Cylinder Head Holding Fixture**

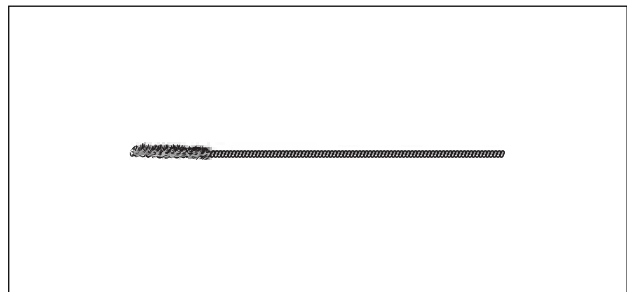


**Part No. B-45525 Valve Guide Hone**

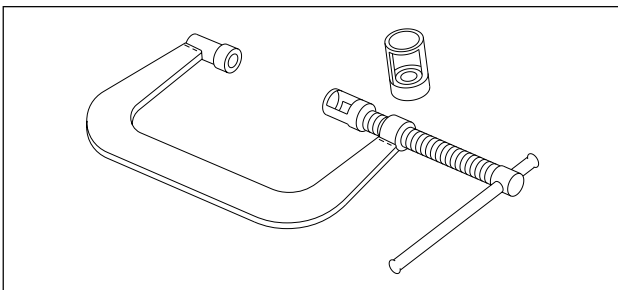


**Part No. HD-34736B Valve Spring Compressor**

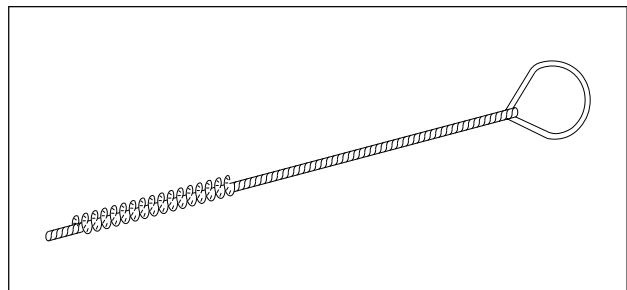


**Part No. HD-34751 Nylon Valve Guide Brush**

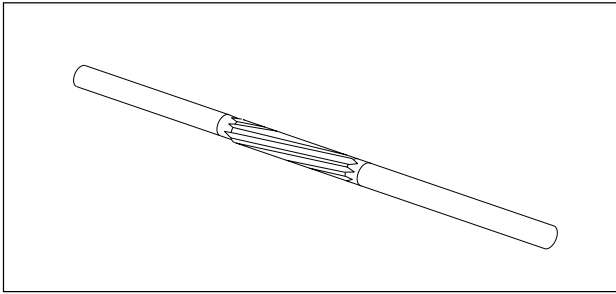


**Part No. HD-94804-57 Rocker Arm Bushing Reamer**

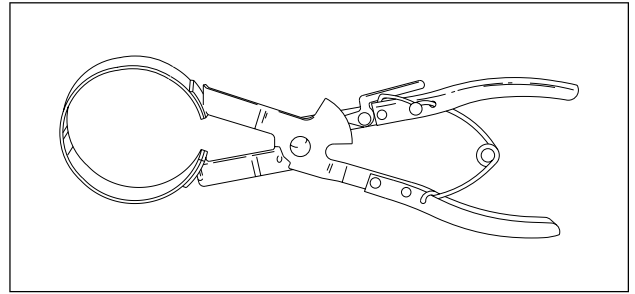


**Part No. HD-96333-51C Piston Ring Compressor**

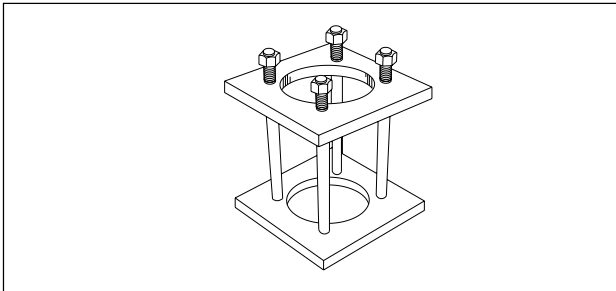


**Part No. HD-33446A Cylinder Torque Plates  
and Torque Plate Bolts Part No. HD-33446-86**

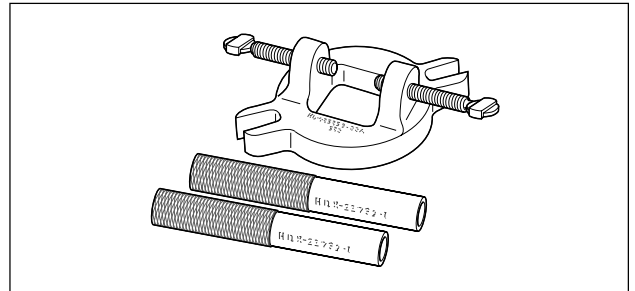


**Part No. HD-95952-33B Connecting Rod  
Clamping Tool**

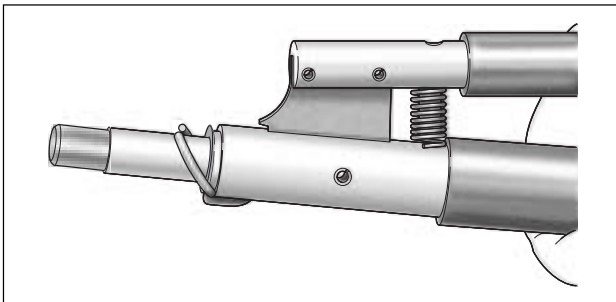


**Part No. HD-34623C Piston Pin  
Retaining Ring Installer/Remover**

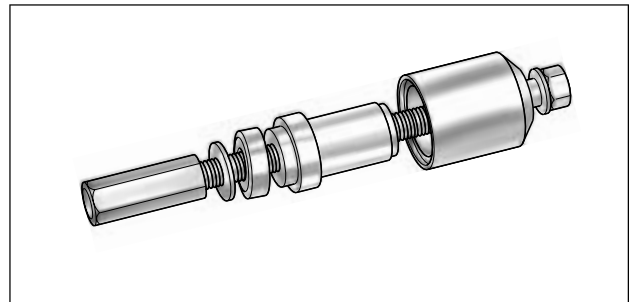


**Part No. HD-95970-32D Piston Pin Bushing Tool**

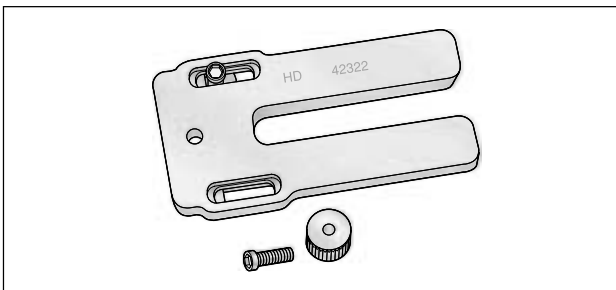


**Part No. HD-42322 Piston Support Plate**

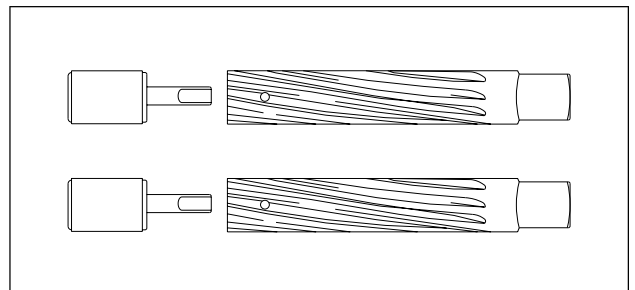


**Part No. HD-94800-26A Connecting Rod Bushing  
Reamers and Pilots**

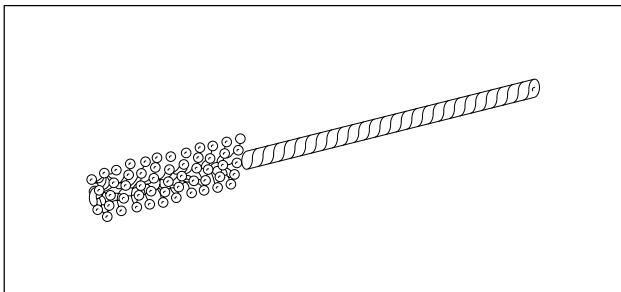


**Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)**

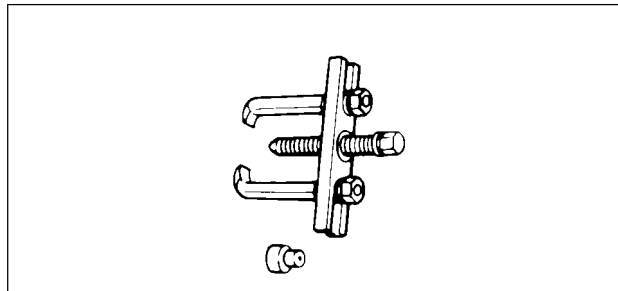


**Part No. HD-97292-61 Two Claw Puller**

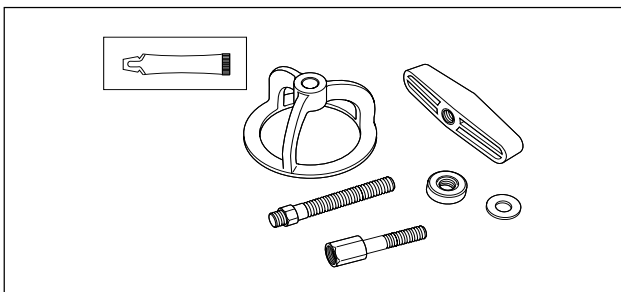


**Part No. HD-38515-A Clutch Spring Compressing Tool and Part No. HD-38515-91 Forcing Screw**

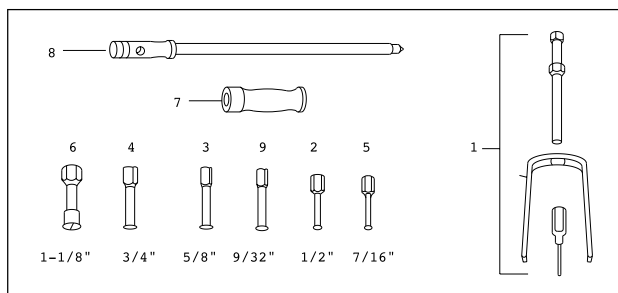


**Part No. HD-95760-69A Bushing/Bearing Puller Tool Set. Set includes items 1-7. Items 8 (HD-95769-69), 9 (HD-95770-69) and 10 (HD-95771-69) are optional.**

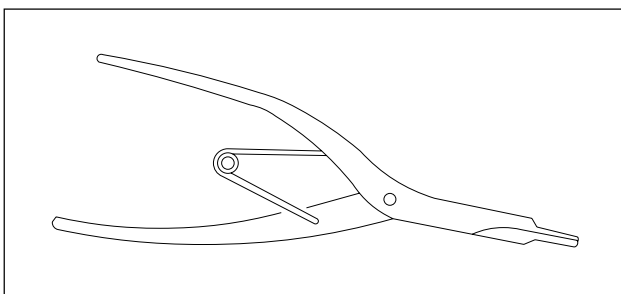

**Part No. J-5586 Transmission Shaft Retaining Ring Pliers**

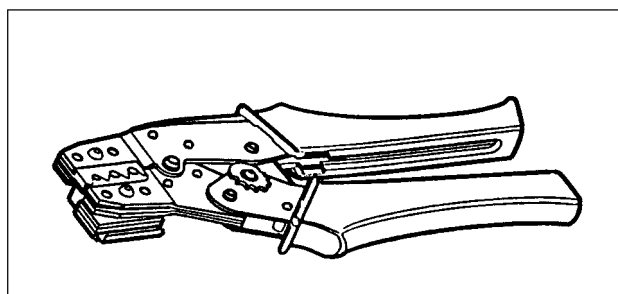


**Part No. HD-39965 Deutsch Terminal Crimp Tool**

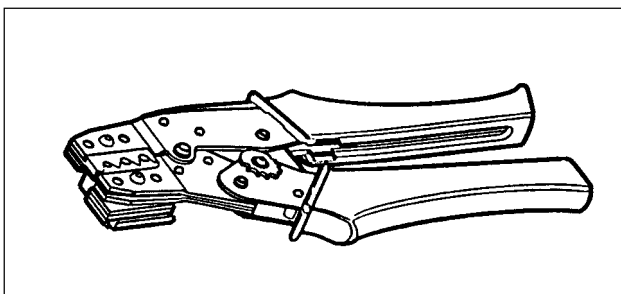

**Part No. HD-41609 Amp Terminal Crimp Tool**




**Part No. HD-41354 Speedometer Tester**

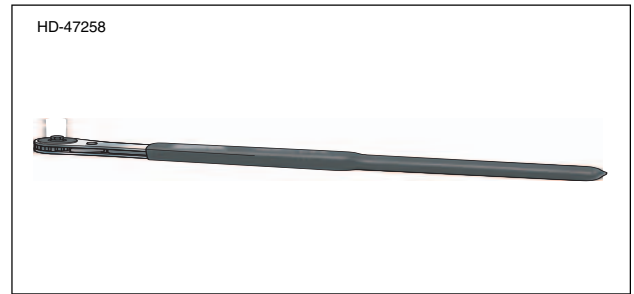


HD-47258

**Part No. HD-47258 Rocker Cover Wrench**

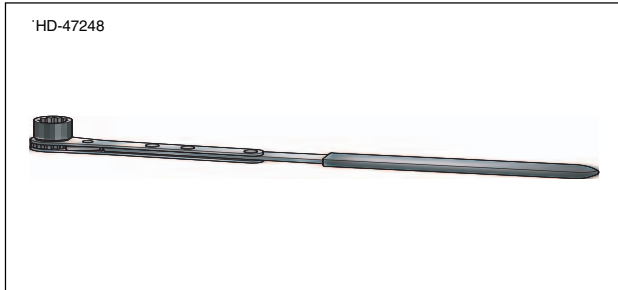

HD-47248

**Part No. HD-47248 Rocker Housing Wrench**

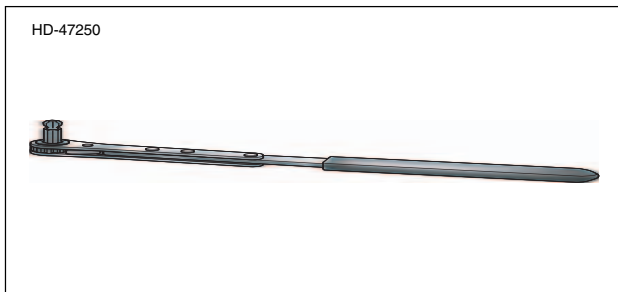

HD-47250

**Part No. HD-47250 Intake Manifold Wrench**

# NOTES

---