

HOSE AND WIRE ROUTING

D.1

b1114xasx

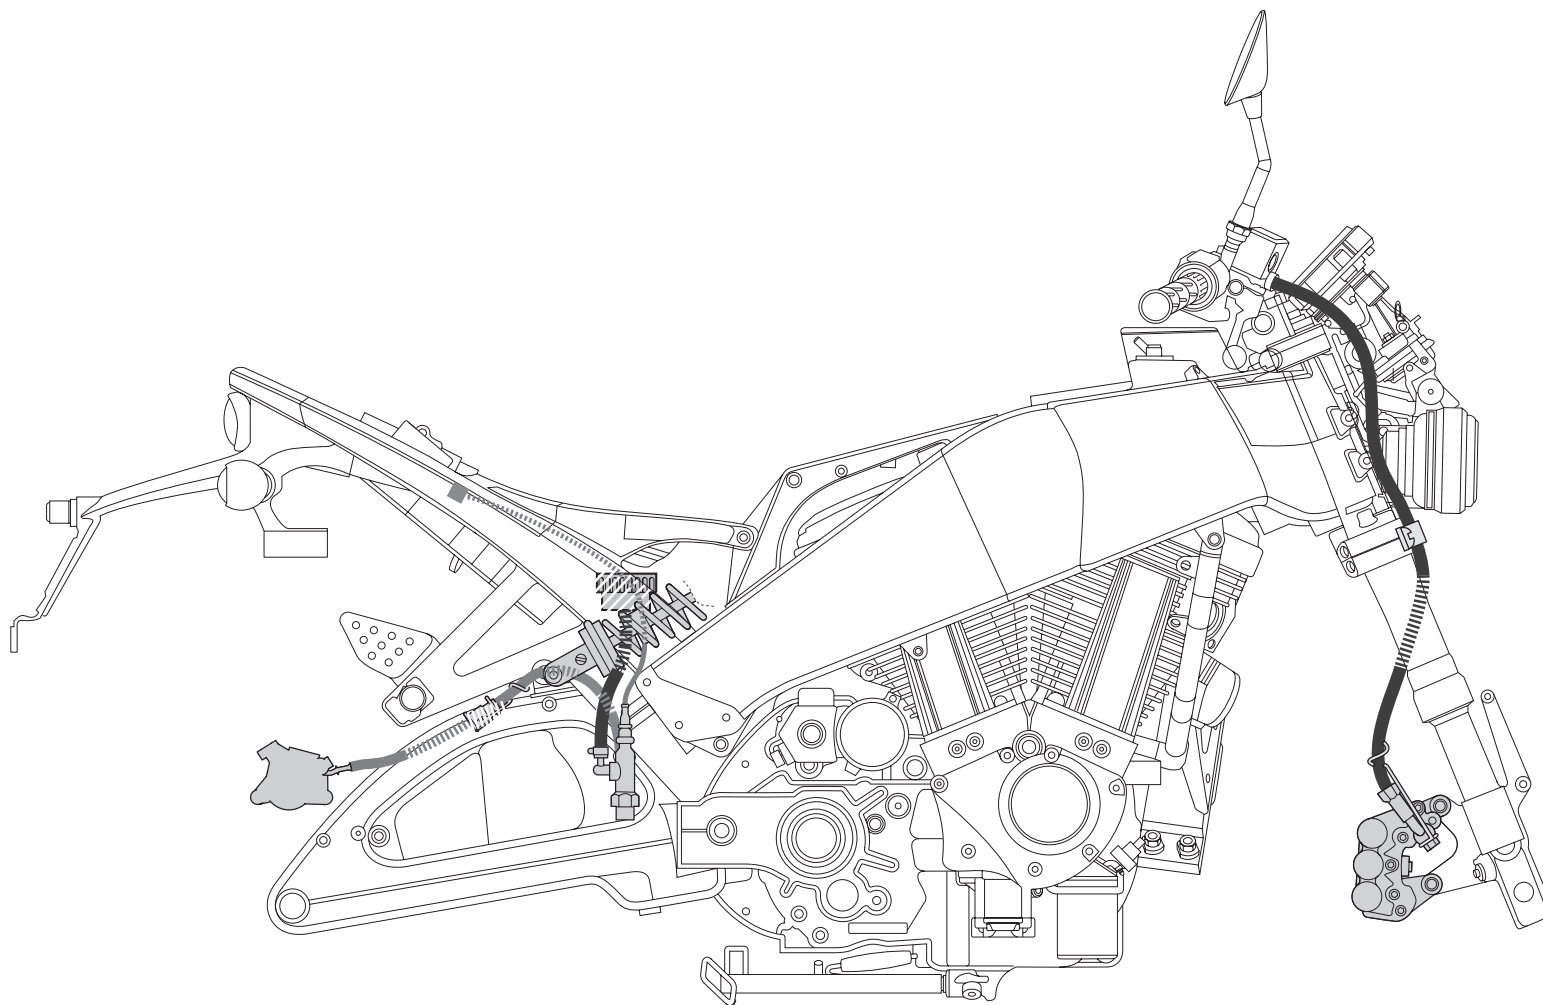


Figure D-1. Front and Rear Brake Systems, Right Side View

b1115xbsx

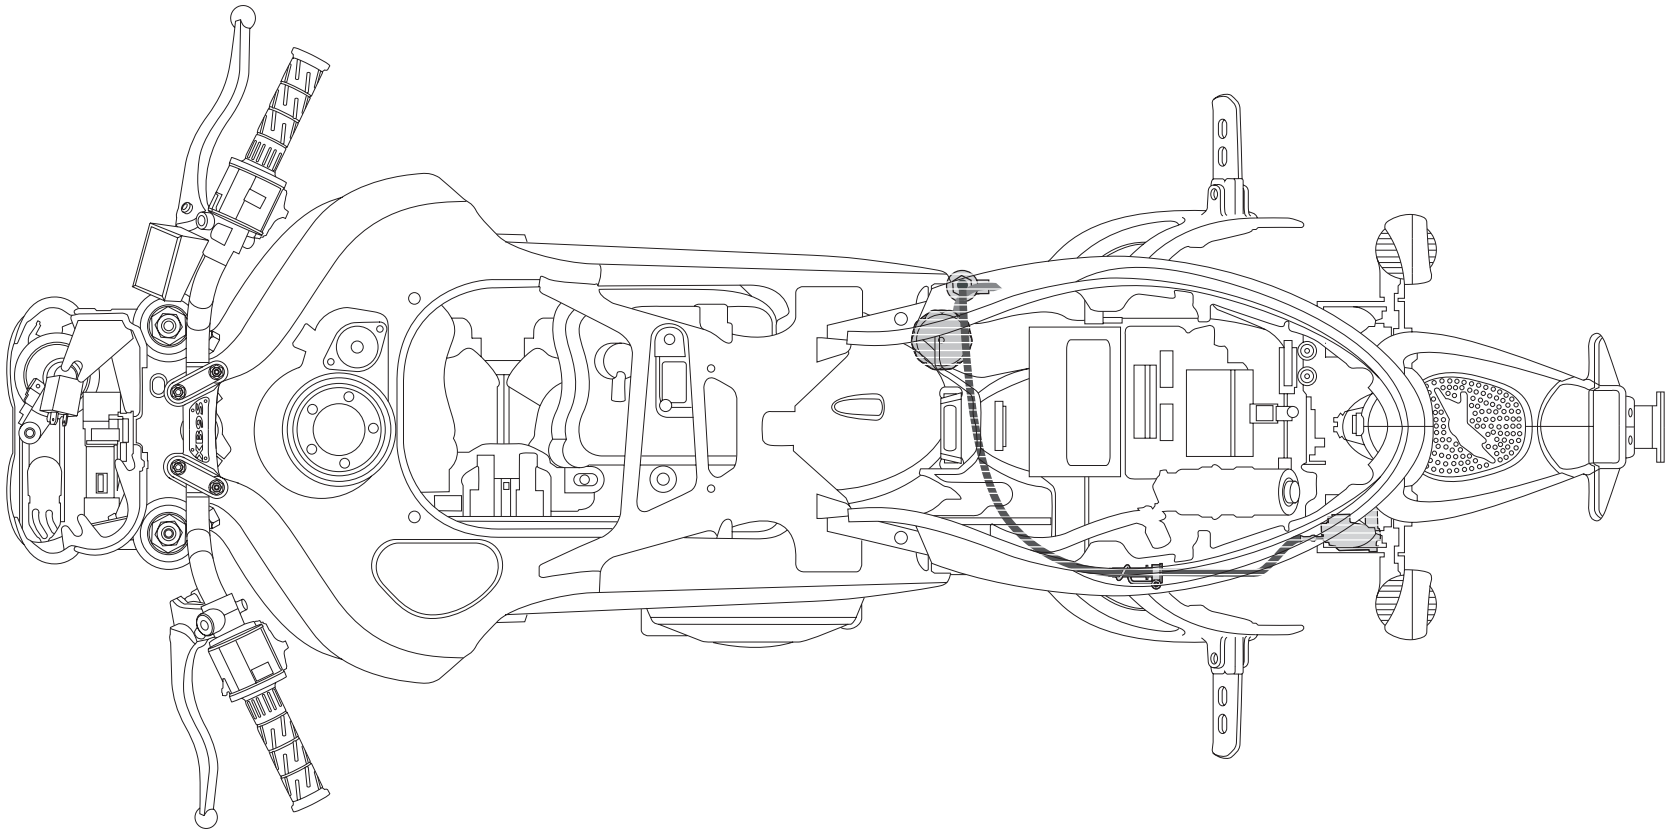


Figure D-2. Rear Brake Systems, Top View

b1116xcsx

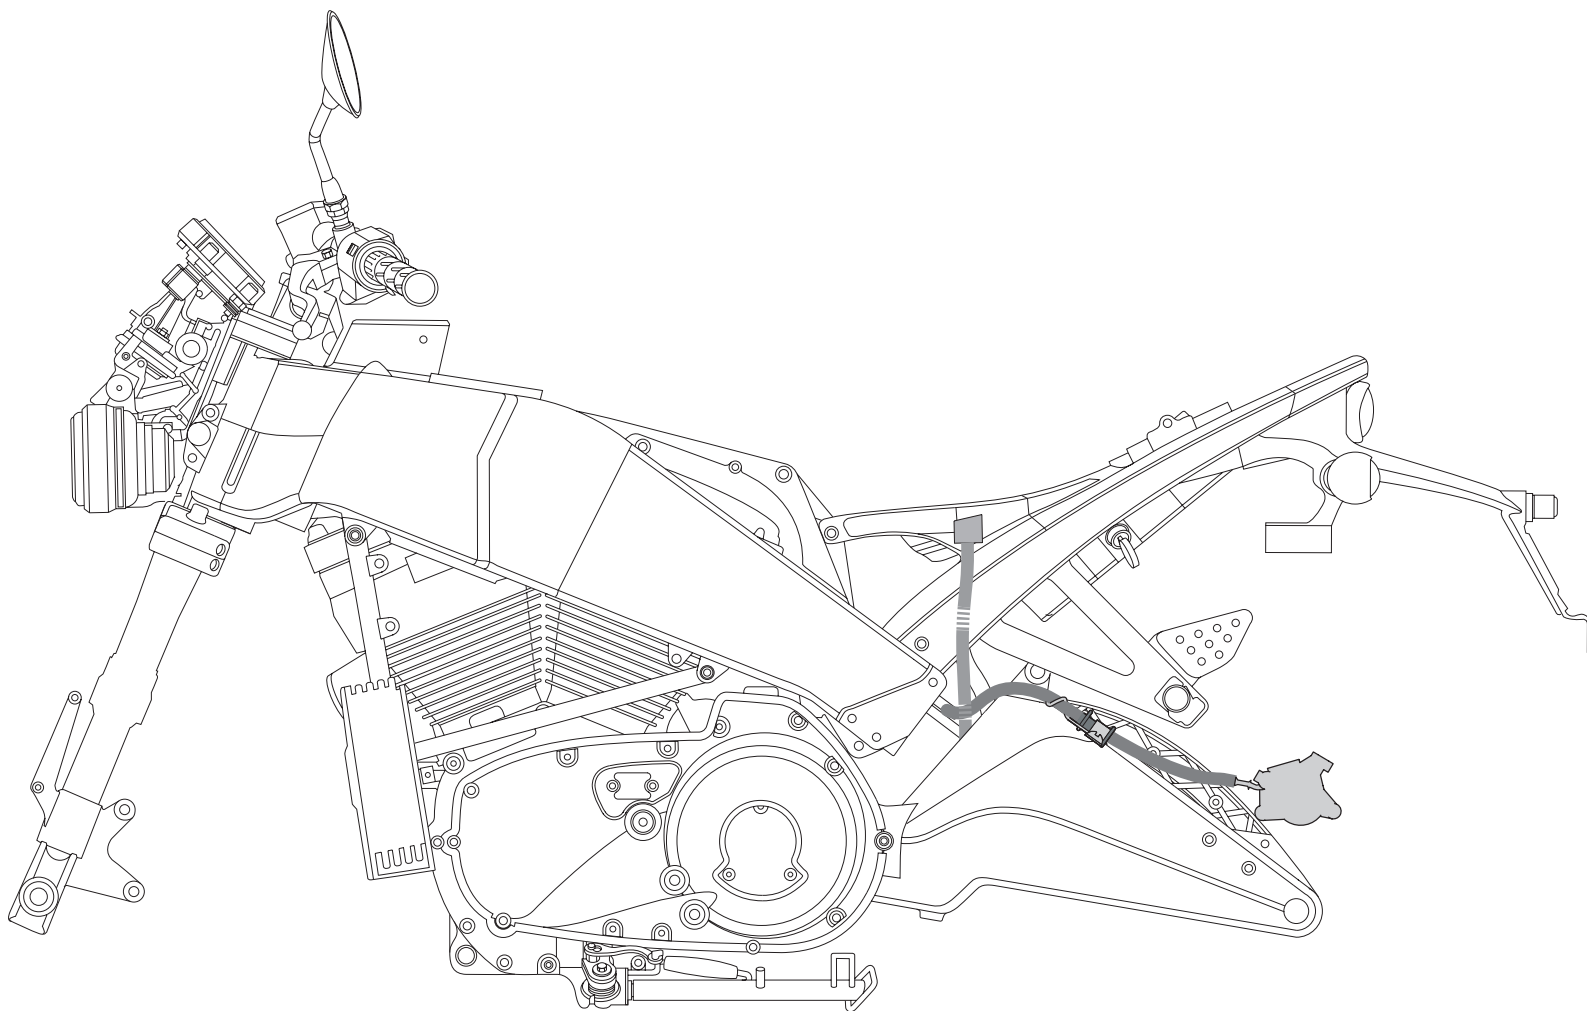


Figure D-3. Rear Brake Systems, Left Side View

b1117xasx


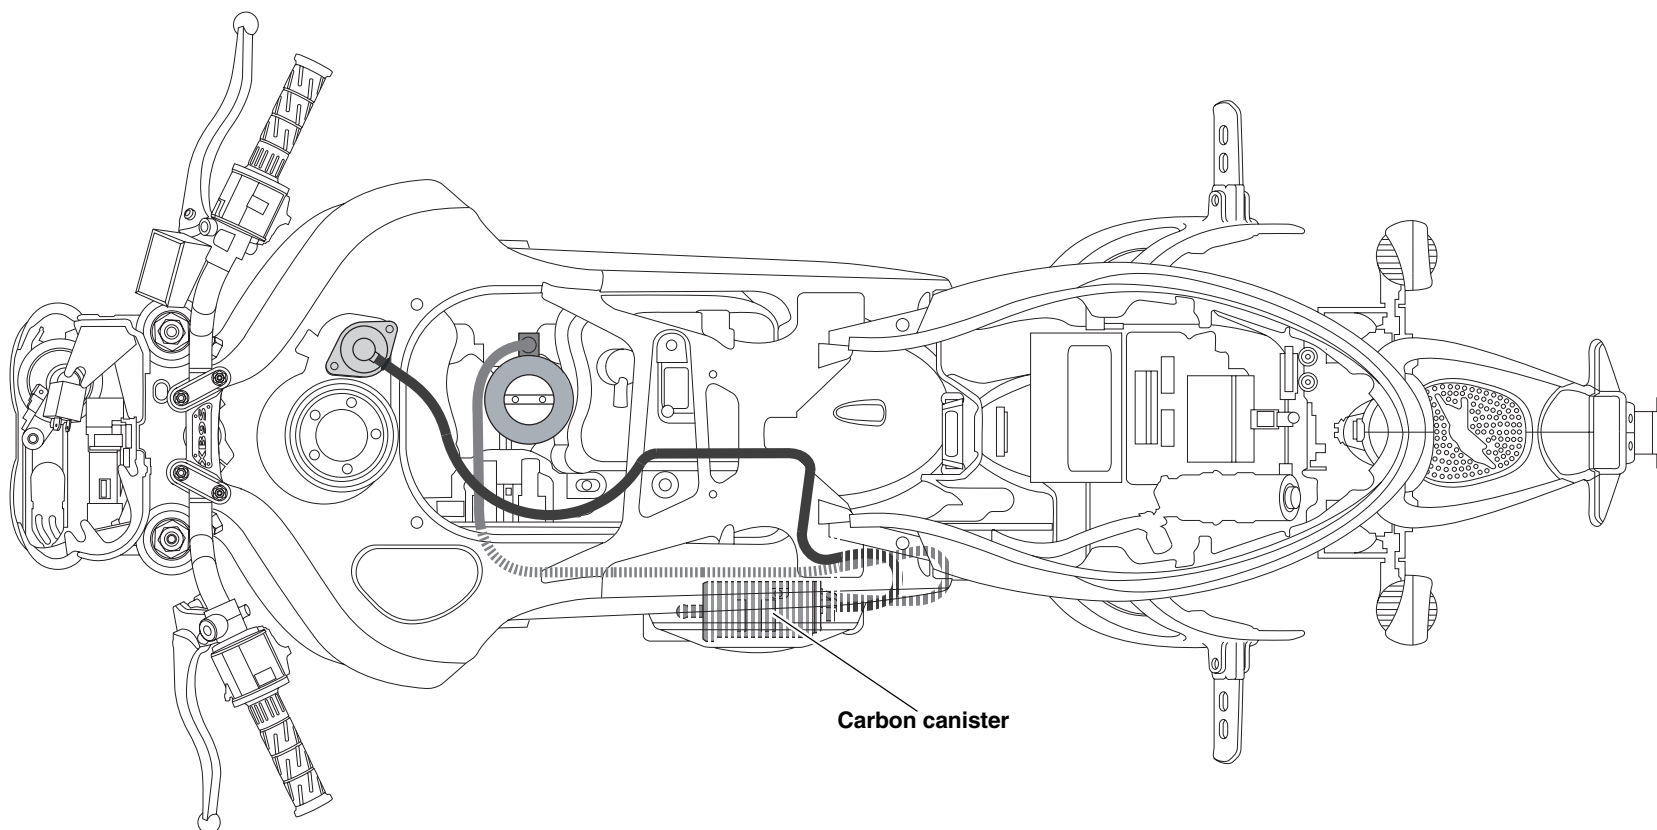


Figure D-4. Evaporative Emissions Control, California Models, Top View

b1118xbx

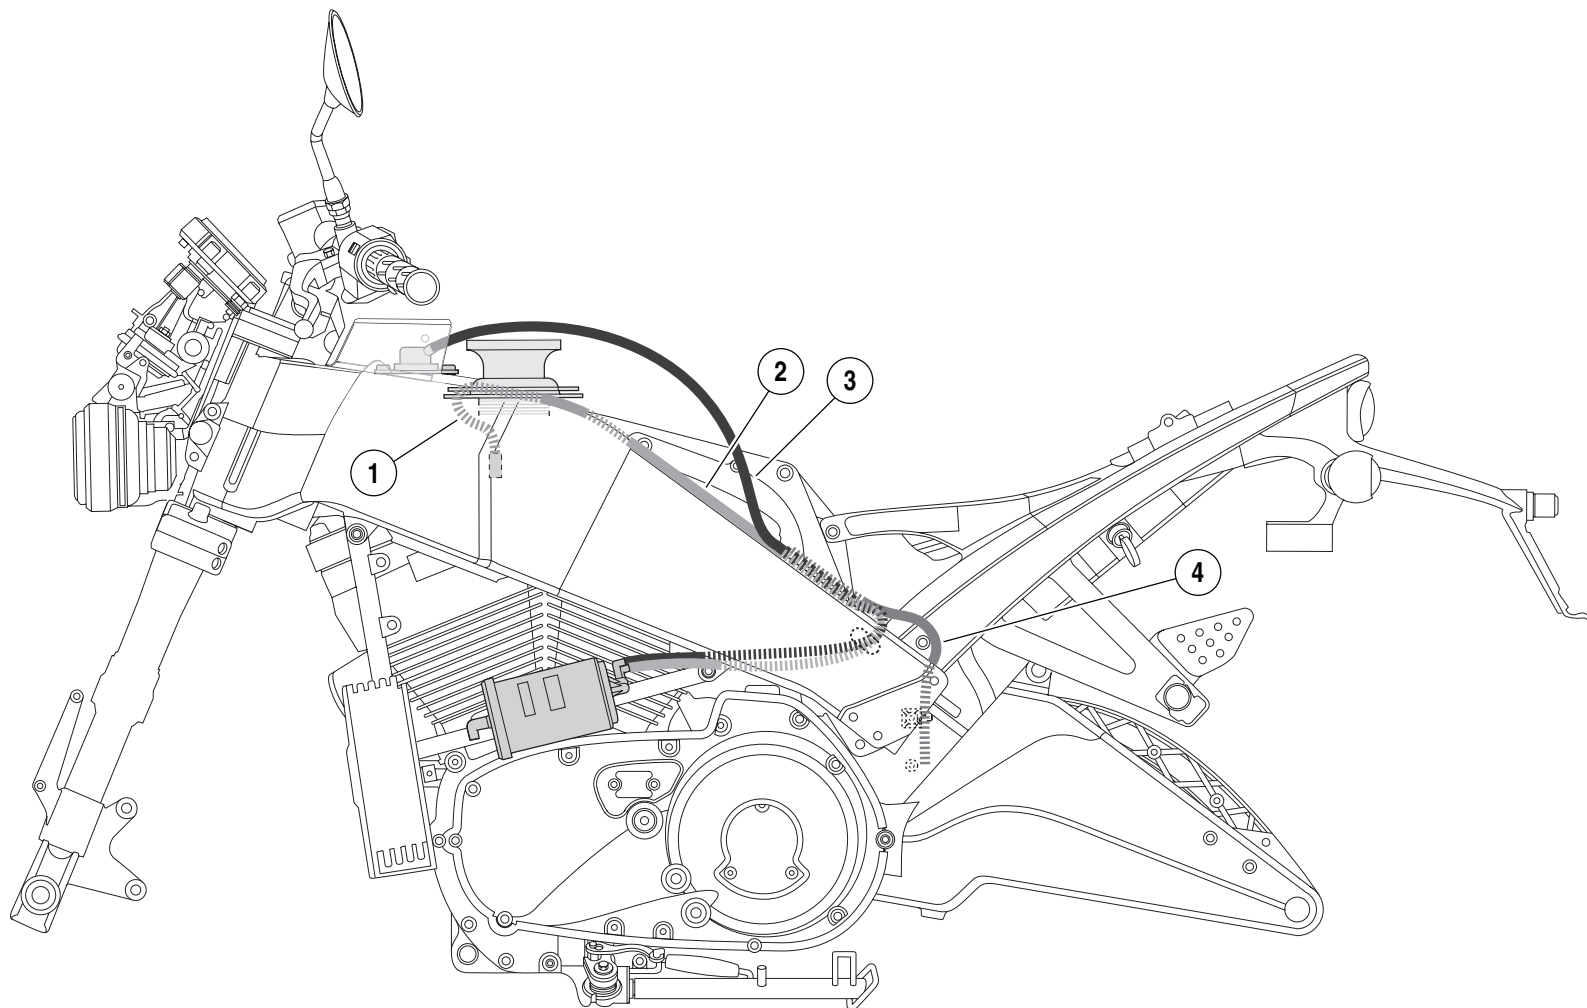


- 1. To induction module
- 2. From induction module (California)

- 3. From fuel tank (California)
- 4. From fuel tank to atmosphere (49 state)

Figure D-5. Evaporative Emissions Control, California and 49 State Models, Left Side View

b1119xasx

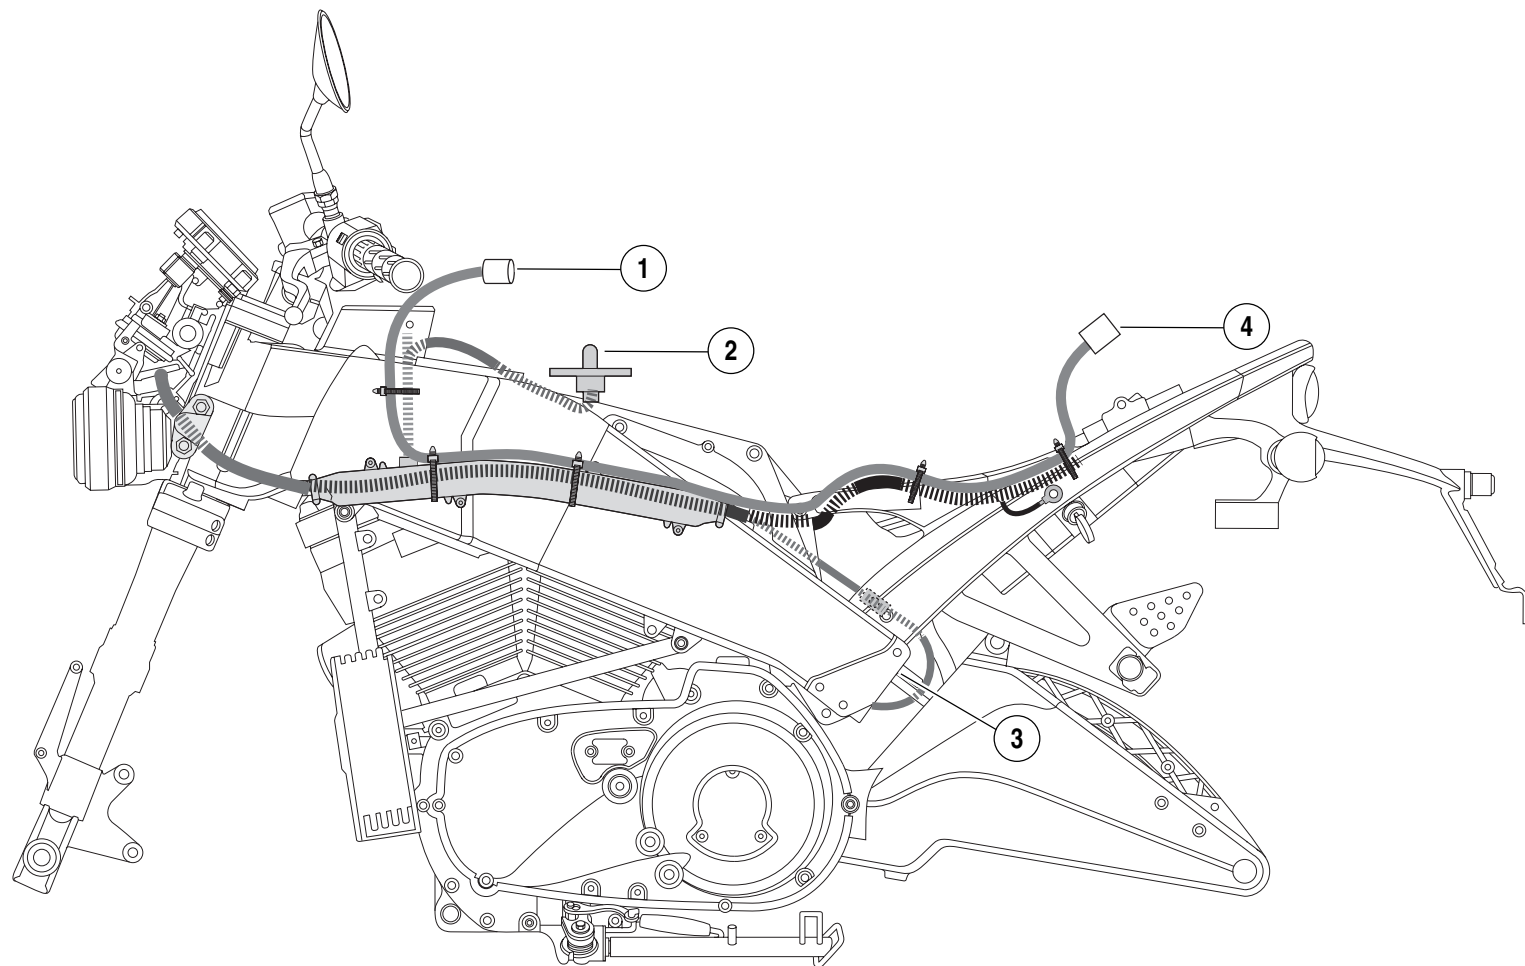


- 1. To active intake solenoid (Japan only)
- 2. Intake air temperature sensor (IAT)

- 3. Fuel pump
- 4. Active intake to ECM (Japan only)

Figure D-6. Wiring Harness, Left Side View

b1120xbsx

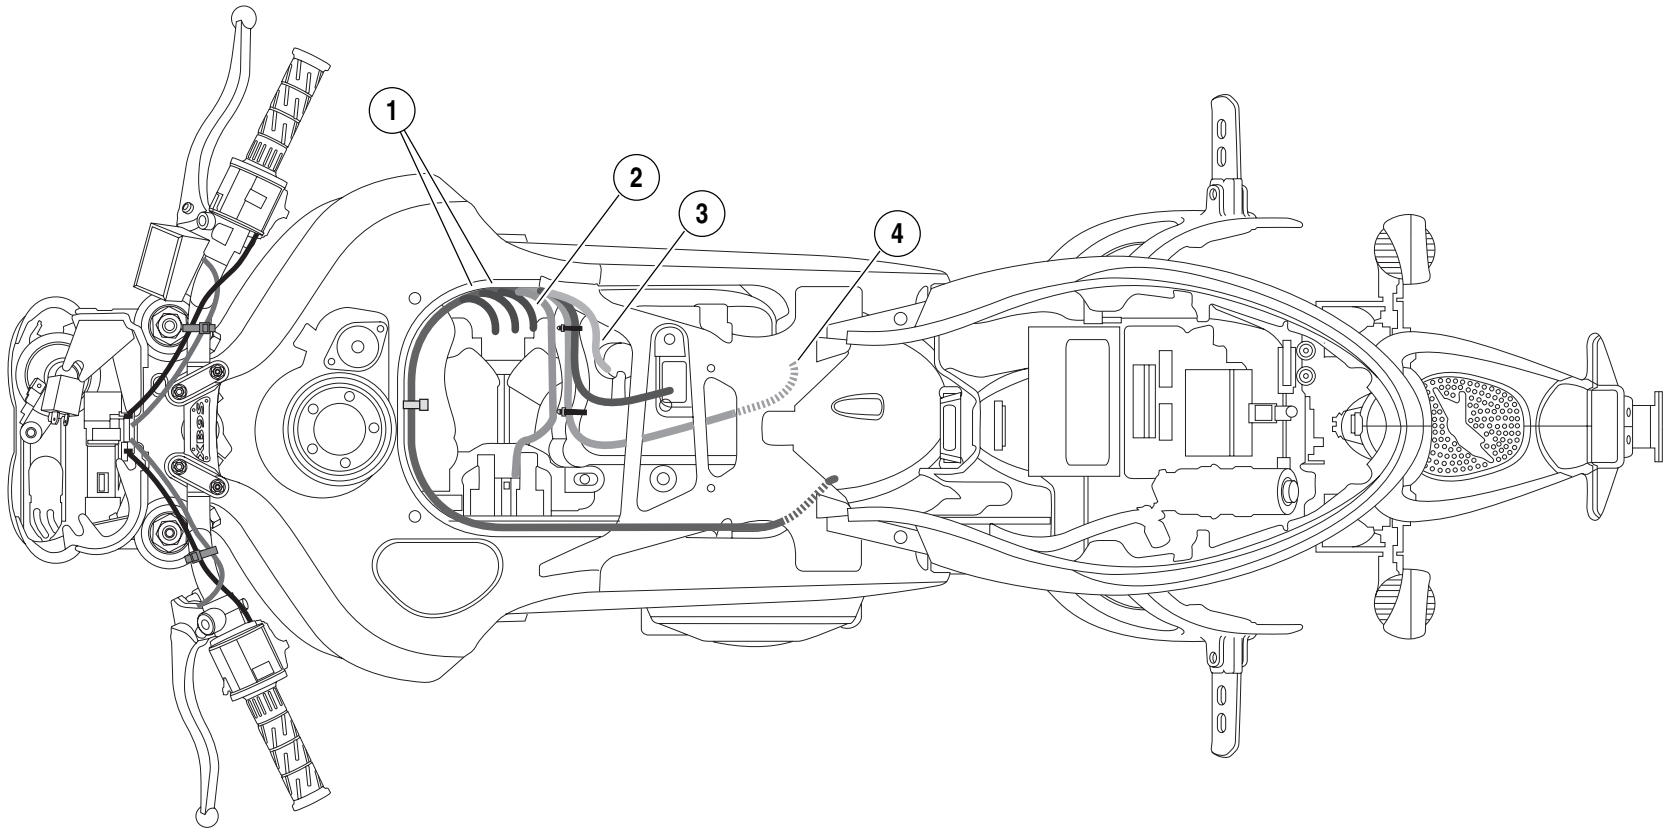

- 1. Fuel injector (2)
- 2. Throttle position sensor (TPS)

- 3. Intake air temperature (IAT) sensor
- 4. Oxygen (O2) sensor

Figure D-7. Wiring Harness, Top View

b1121xcsx


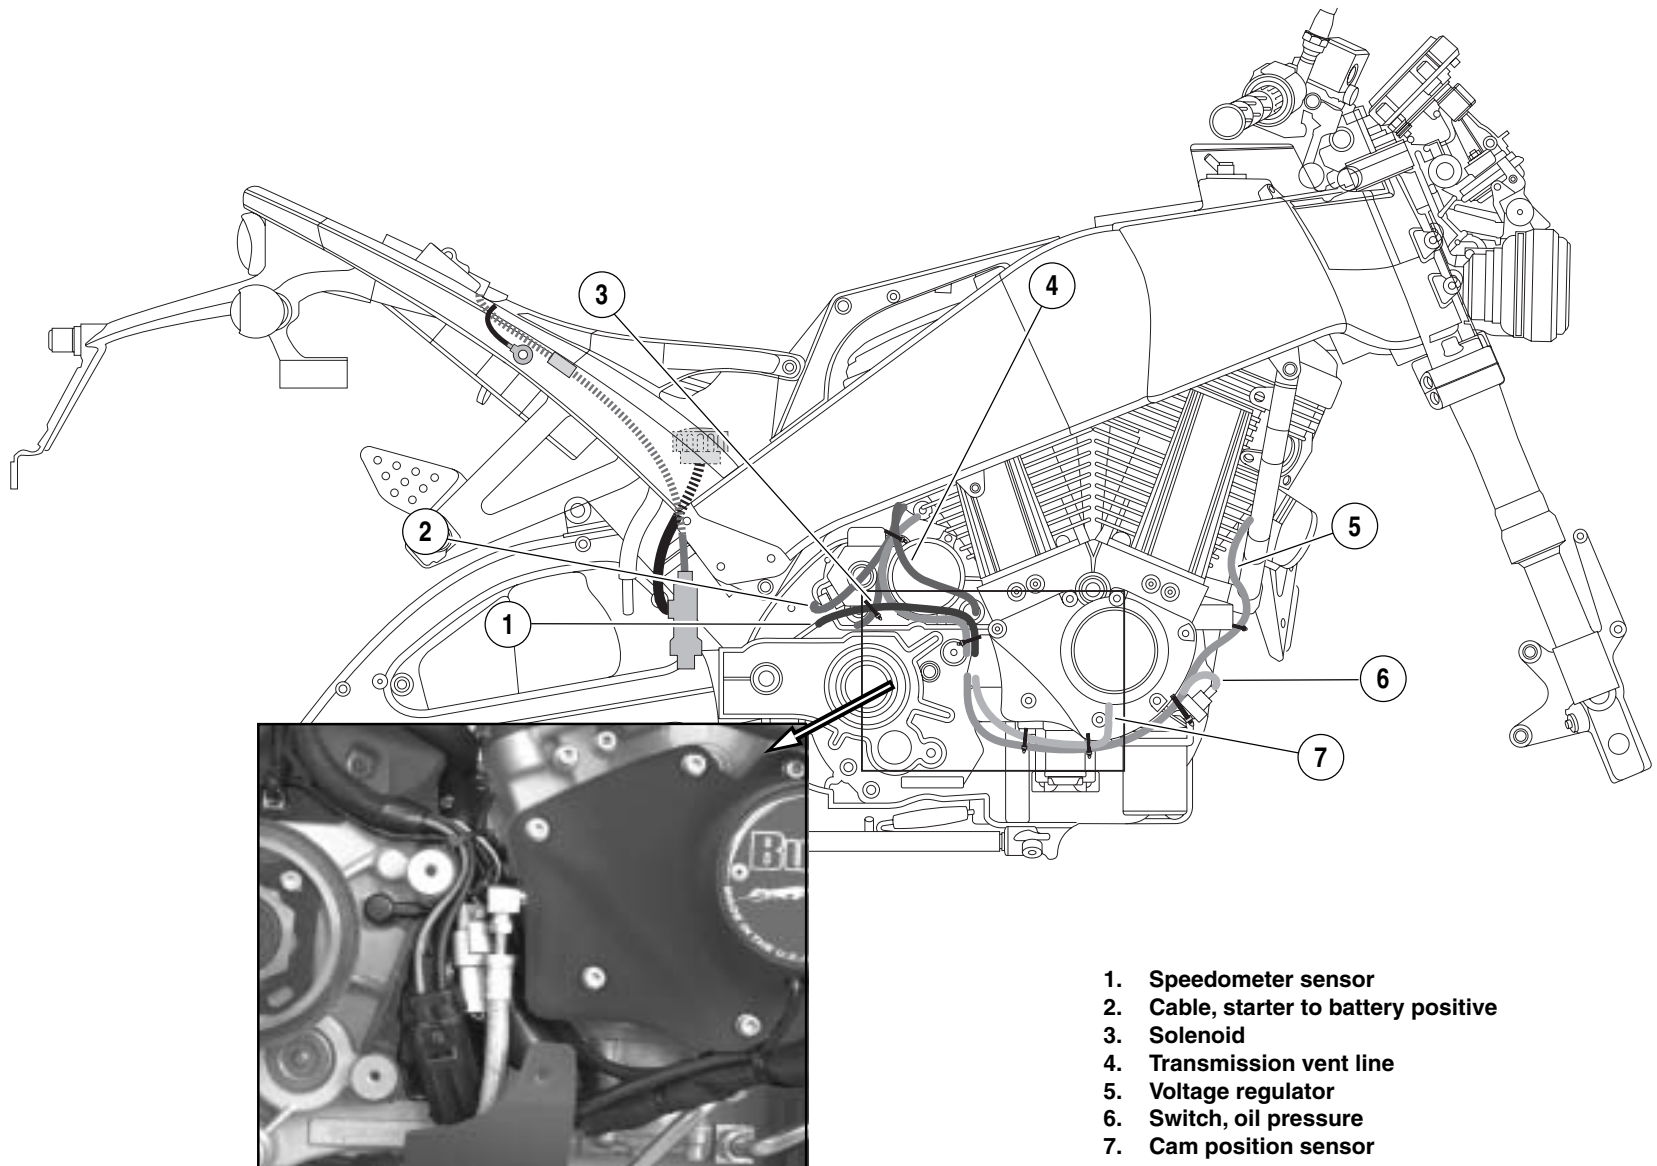


Figure D-8. Wiring Harness, Right Side View

b1122xasx

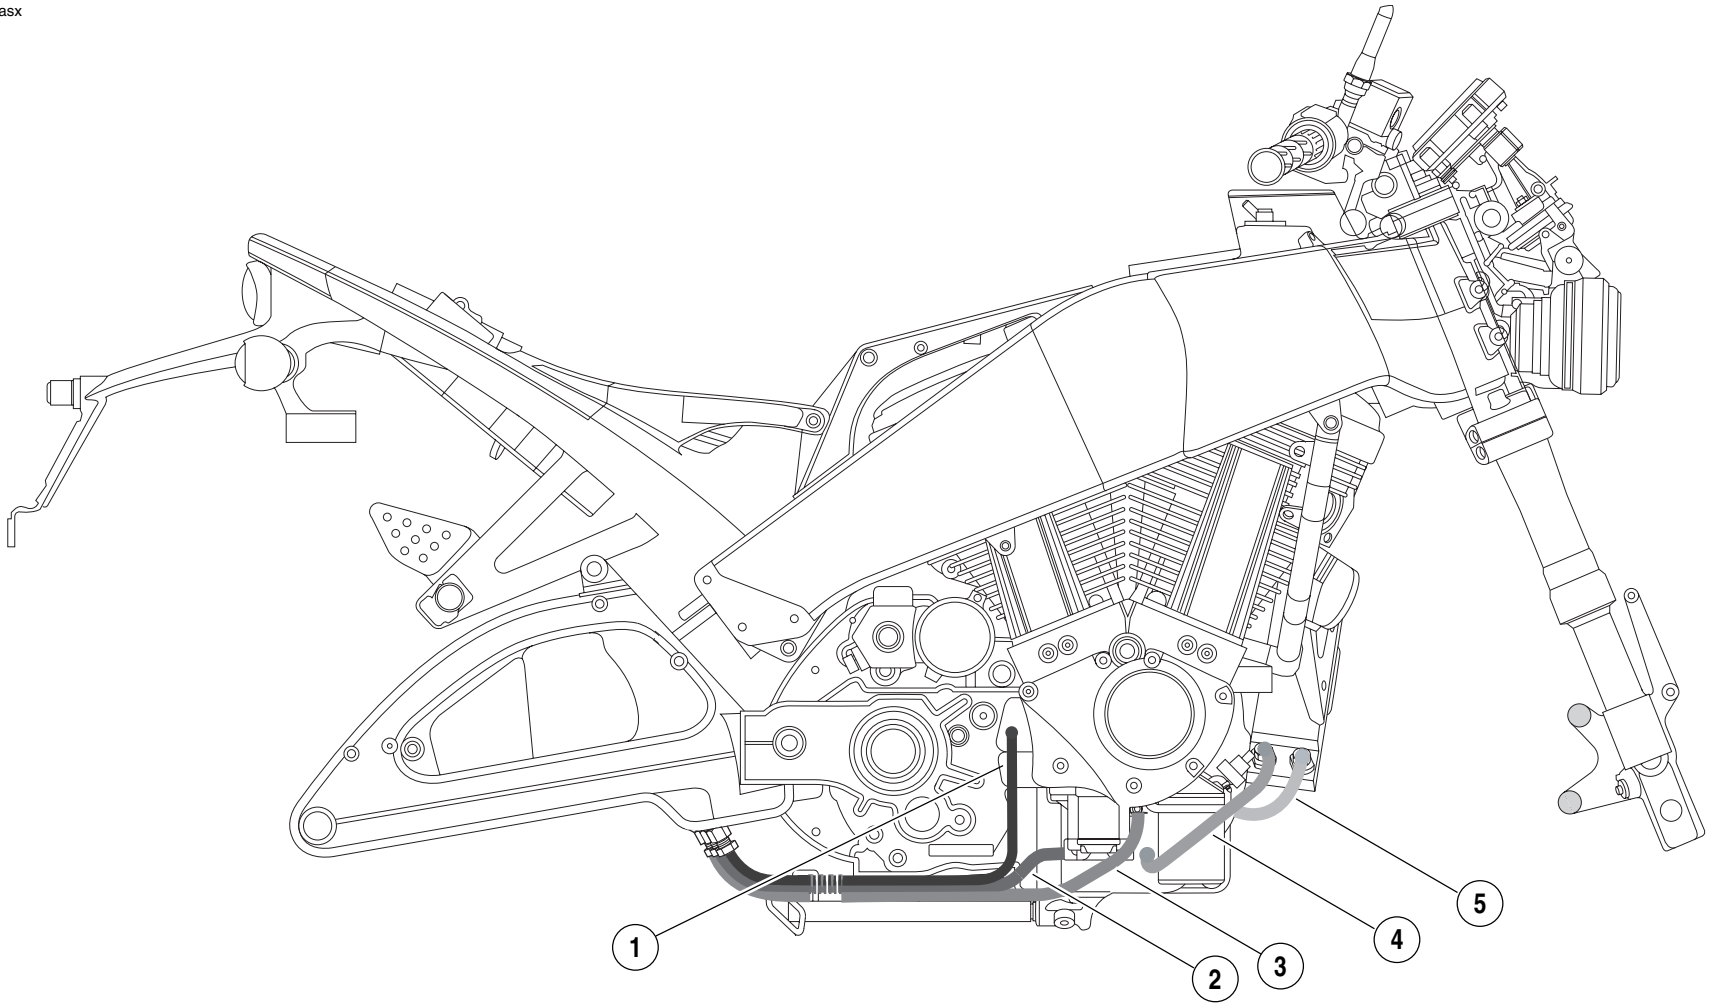


1. Vent line
2. Feed oil line
3. Return oil line

4. Feed oil line from the oil pump to the oil cooler
5. Return oil line from the oil cooler to the oil filter housing

Figure D-9. Oil Lines, Right Side View

b1123xbsx

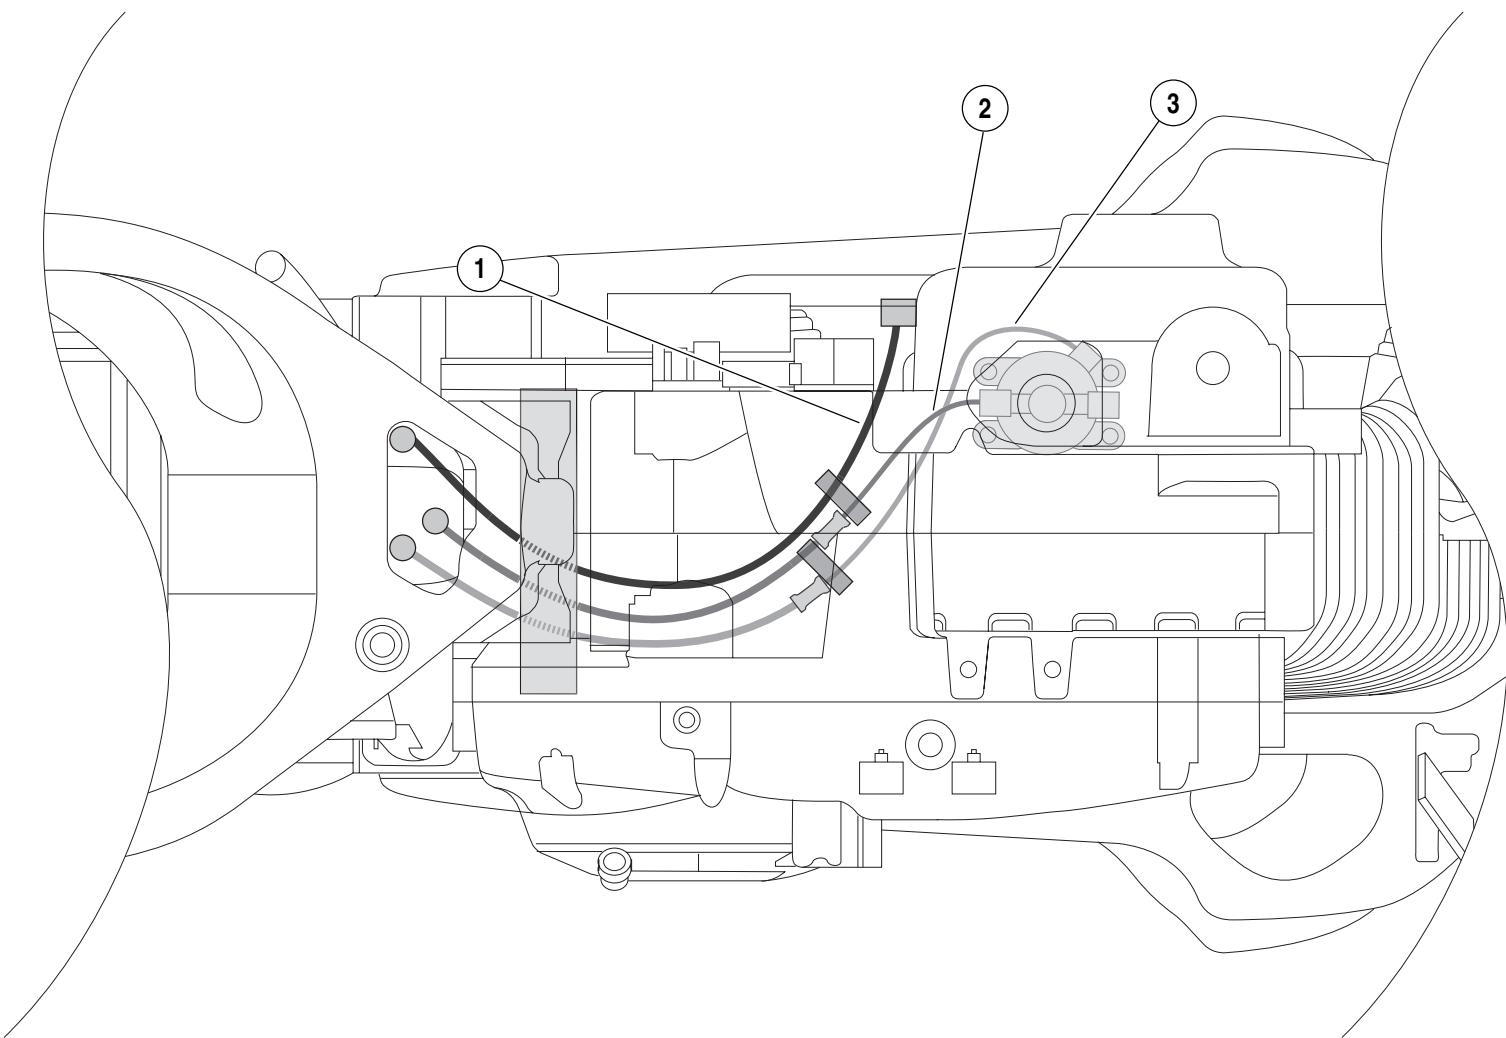

1. Vent line

2. Feed oil line

3. Return oil line

Figure D-10. Oil Lines, Bottom View

b1124xasx

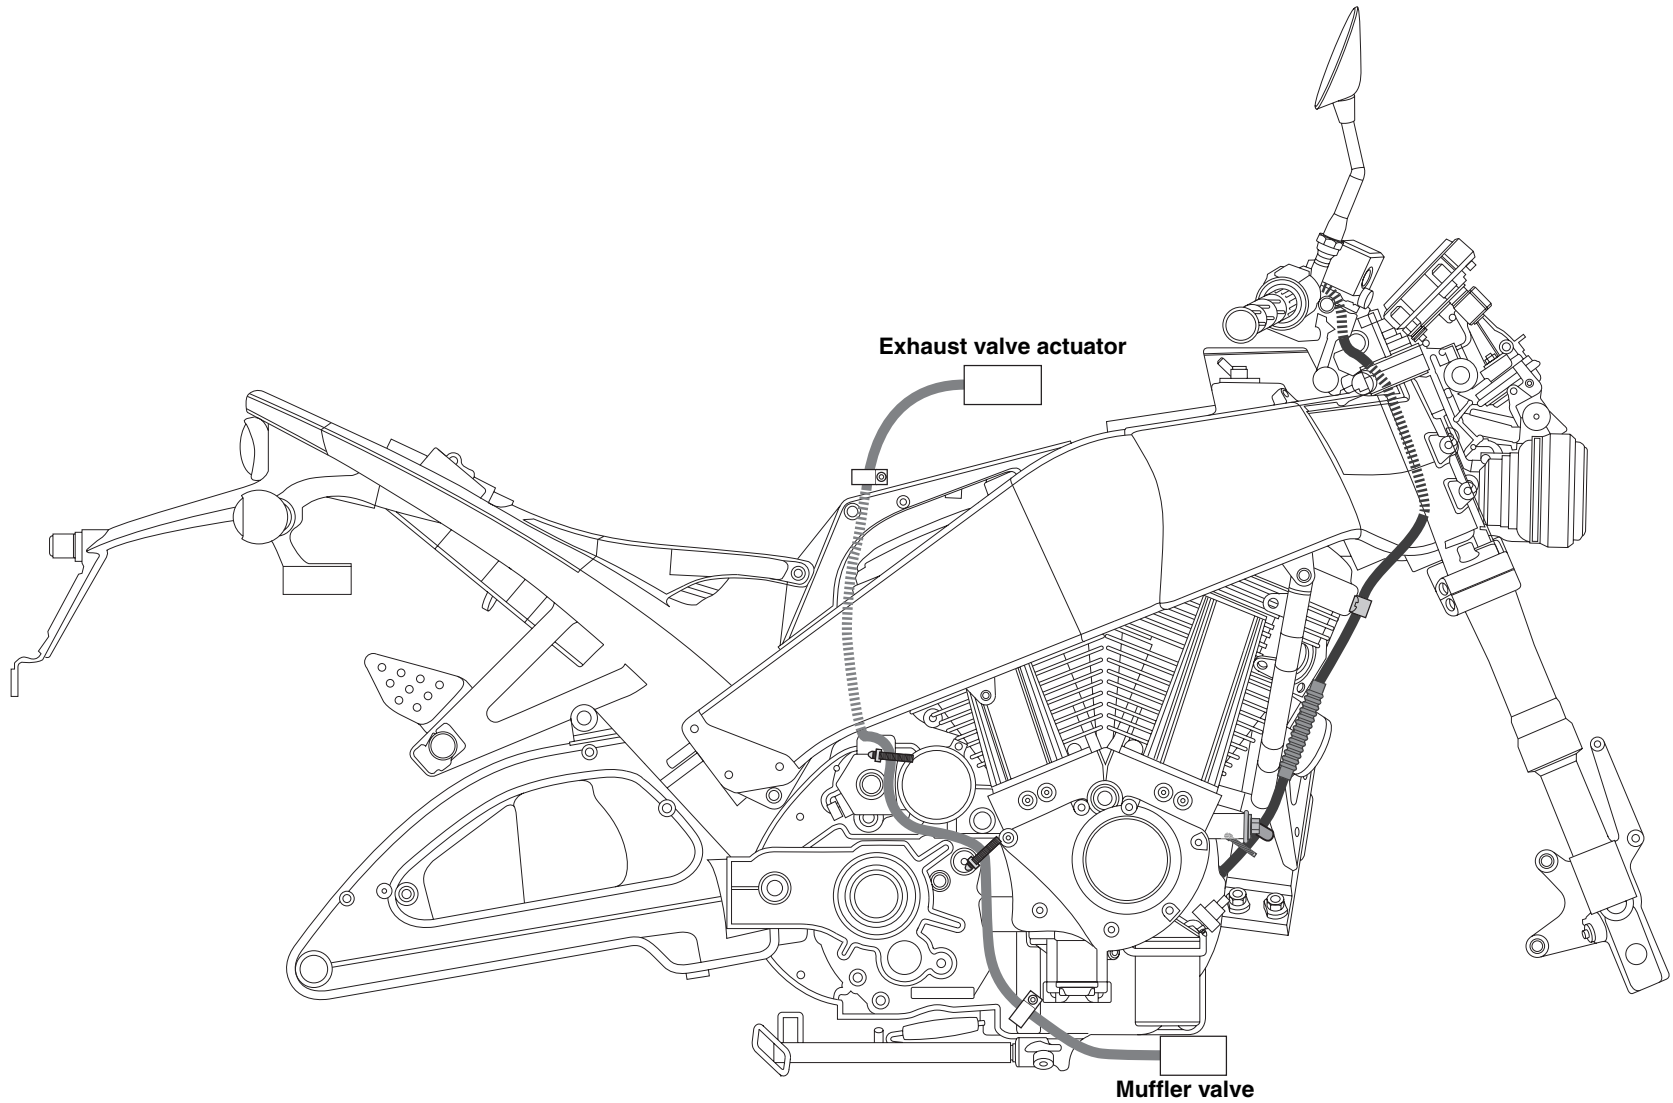


Figure D-11. Clutch Cable and Exhaust Valve Actuator (1200 only), Right Side View

b1125xbsx

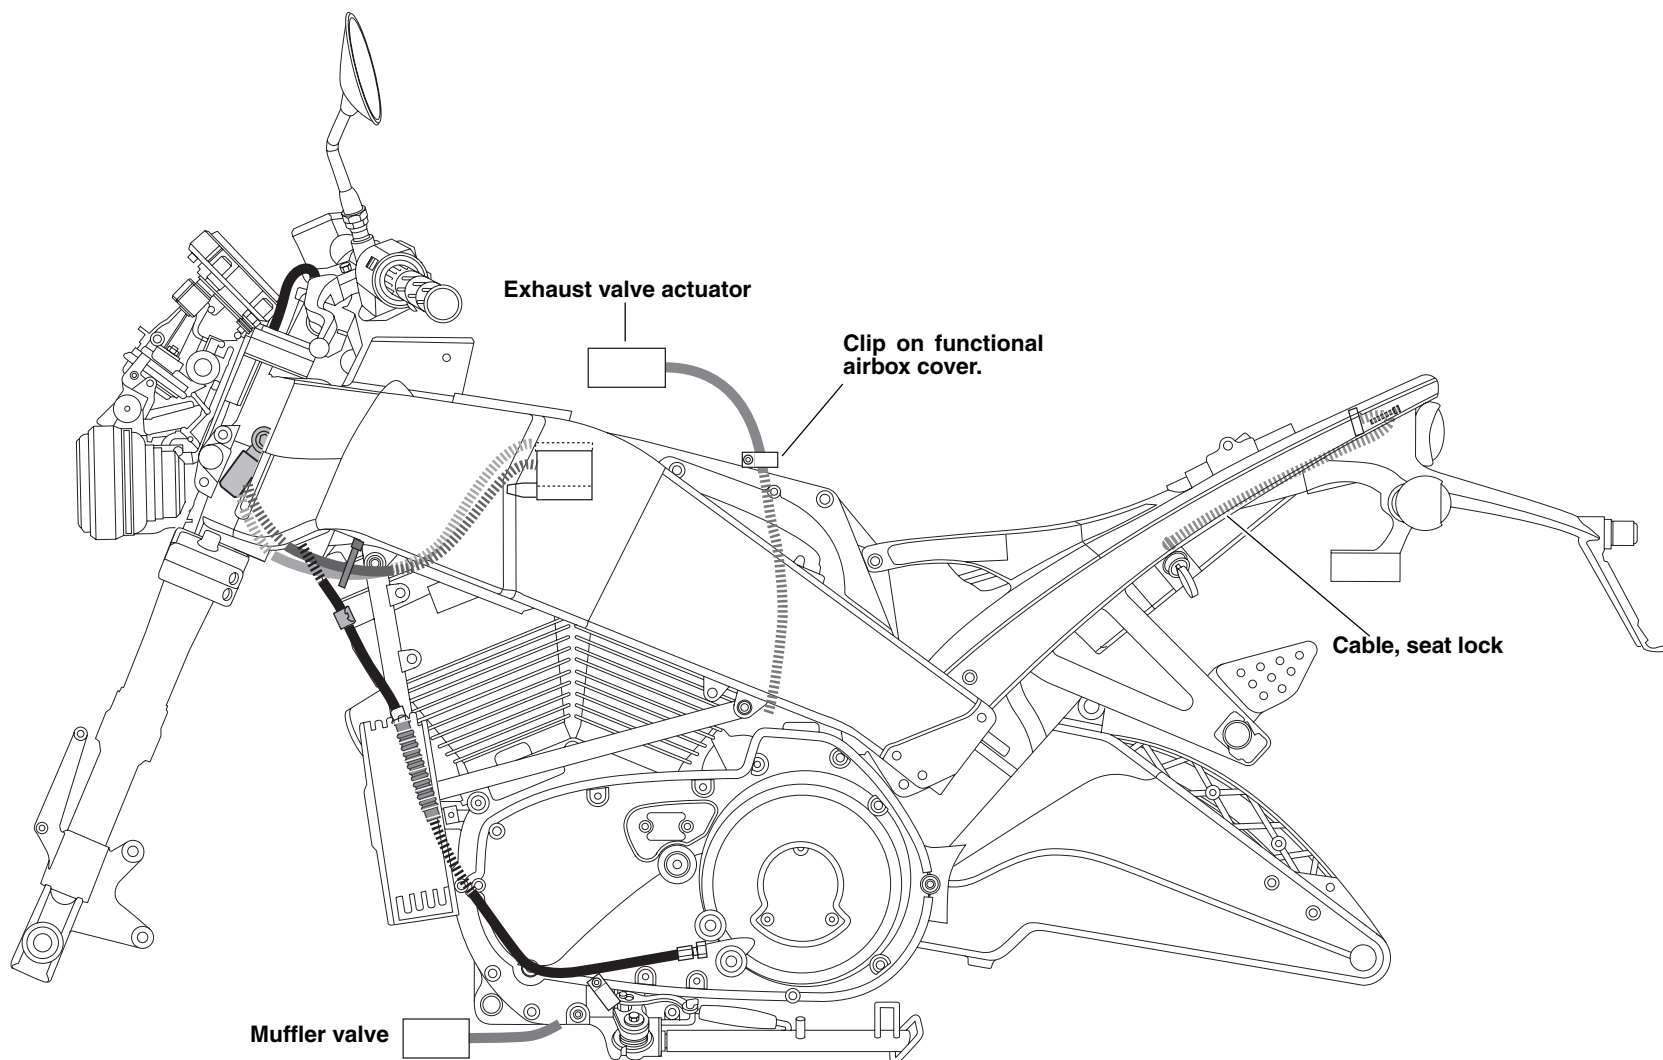


Figure D-12. Clutch, Throttle, Seat Release Cables and Exhaust Valve Actuator (1200 only), Left Side View

b1126xcsx

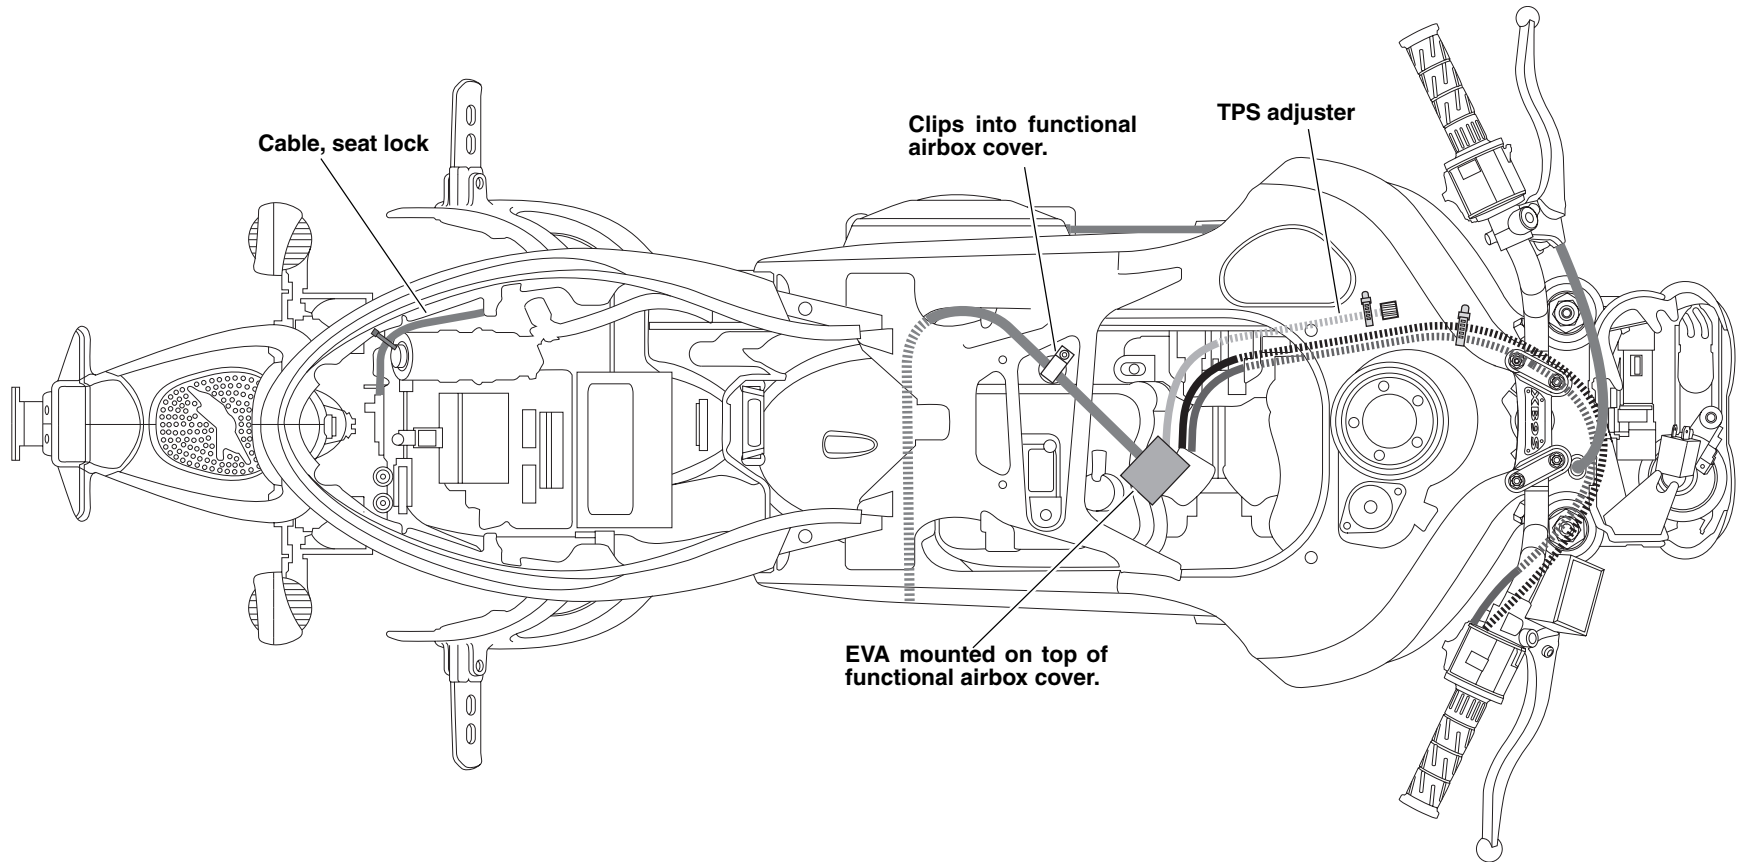


Figure D-13. Clutch, Throttle, Seat Release Cables and Exhaust Valve Actuator, Top View

NOTES
