



**Part No. B-35316-5 12 Inch Bolt.**  
Used with Part No. HD-39302.

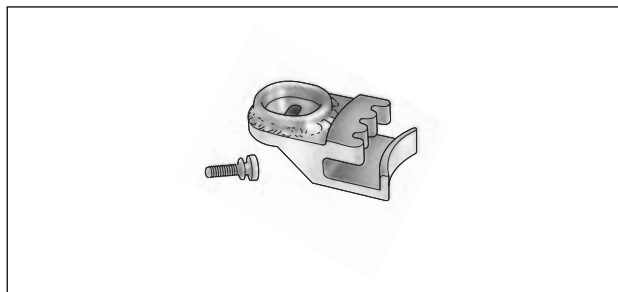


**Part No. B-43982 Sprocket Locking Tool**

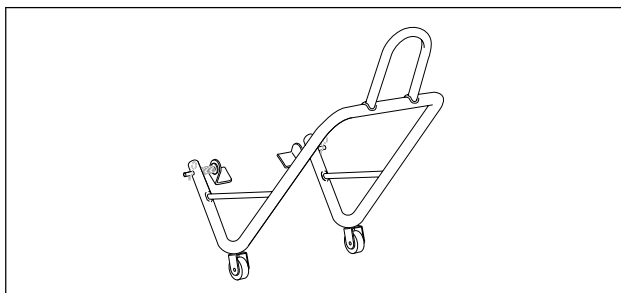


**Part No. B-41174 Rear Wheel Support Stand and  
Part No. B-41174-2 Replacement Pad.**




**Part No. B-43983 Main Drive Gear Cross Plate.**  
Used with Part No. HD-35316A.

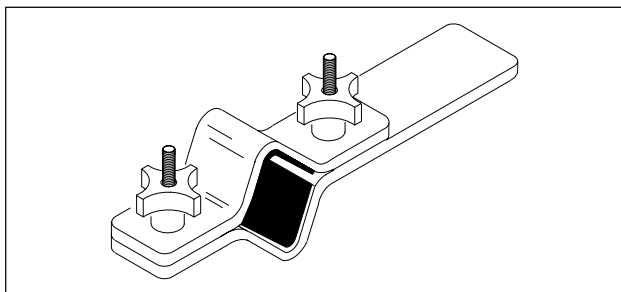


**Part No. B-41177 Front Fork Holding Tool**

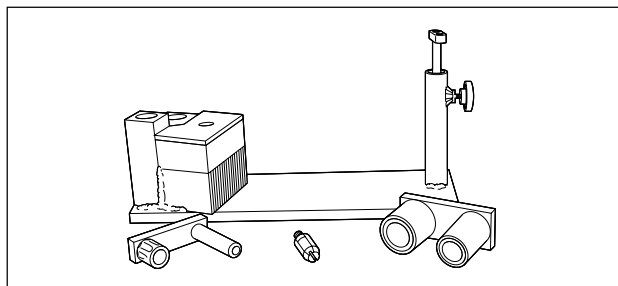


**Part No. B-43985 Transmission Remover/Installer**

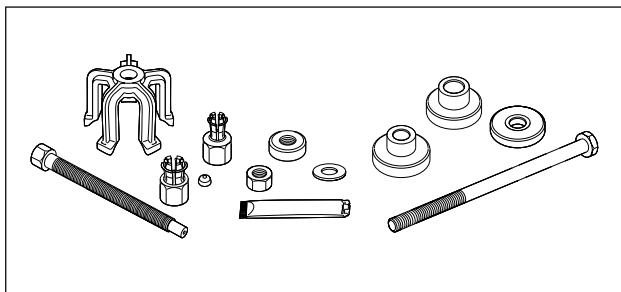


**Part No. B-43933 Wheel Bearing Remover/Installer.**  
Use with Part No. HD-44060.

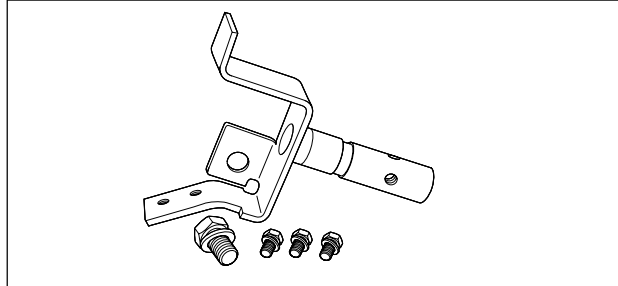


**Part No. B-43987 Engine Cradle**  
Used with HD-42310

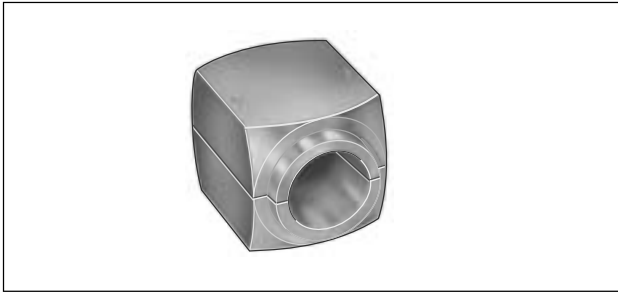


**Part No. B-43991 Fork Seal/Bushing Driver**

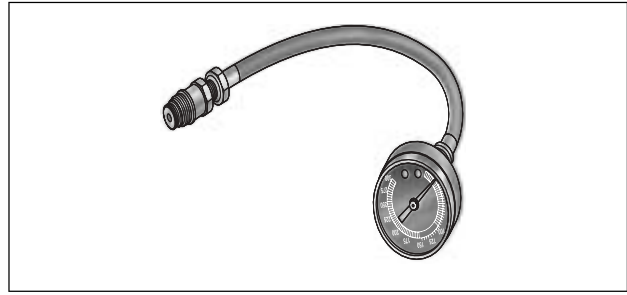


**Part No. HD-33223-1 Cylinder Compression Gauge**

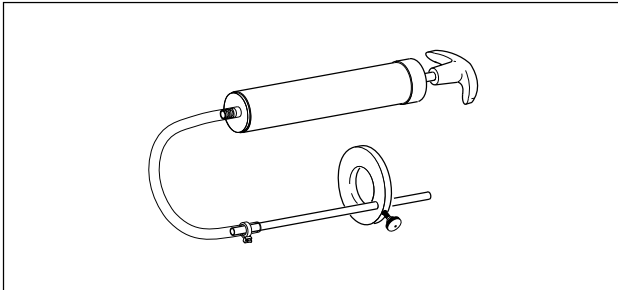


**Part No. B-59000A Pro Level Oil Gauge**

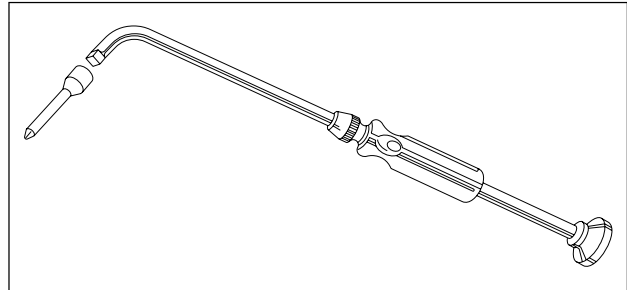


**Part No. HD-33413-A Carburetor Idle Adjustment Tool**

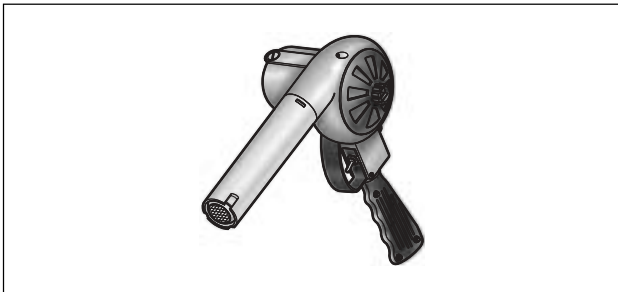


**Part No. HD-25070 Robinair Heat Gun**

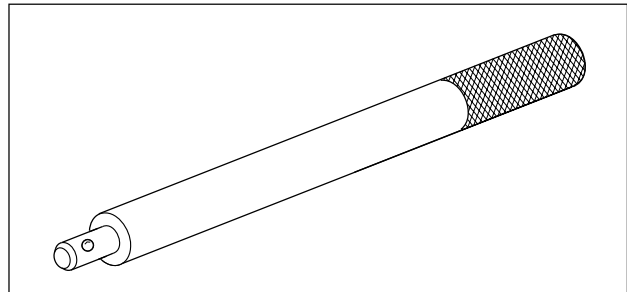


**Part No. HD-33416 Universal Driver Handle**

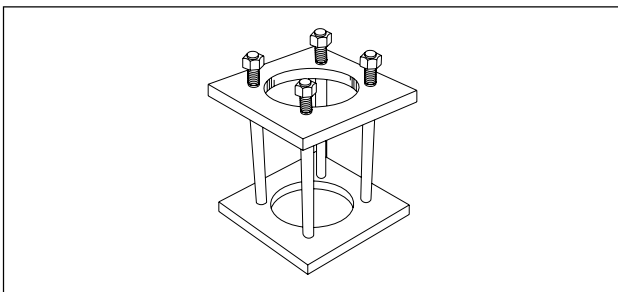


**Part No. HD-33446A Cylinder Torque Plates and Torque Plate Bolts Part No. HD-33446-86.**

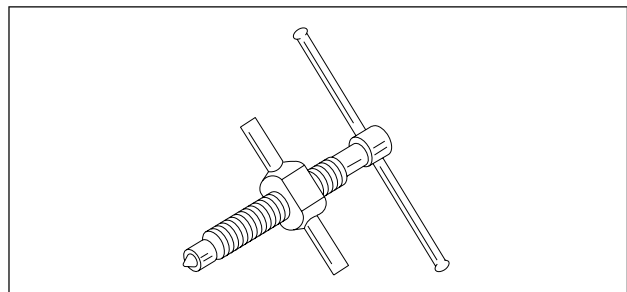


**Part No. HD-33418 Universal Puller Forcing Screw**

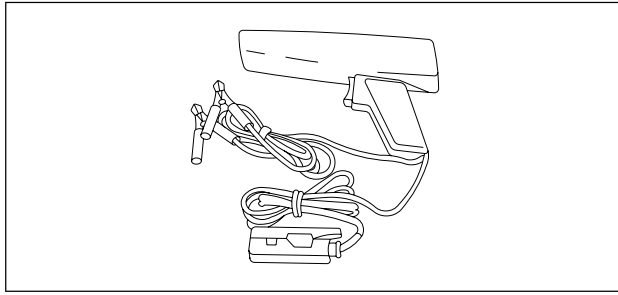


**Part No. HD-33813 Inductive Timing Light**

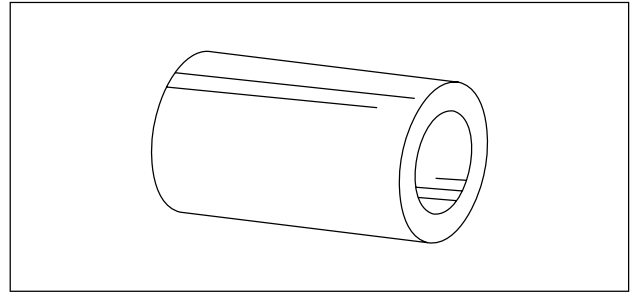


**Part No. HD-34731 Shoulderless Valve Guide Installation Tool**

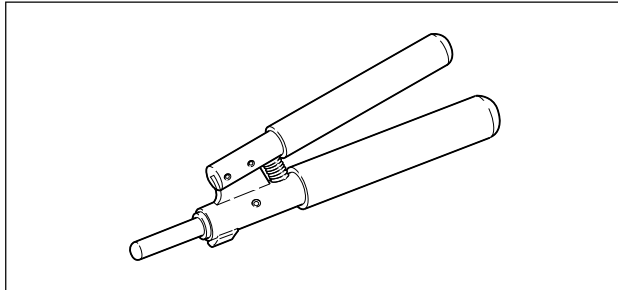


**Part No. HD-34623B Piston Pin Retaining Ring Installer/Remover**

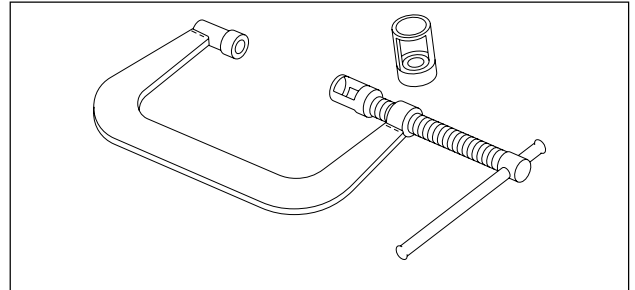


**Part No. HD-34736B Valve Spring Compressor**

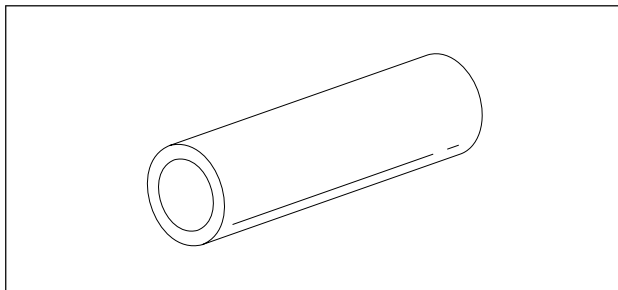


**Part No. HD-34643A Shoulderless Valve Guide Seal Installer**

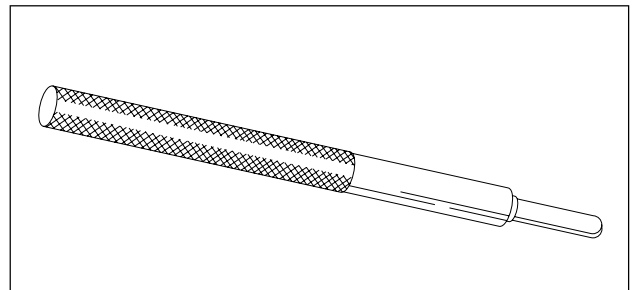


**Part No. HD-34740 Driver Handle and Remover. Use with Part No. HD-34643A and art No. HD-34731.**

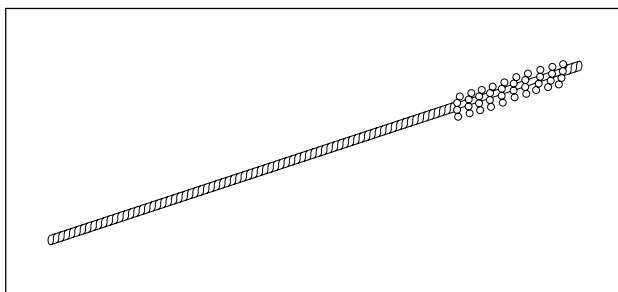


**Part No. HD-34723 Valve Guide Hone (8 mm)**

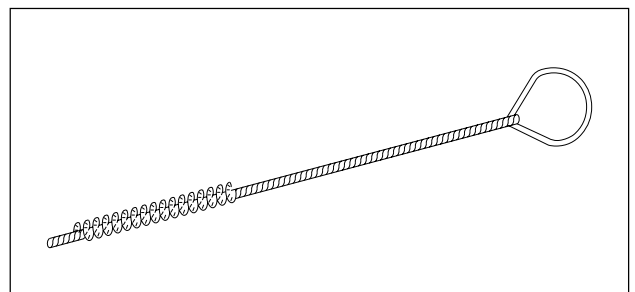


**Part No. HD-34751 Nylon Valve Guide Brush**

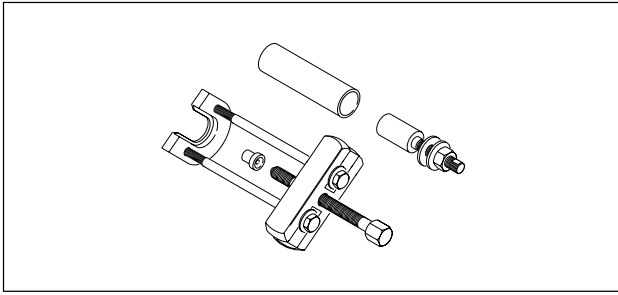


**Part No. HD-34902-B Primary Bearing Race Remover/Installer**

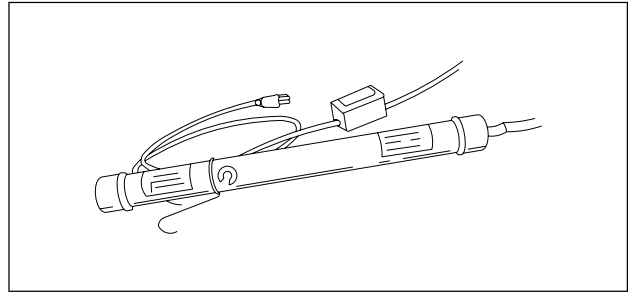


**Part No. HD-35457 Black Light Leak Detector**

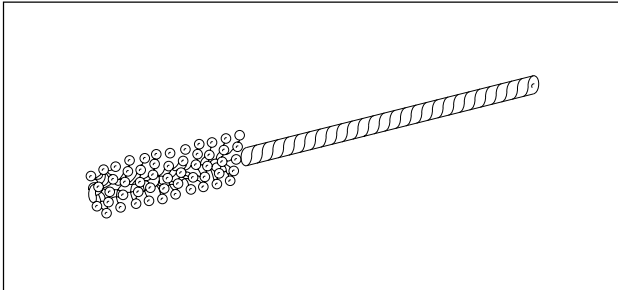


**Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)**

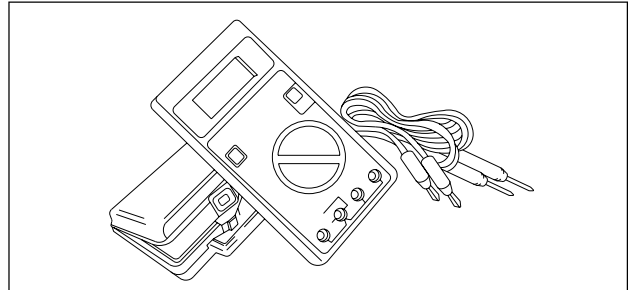


**Part No. HD-35500A Digital Multi-Meter (FLUKE 23)**

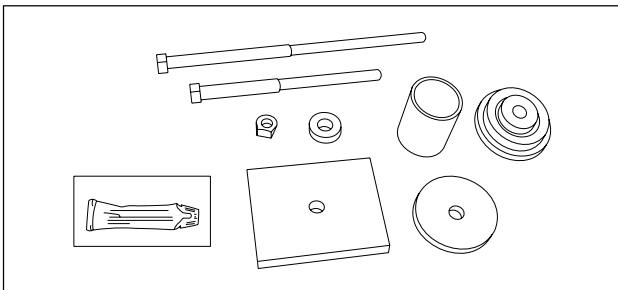


**Part No. HD-35316-A Main Drive Gear Remover/Installer and Main Drive Gear Bearing Installer.**

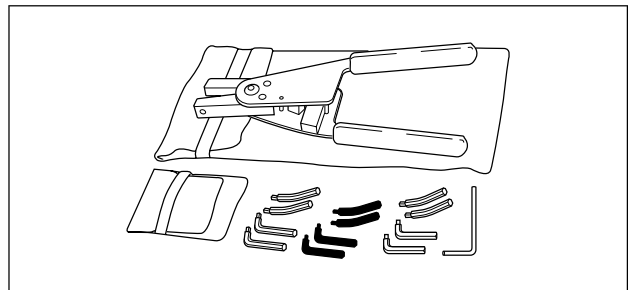


**Part No. HD-35518 Internal/External Retaining Ring Pliers**

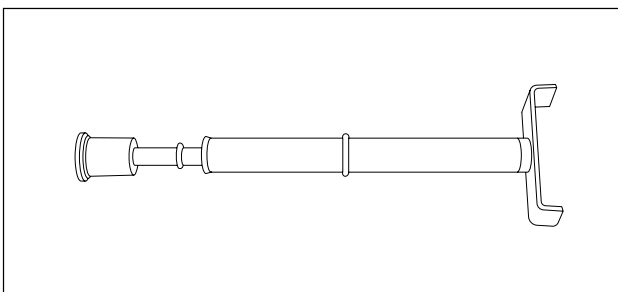


**Part No. HD-35381 Belt Tension Gauge**

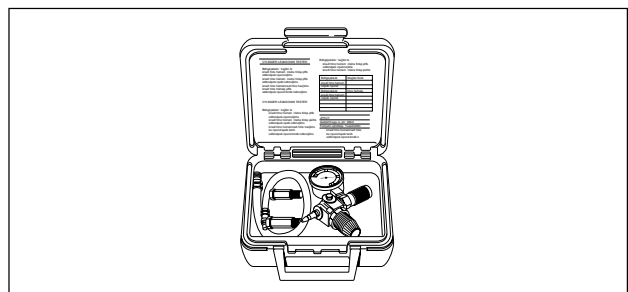


**Part No. HD-35667A Cylinder Leakdown Tester**

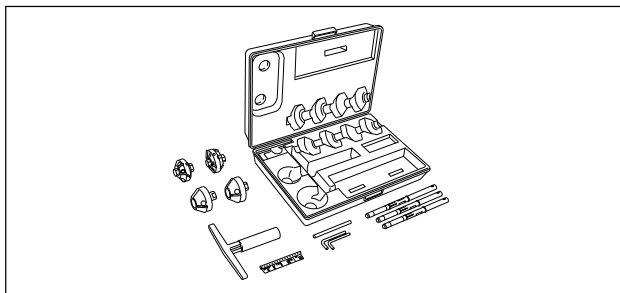


**Part No. HD-35758 Neway Valve Seat Cutter Set**

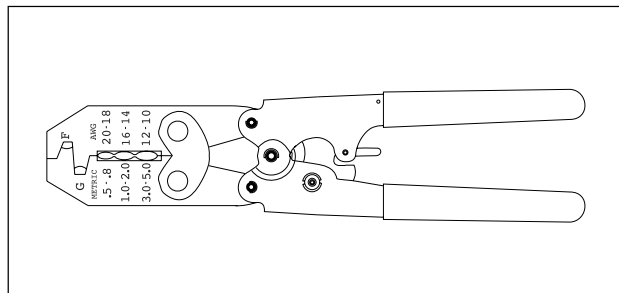


**Part No. HD-38125-8 Packard Terminal Crimp Tool**

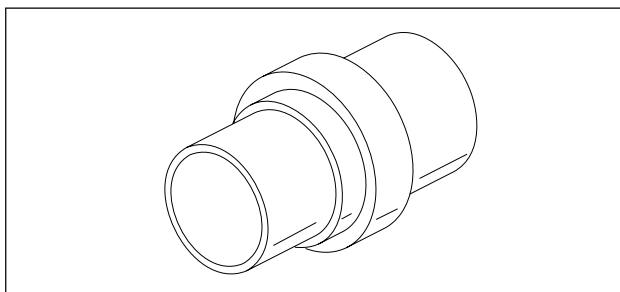


**Part No. HD-37842A Inner/Outer Main Drive Gear Needle Bearing Installer**

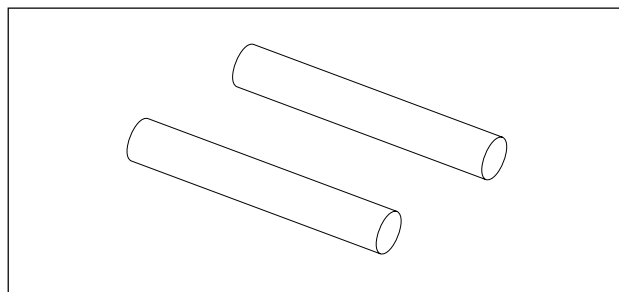


**Part No. HD-38361 Cam Gear Gauge Pin Set  
(0.108 in. (2.74 mm) Diameter)**

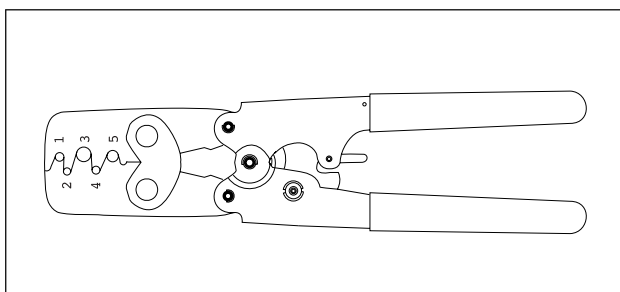


**Part No. HD-38125-6 Packard Terminal Crimp Tool  
(Sealed and non-sealed connectors)**

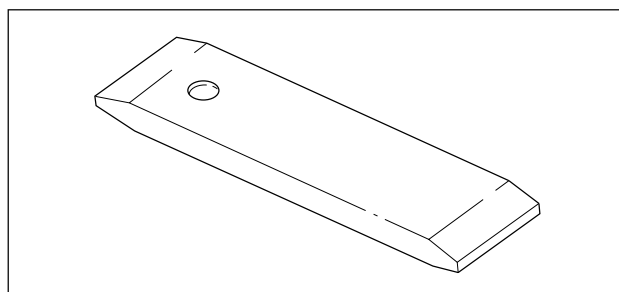


**Part No. HD-38362 Sprocket Locking Link**

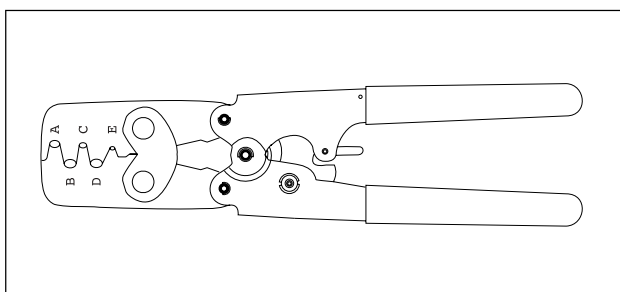


**Part No. HD-38125-7 Packard Terminal Crimp Tool  
(Sealed connectors)**

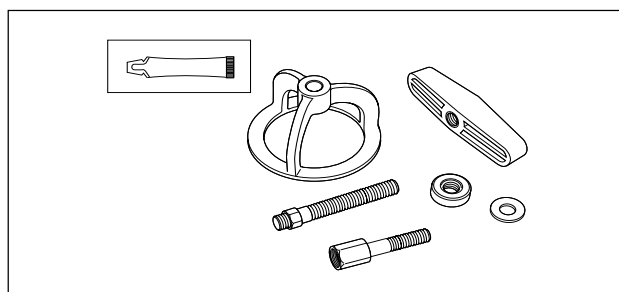


**Part No. HD-38515-A Clutch Spring Compressing Tool  
and Part No. HD-38515-91 Forcing Screw.**

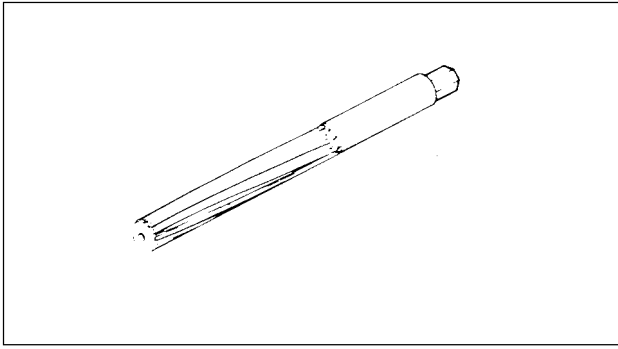


**Part No. HD-38871- 2 Reamer. Use with Part No. B-43988  
Camshaft Bushing Reamer Fixture**

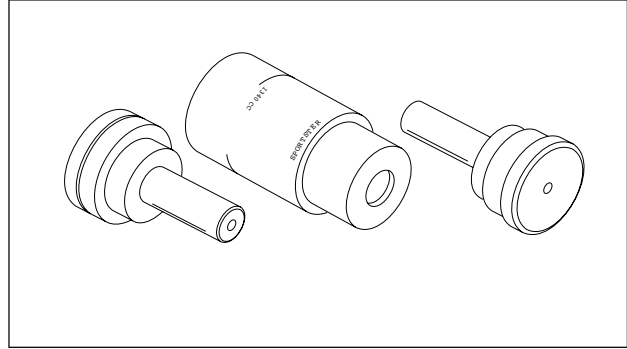


**Part No. HD-39458 Sprocket Shaft Bearing Outer  
Race Installer**

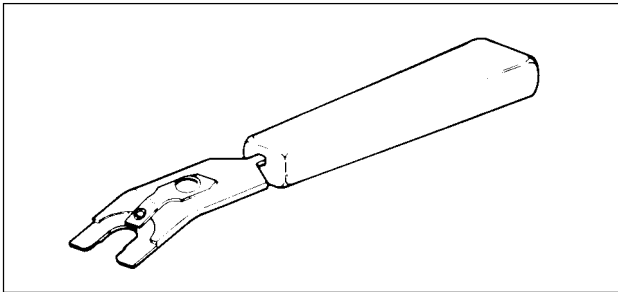


**Part No. HD-39151 Shift Drum Retaining Ring Installer**

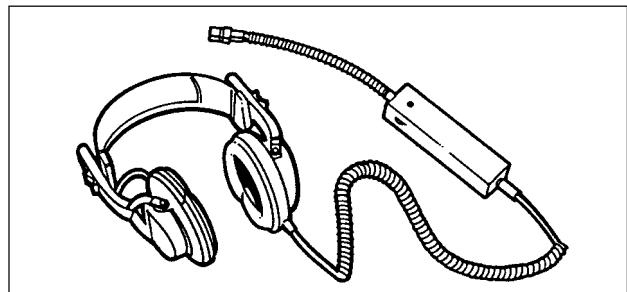


**Part No. HD-39565 Engine Sound Probe**

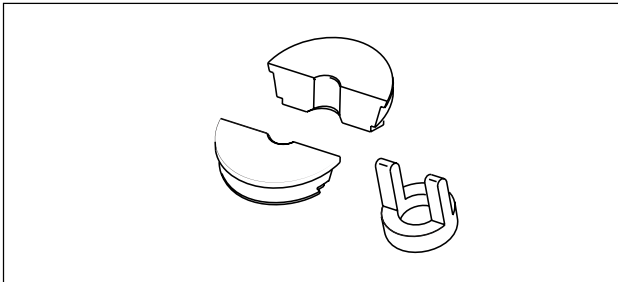


**Part No. HD-39301-A Steering Head Bearing  
Race Remover**

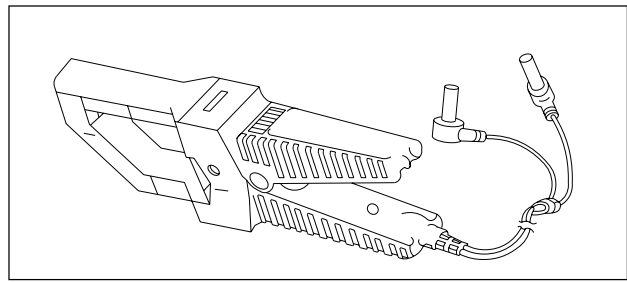


**Part No. HD-39617 Inductive Amp Probe.  
Use with Part No. HD-35500A.**

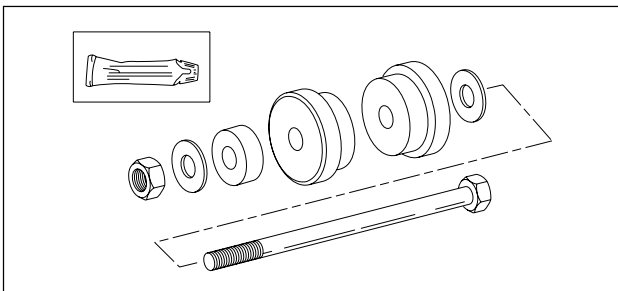


**Part No. HD-39302 Steering Head Bearing  
Race Installer**

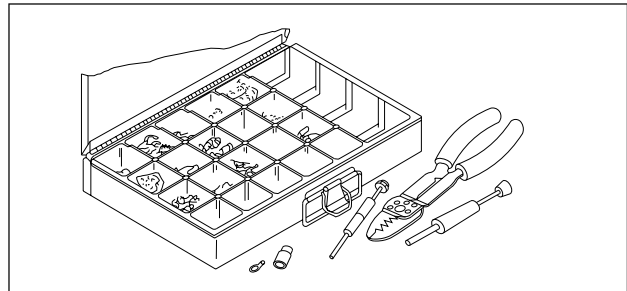


**Part No. HD-39621 Electrical Terminal Repair Kit**

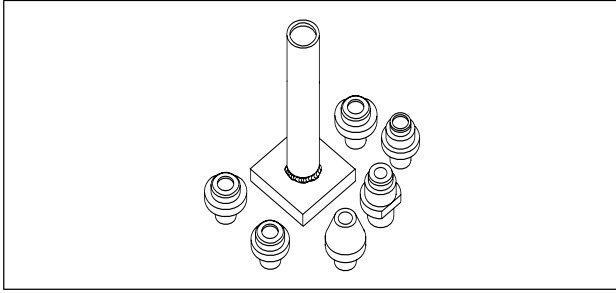


**Part No. HD-39782 Cylinder Head Support**

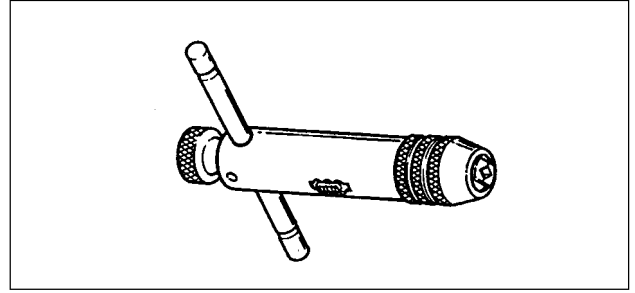


**Part No. HD-39847 Universal Ratcheting Tap/  
Reamer Handle**

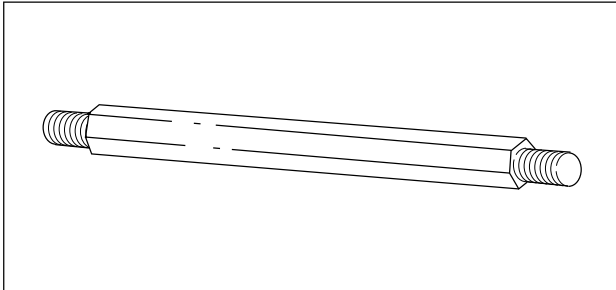


**Part No. HD-39786 Cylinder Head Holding Fixture**

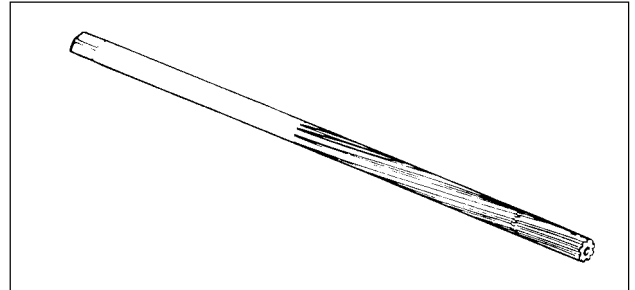


**Part No. HD-39932 (Steel) or HD-39932-CAR (Carbide)  
Intake and Exhaust Valve Guide Reamer.**

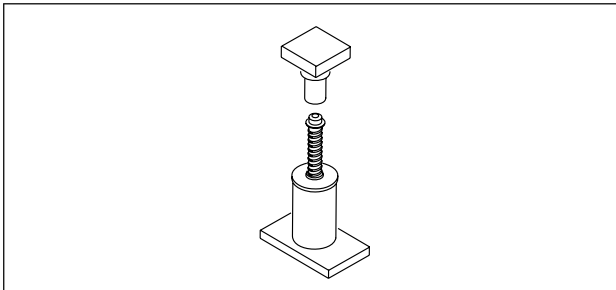


**Part No. HD-39800 Oil Filter Crusher, Small**

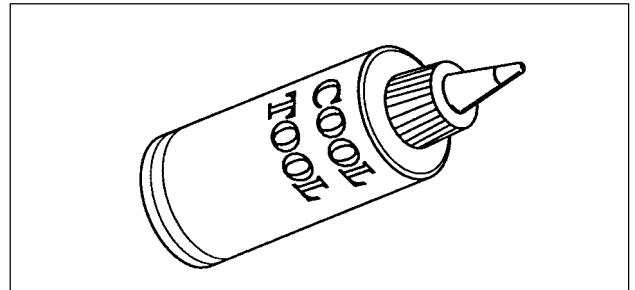


**Part No. HD-39964 Reamer Lubricant (Cool Tool)**

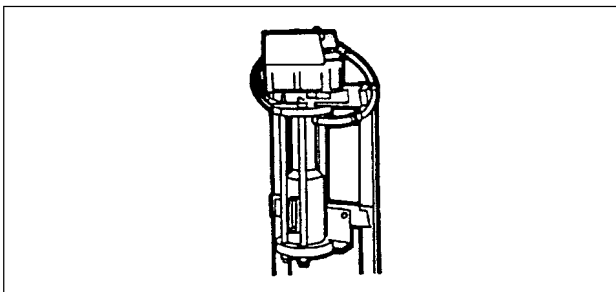


**Part No. HD-39823 Oil Filter Crusher, Large**

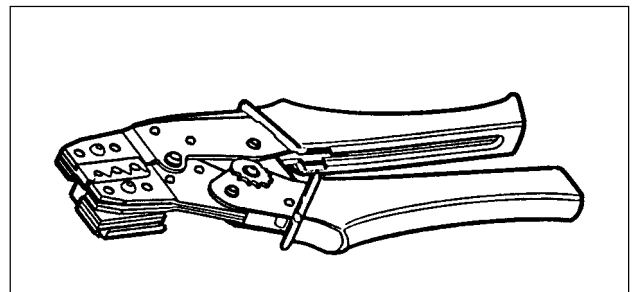


**Part No. HD-39965 Deutsch Terminal Crimp Tool**

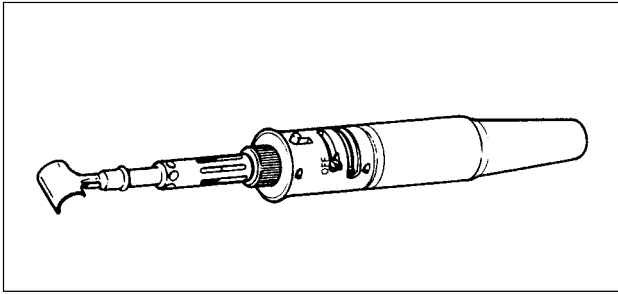


**Part No. HD-39969 Ultra-Torch UT-100**

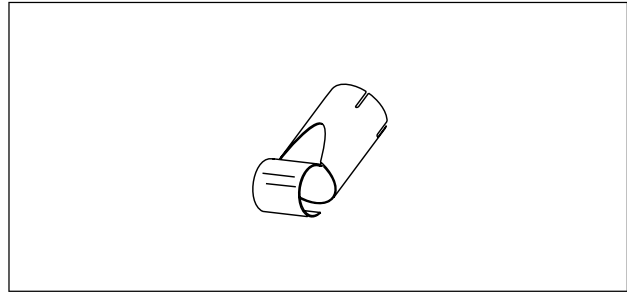


**Part No. HD-41183 Heat Shield Attachment.  
Use with Part No. HD-25070.**

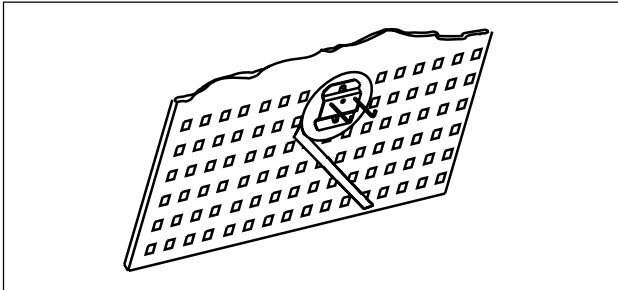


**Part No. BU-44473 Tool Organizational System**

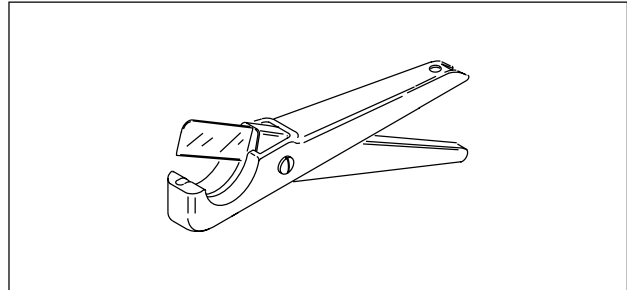


**Part No. HD-41185 Hose Cutting Tool**

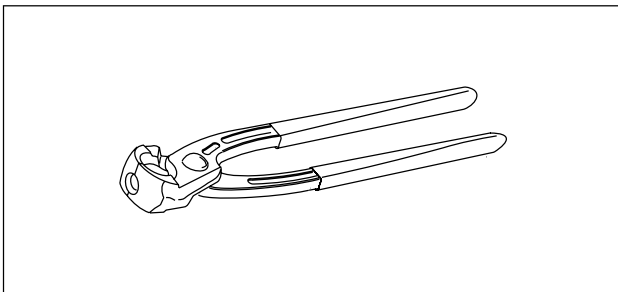


**Part No. HD-41137 Hose Clamp Pliers**

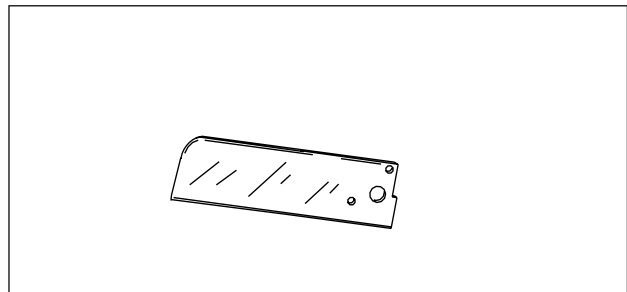


**Part No. HD-41185-1 Oil Hose Cutter-Replacement Blade**

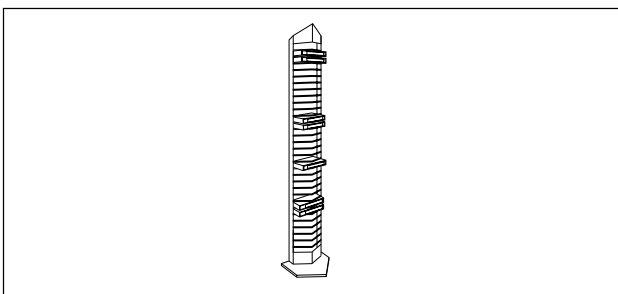


**Part No. HD-41155 VHS Video Shelf**

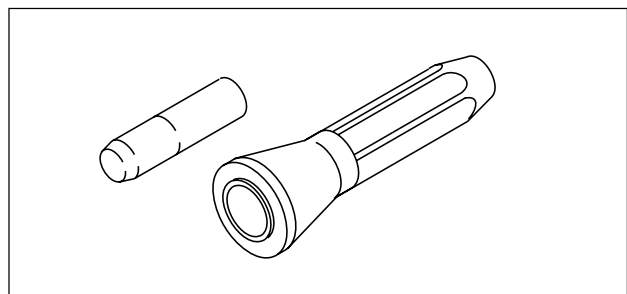


**Part No. HD-41405 Main Drive Gear Seal Installer**

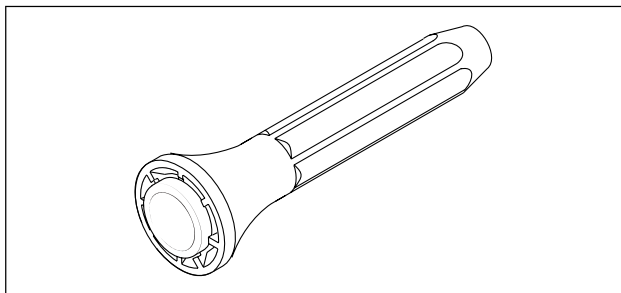


**Part No. HD-41496 Main Drive Gear Seal Installer**

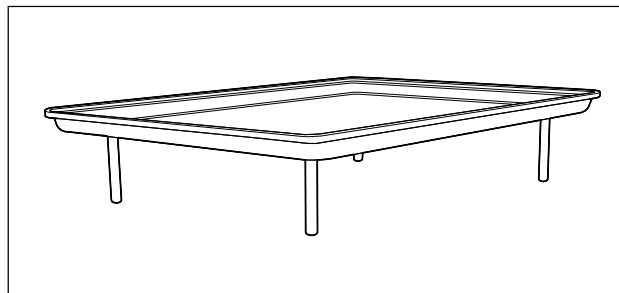


**Part No. HD-42310-150 Drip Tray.  
Use with Part No. HD-42310.**

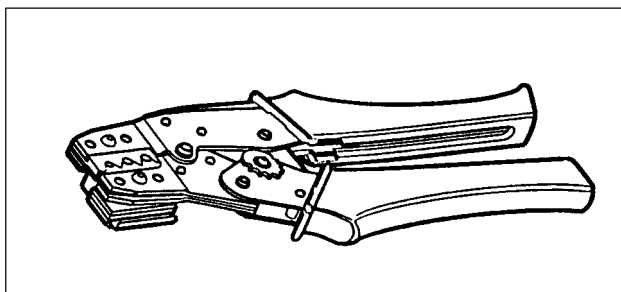


**Part No. HD-41609 Amp Terminal Crimp Tool**

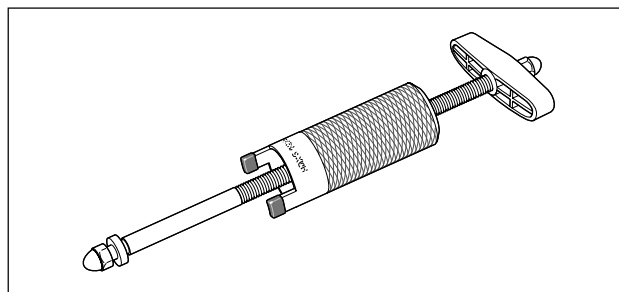


**Part No. HD-42320 Piston Pin Remover/Installer**

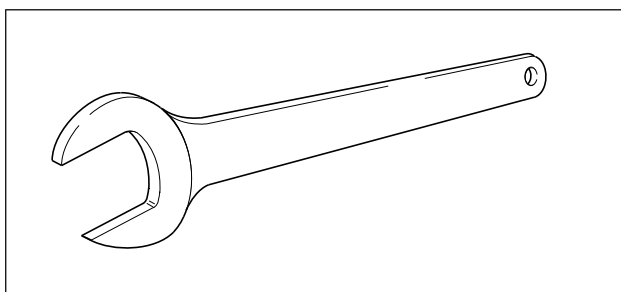


**Part No. HD-41675 Oil Pressure Sending Unit Wrench**

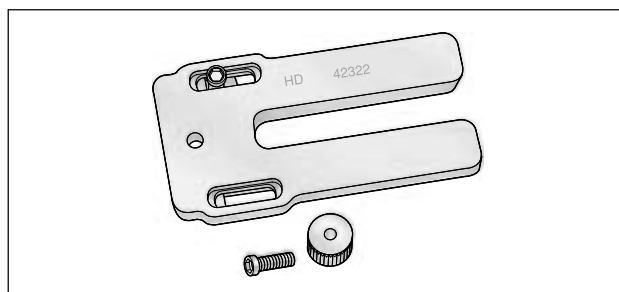


**Part No. HD-42322 Piston Support Plate**

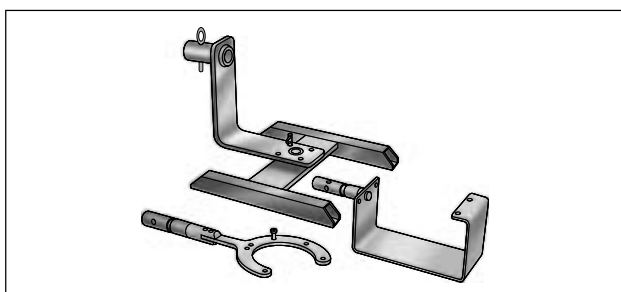


**Part No. HD-42310 Engine/Transmission Stand**

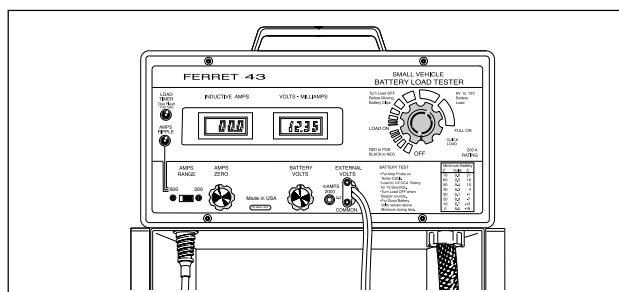


**Part No. HD-42376 Battery/Charging System  
Load Tester**

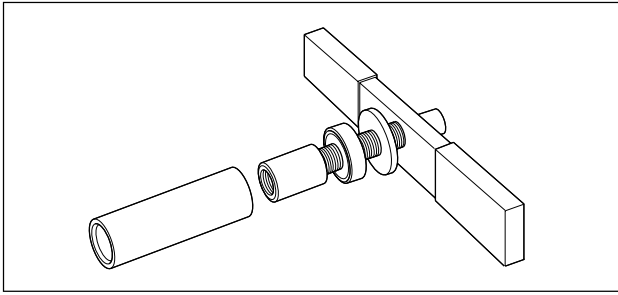


**Part No. HD-42579 Sprocket Bearing/Seal Installer**

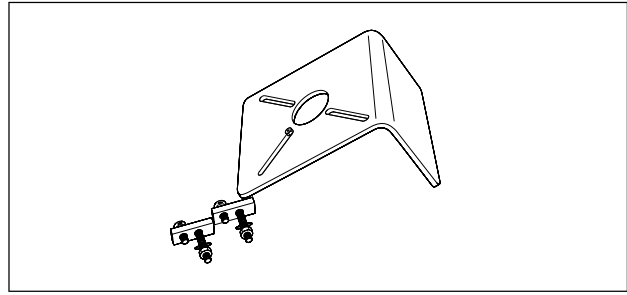


**Part No. HD-44358 Flywheel Support Fixture**

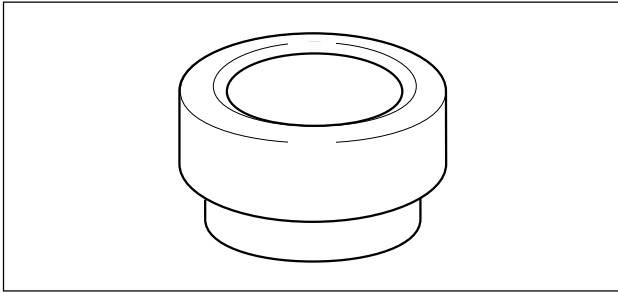


**Part No. HD-42774 Sprocket Shaft Seal Installer**

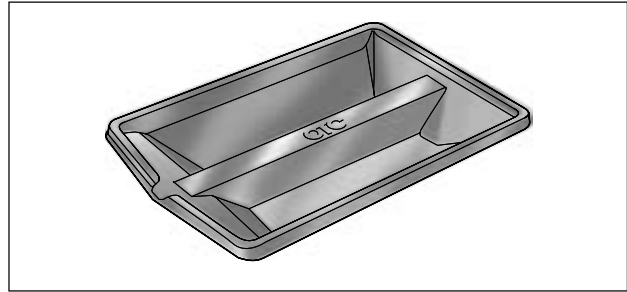


**Part No. HD-43682-10 Drip pan.**  
Use with Part No. HD-43682 or Part No. HD-43646.

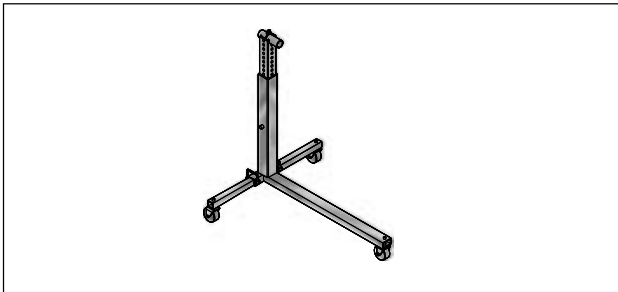


**Part No. HD-43646 Engine Stand**

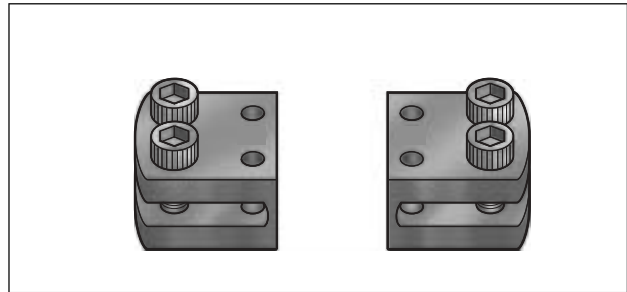


**Part No. HD-44069 Timkin Snap ring remover and installer.** Use with Part No. HD-44404.

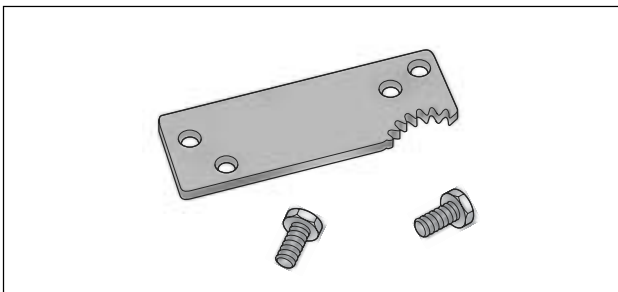


**Part No. HD-43984 Crankshaft Locking Tool**

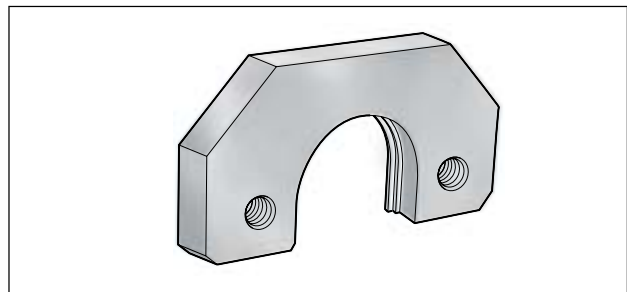


**Part No. HD-44404 Timkin Bearing Remover.** Use with Part No. HD-44069.

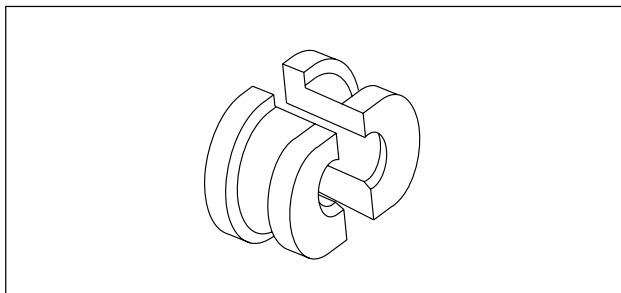


**Part No. HD-94547-101 Crankshaft Bearing Outer Race Remover. Use with Part No. HD-94547-102.**

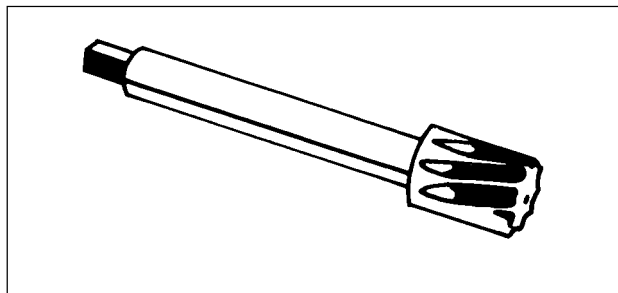


**Part No. HD-94803-67 Intake Camshaft Bushing Reamer**

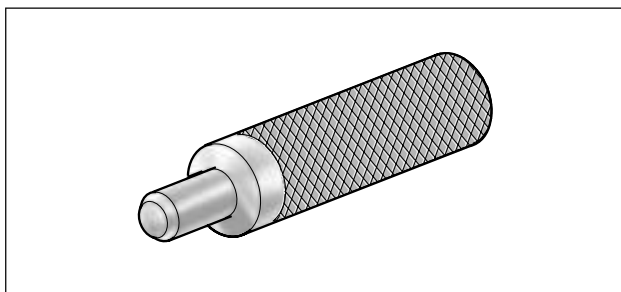


**Part No. HD-94547-102 Drive Handle. Use with Part No. HD-94547-101.**

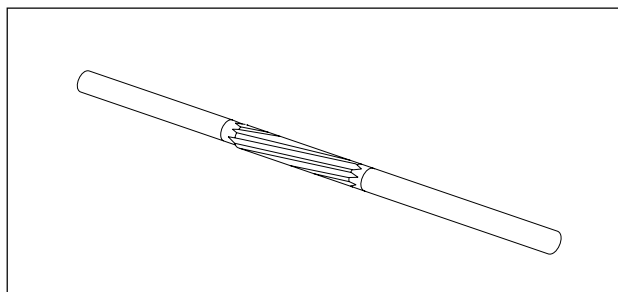


**Part No. HD-94804-57 Rocker Arm Bushing Reamer**

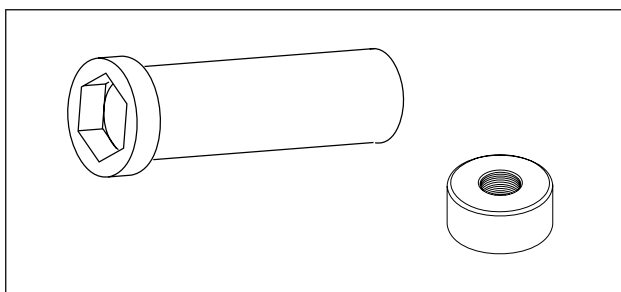


**Part No. HD-94660-37B Mainshaft Locknut Wrench  
Use with Part No. B-43982.**

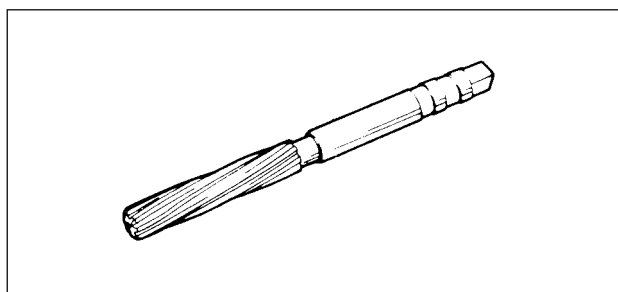


**Part No. HD-94812-1 Pinion Shaft Bushing Reamer.  
Use with Part No. HD-94812-87.**

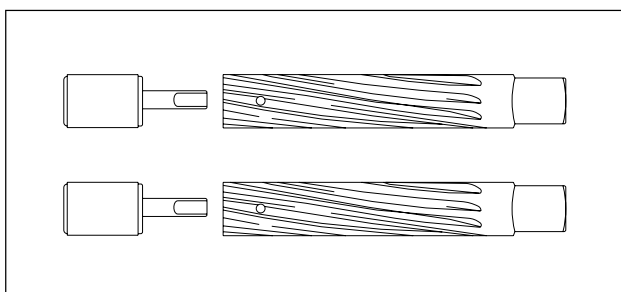


**Part No. HD-94800-26A Connecting Rod Bushing Reamers and Pilots**

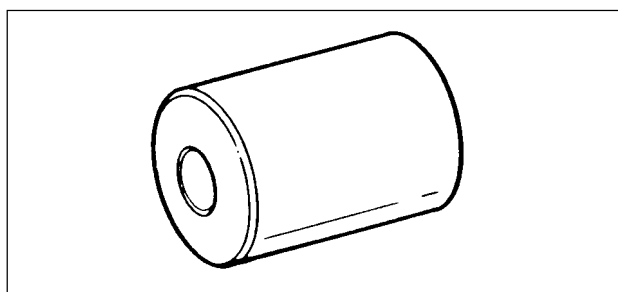


**Part No. HD-94812-87 Pinion Shaft Reamer Pilot.  
Use with Part No. HD-94812-1.**

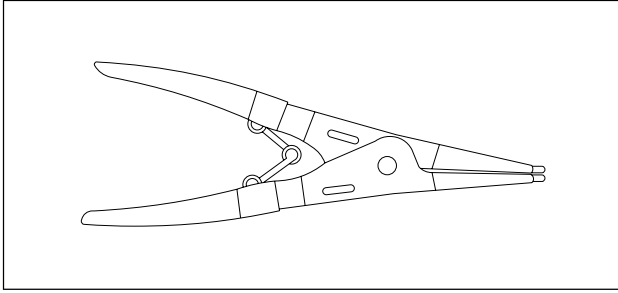


**Part No. HD-95017-61 Large External Retaining Ring Pliers**

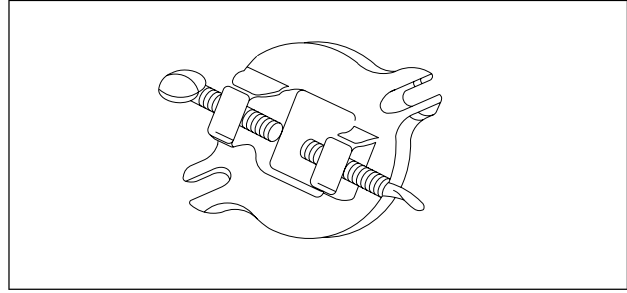


**Part No. HD-95952-33B Connecting Rod Clamping Tool**

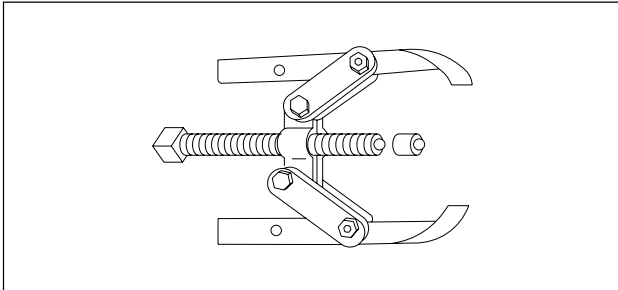


**Part No. HD-95635-46 All-Purpose Claw Puller**

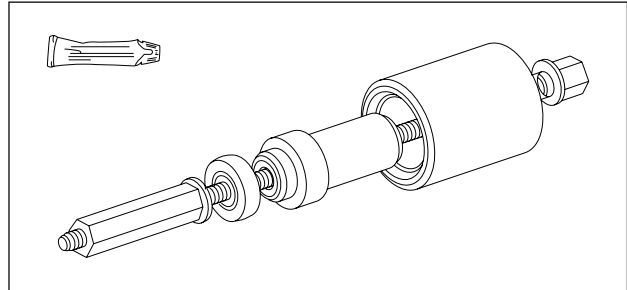


**Part No. HD-95970-32D Piston Pin Bushing Tool**

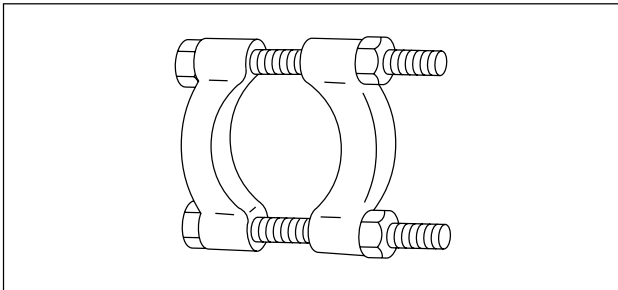


**Part No. HD-95637-46A Wedge Attachment for Claw Puller. Use with Part No. HD-95635-46.**

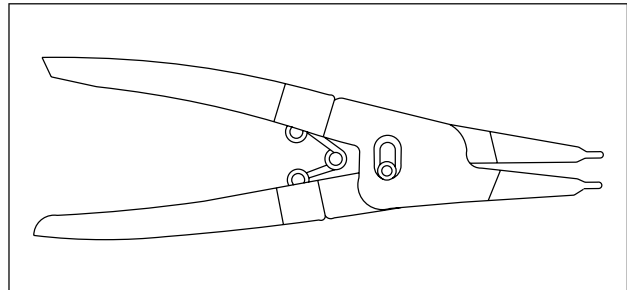


**Part No. HD-96215-49 Small Internal Retaining Ring Pliers**

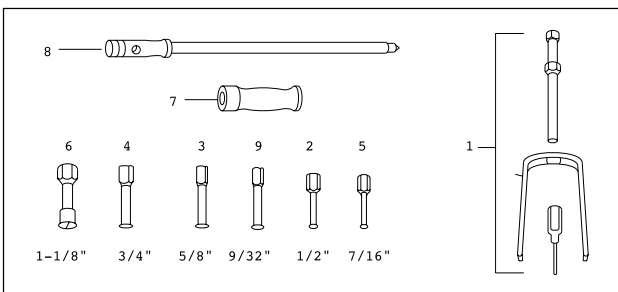


**Part No. HD-95760-69A Bushing/Bearing Puller Tool Set**  
Set includes items 1-7. Items 8 (HD-95769-69), 9 (HD-95770-69) and 10 (HD-95771-69) are optional.

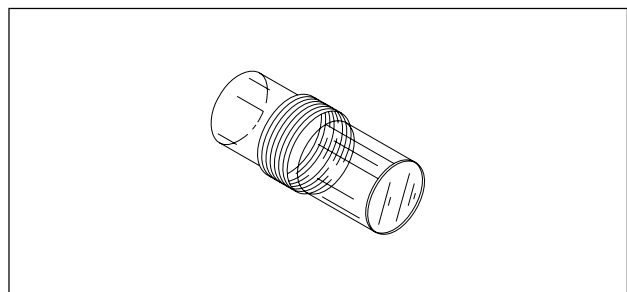


**Part No. HD-96295-65D Timing Mark View Plug.**  
Use with Part No. HD-33813.

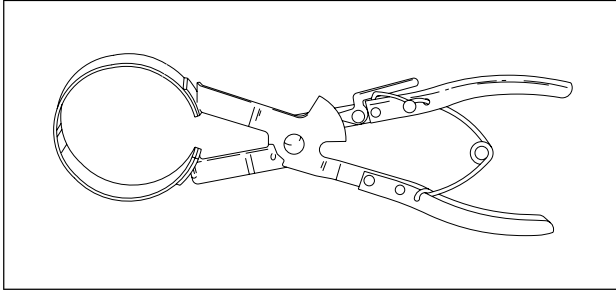


**Part No. HD-96333-51C Piston Ring Compressor**

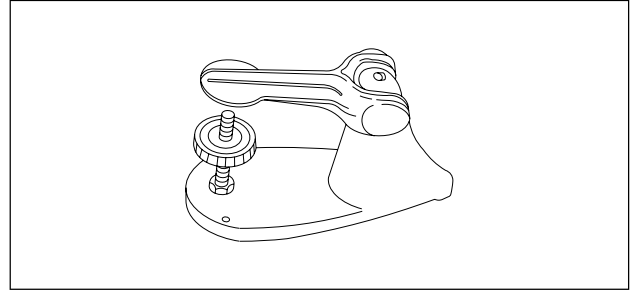


**Part No. HD-96796-47 Valve Spring Tester**

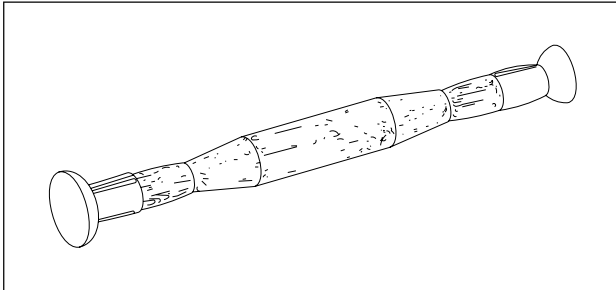


**Part No. HD-96550-36A Valve Lapping Tool**

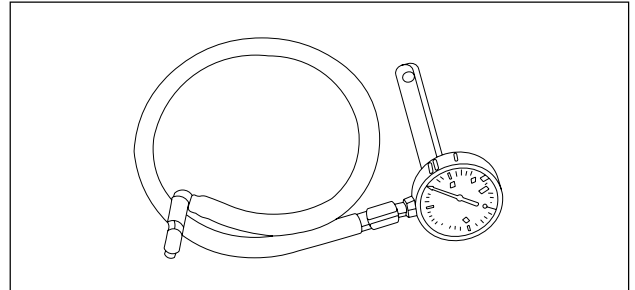


**Part No. HD-96921-52B Oil Pressure Gauge**

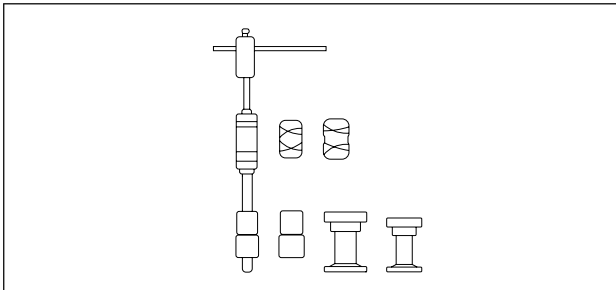


**Part No. HD-96710-40B Crankcase Main Bearing Lapping Tool**

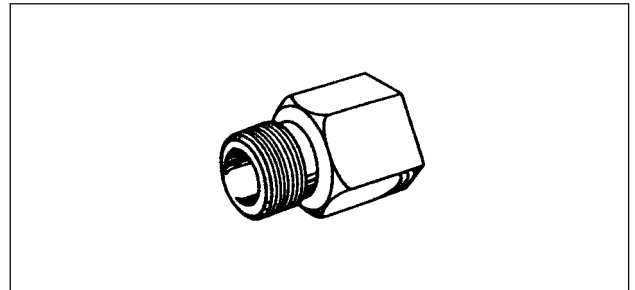


**Part No. HD-96921-58 Oil Pressure Gauge Adapter.**  
**Use with Part No. HD-96921-52B.**

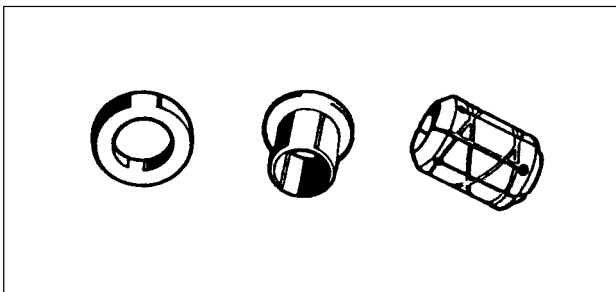


**Part No. HD-96718-87 Pinion Bearing Outer Race Lapping Kit**

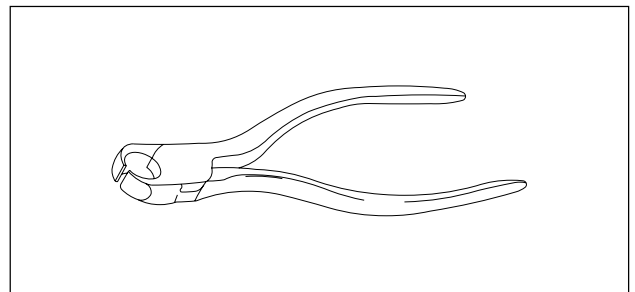


**Part No. HD-97087-65B Hose Clamp Pliers**

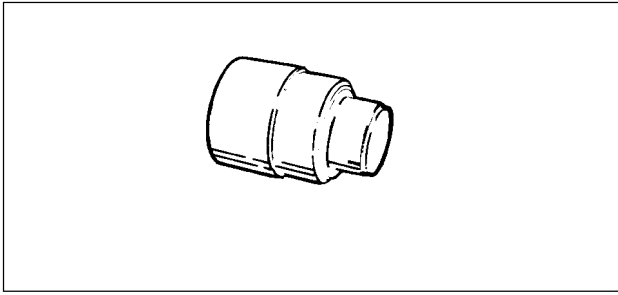


**Part No. HD-97273-60 Camshaft Bushing Installer**

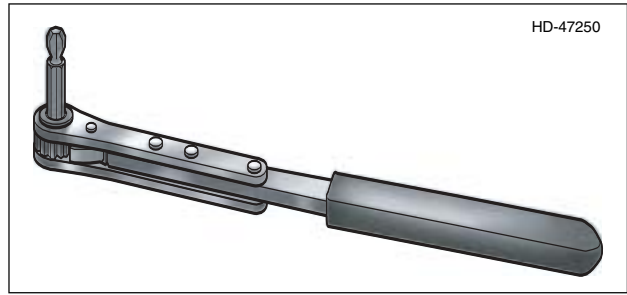


**Part No. HD-47250 Intake Manifold Wrench**

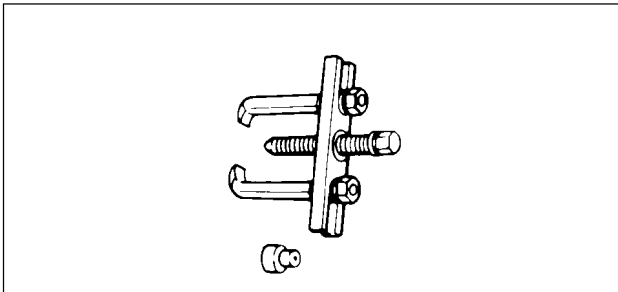


**Part No. HD-97292-61 Two Claw Puller**

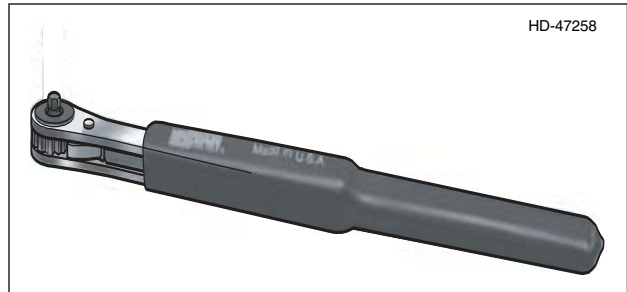

**Part No. HD-47258 Rocker Cover Wrench**

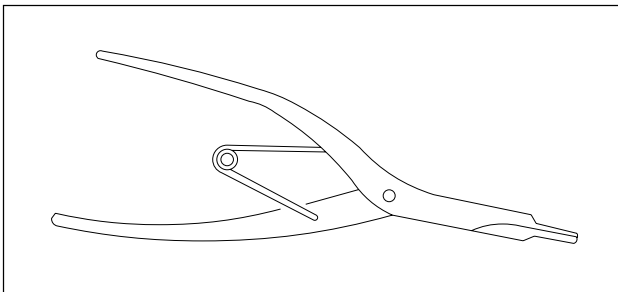

**Part No. J-5586 Transmission Shaft  
Retaining Ring Pliers**

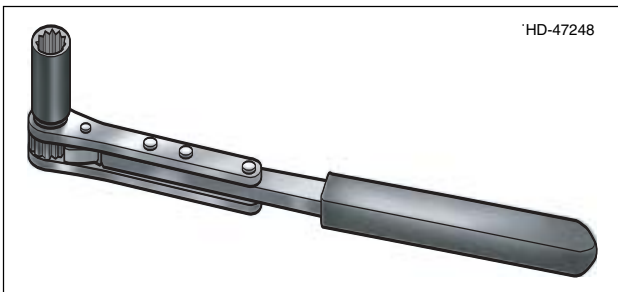

**Part No. HD-47248 Rocker Housing Wrench**

