

b1114absxu

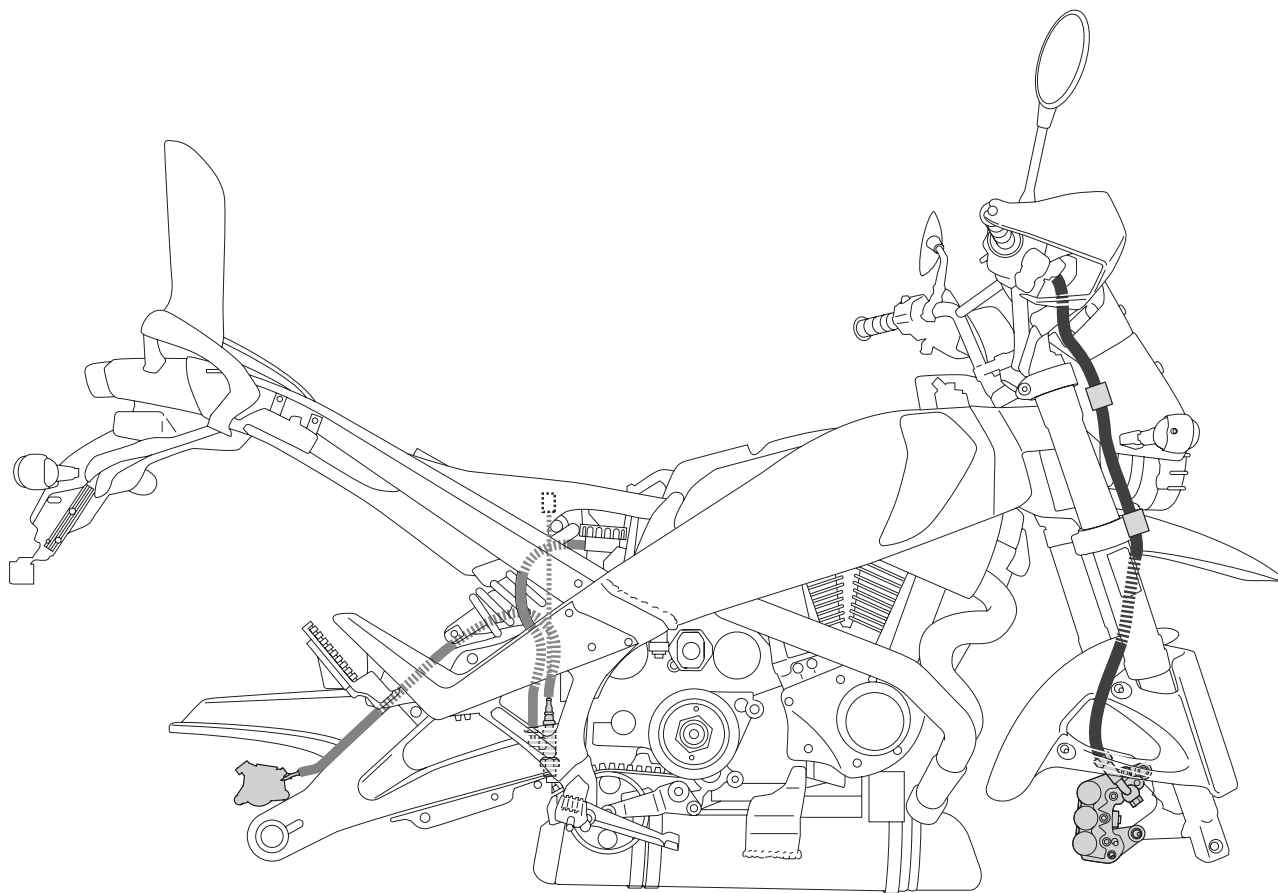


Figure D-1. Front and Rear Brake Systems, Right Side View

b1115acsxu

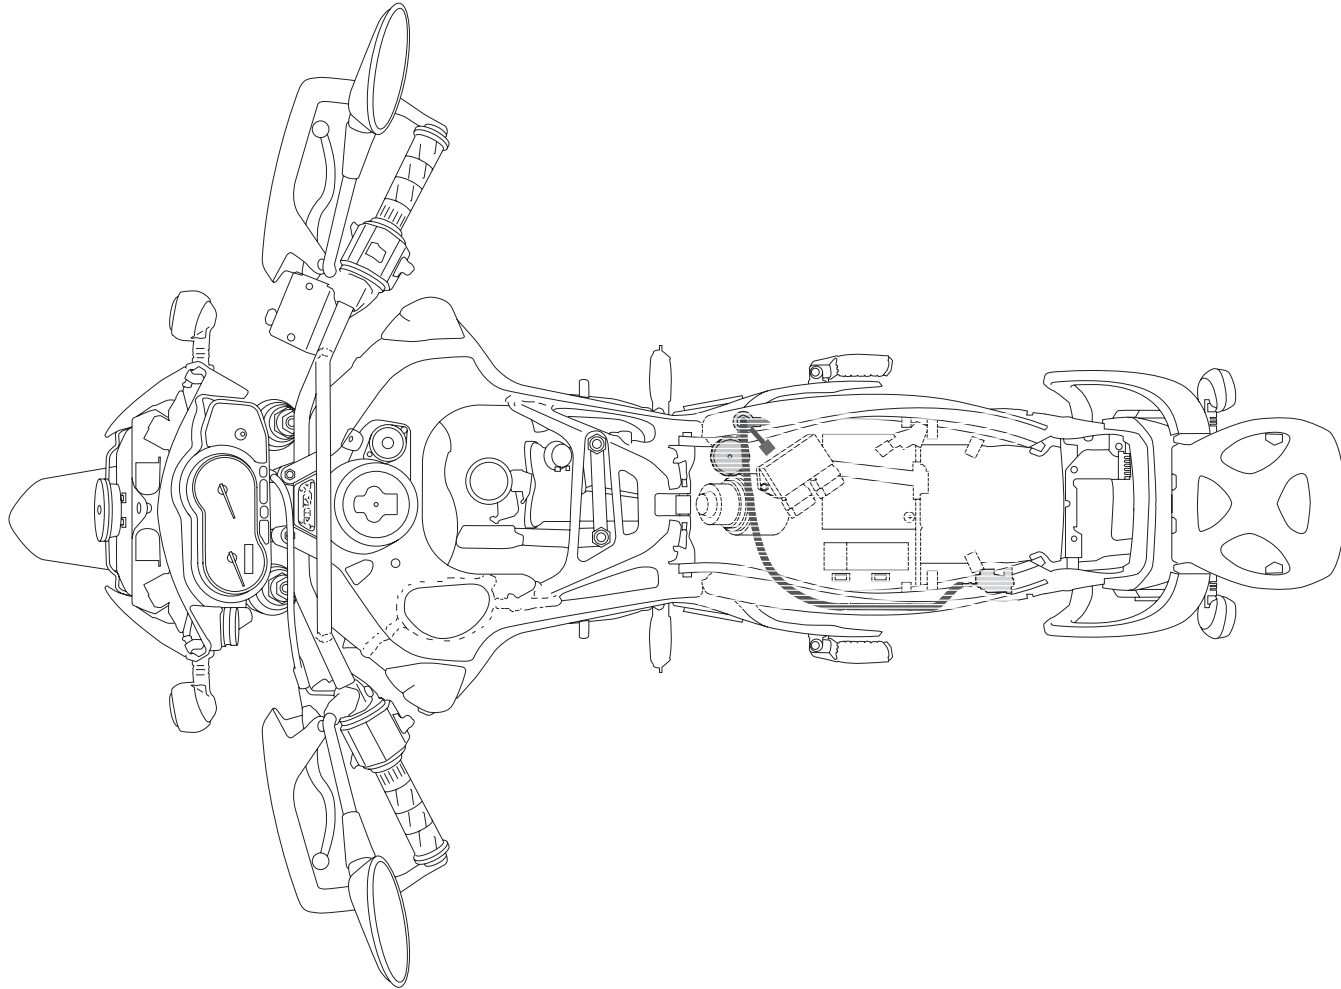


Figure D-2. Rear Brake Systems, Top View

b1116adsxu

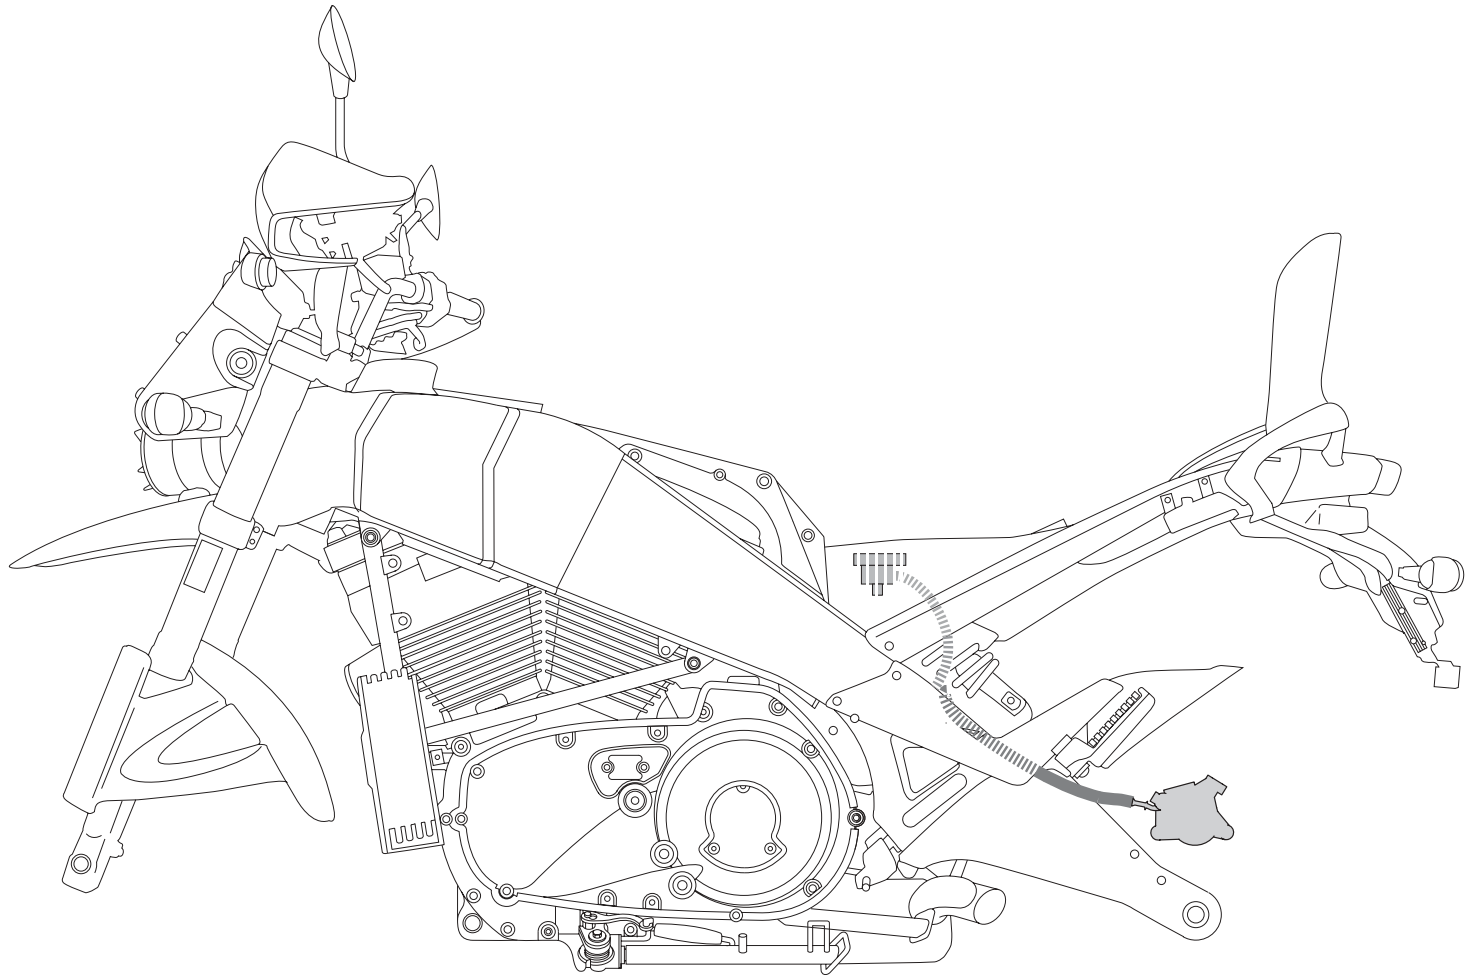


Figure D-3. Rear Brake Systems, Left Side View

b1117acsxu


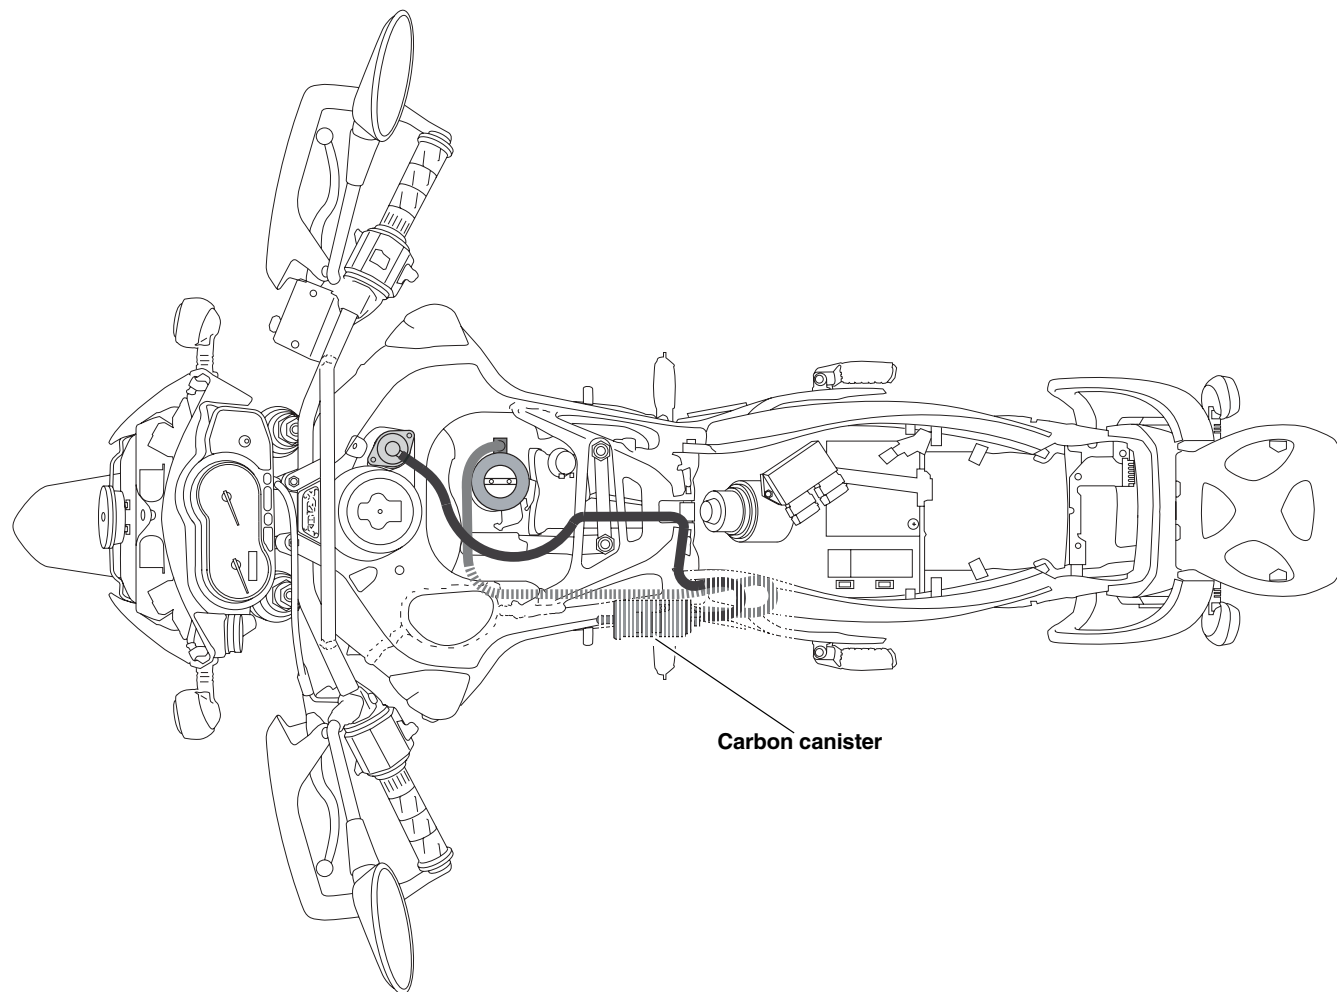


Figure D-4. Evaporative Emissions Control, California Models, Top View

b1118acsxu

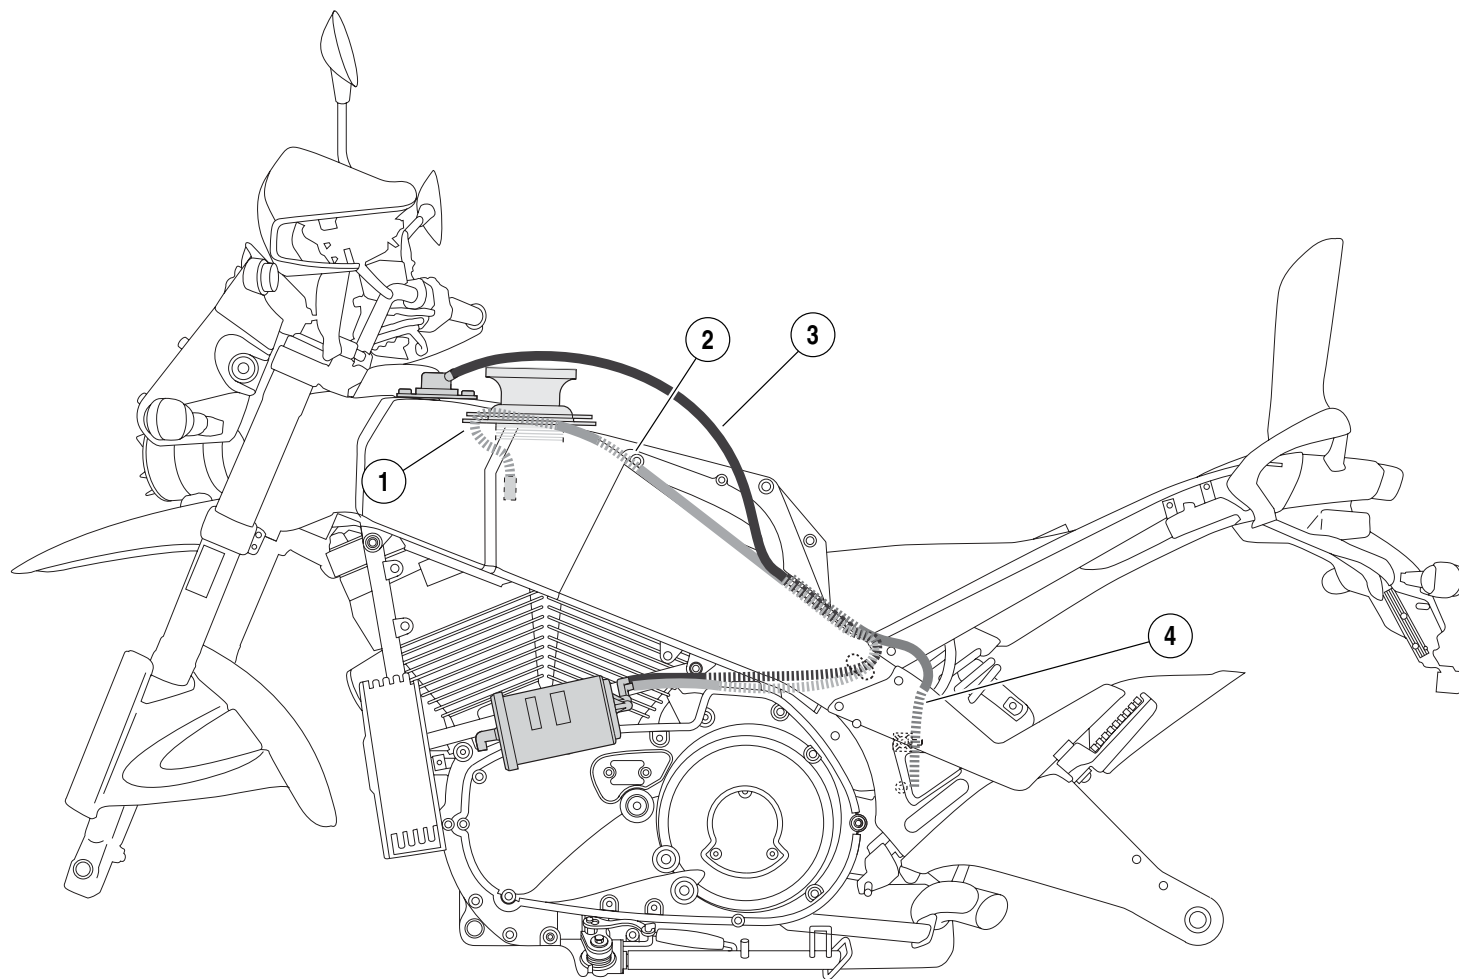


- 1. To induction module
- 2. From induction module (California)

- 3. From fuel tank (California)
- 4. From fuel tank to atmosphere (49 state)

Figure D-5. Evaporative Emissions Control, California and 49 State Models, Left Side View

b1119absxu

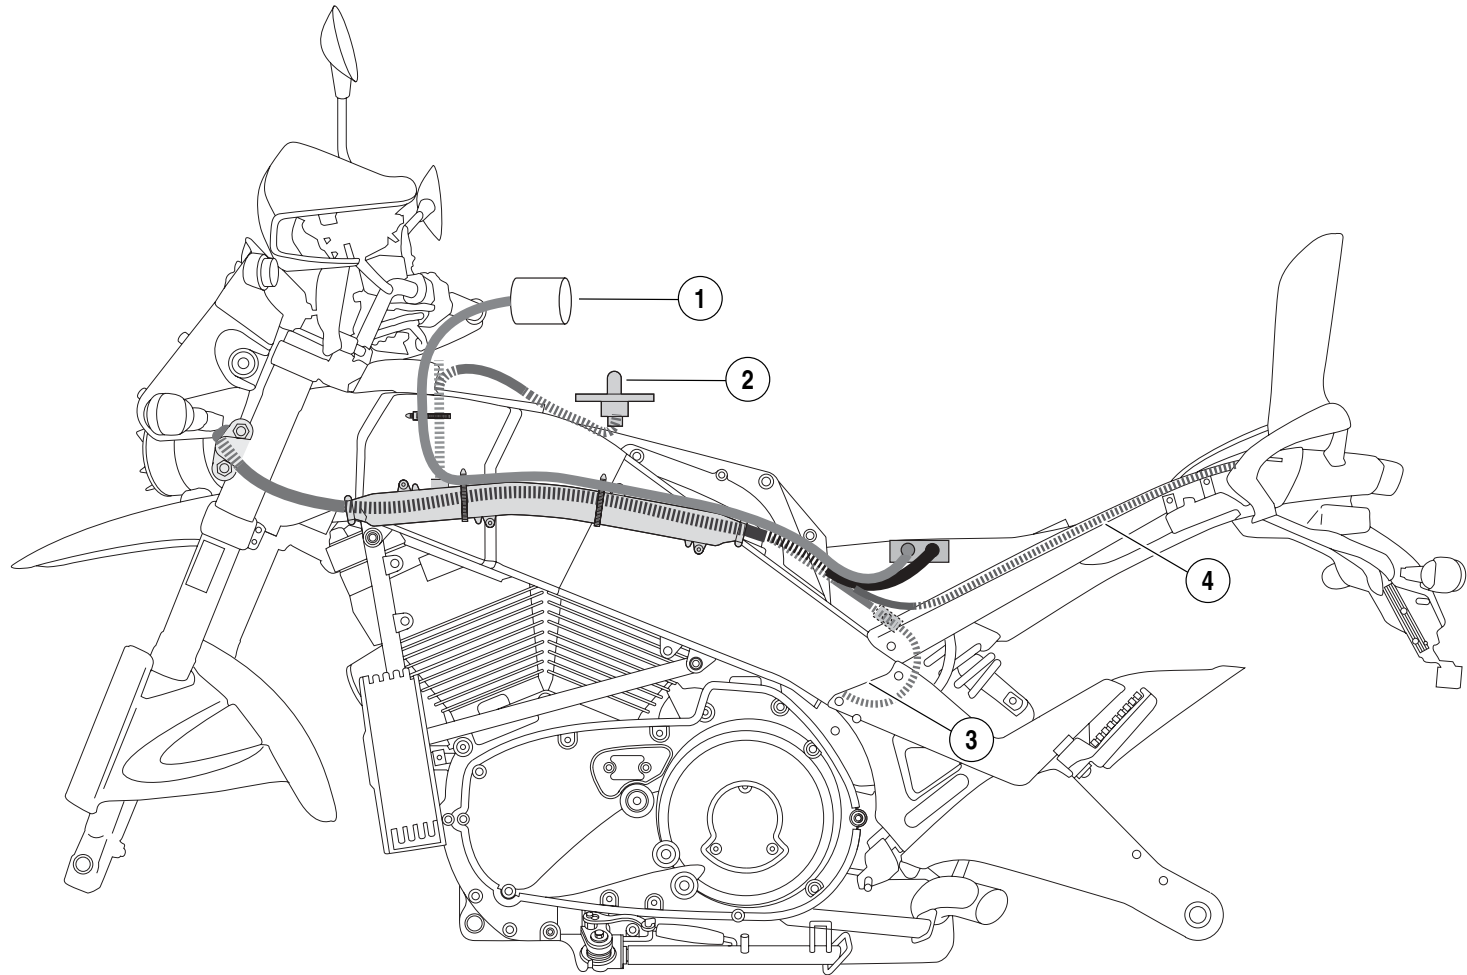


- 1. To active intake solenoid (Japan only)
- 2. Intake air temperature sensor (IAT)

- 3. Fuel pump
- 4. Active intake to ECM (Japan only)

Figure D-6. Wiring Harness, Left Side View

b1120acsxu

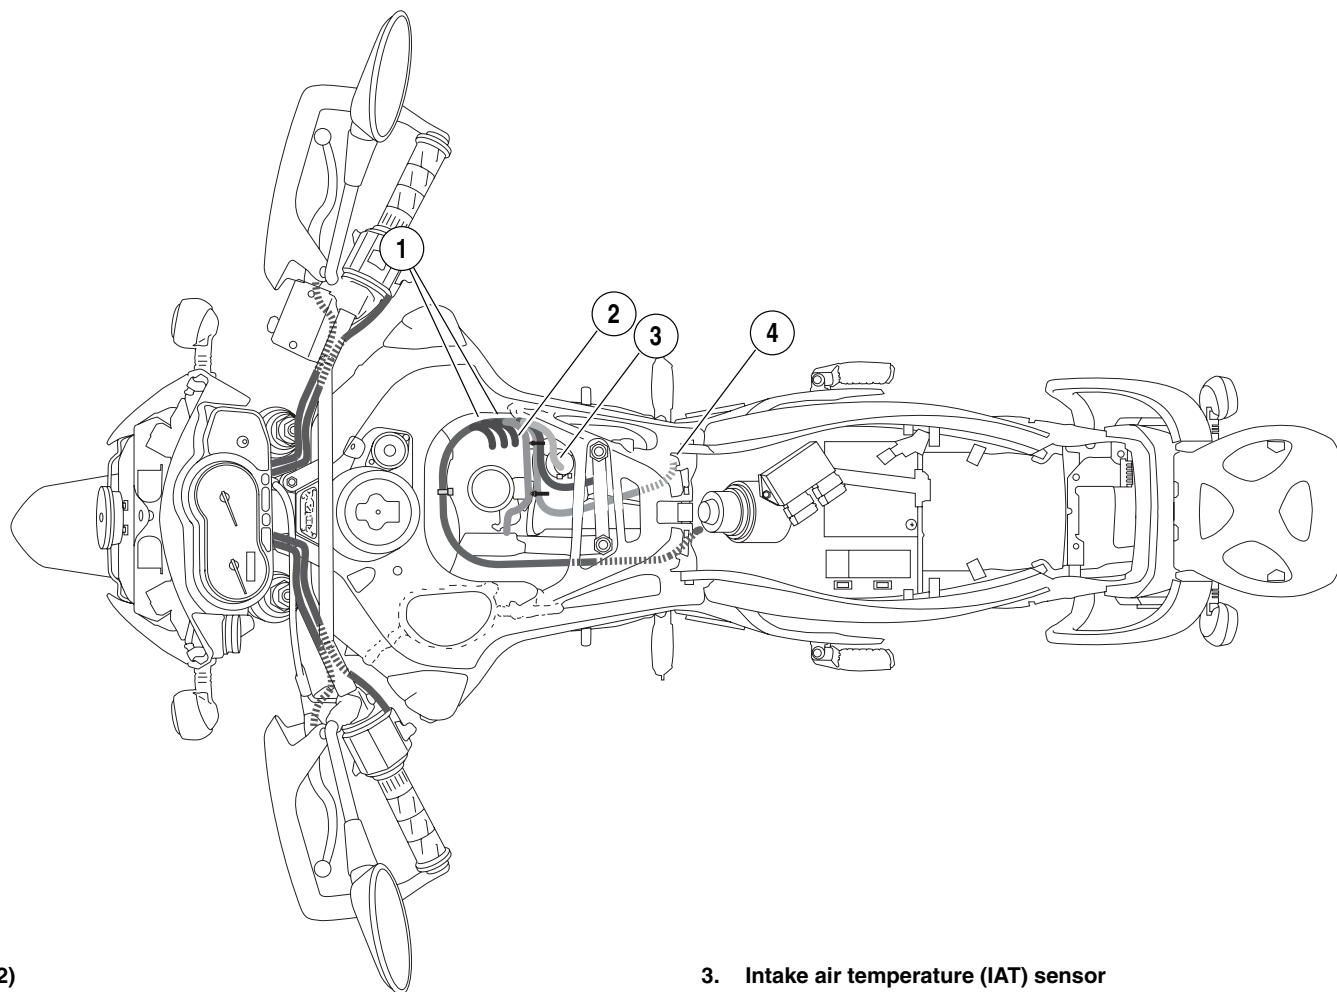

- 1. Fuel injector (2)
- 2. Throttle position sensor (TPS)

- 3. Intake air temperature (IAT) sensor
- 4. Oxygen (O2) sensor

Figure D-7. Wiring Harness, Top View

b1121xdsxu


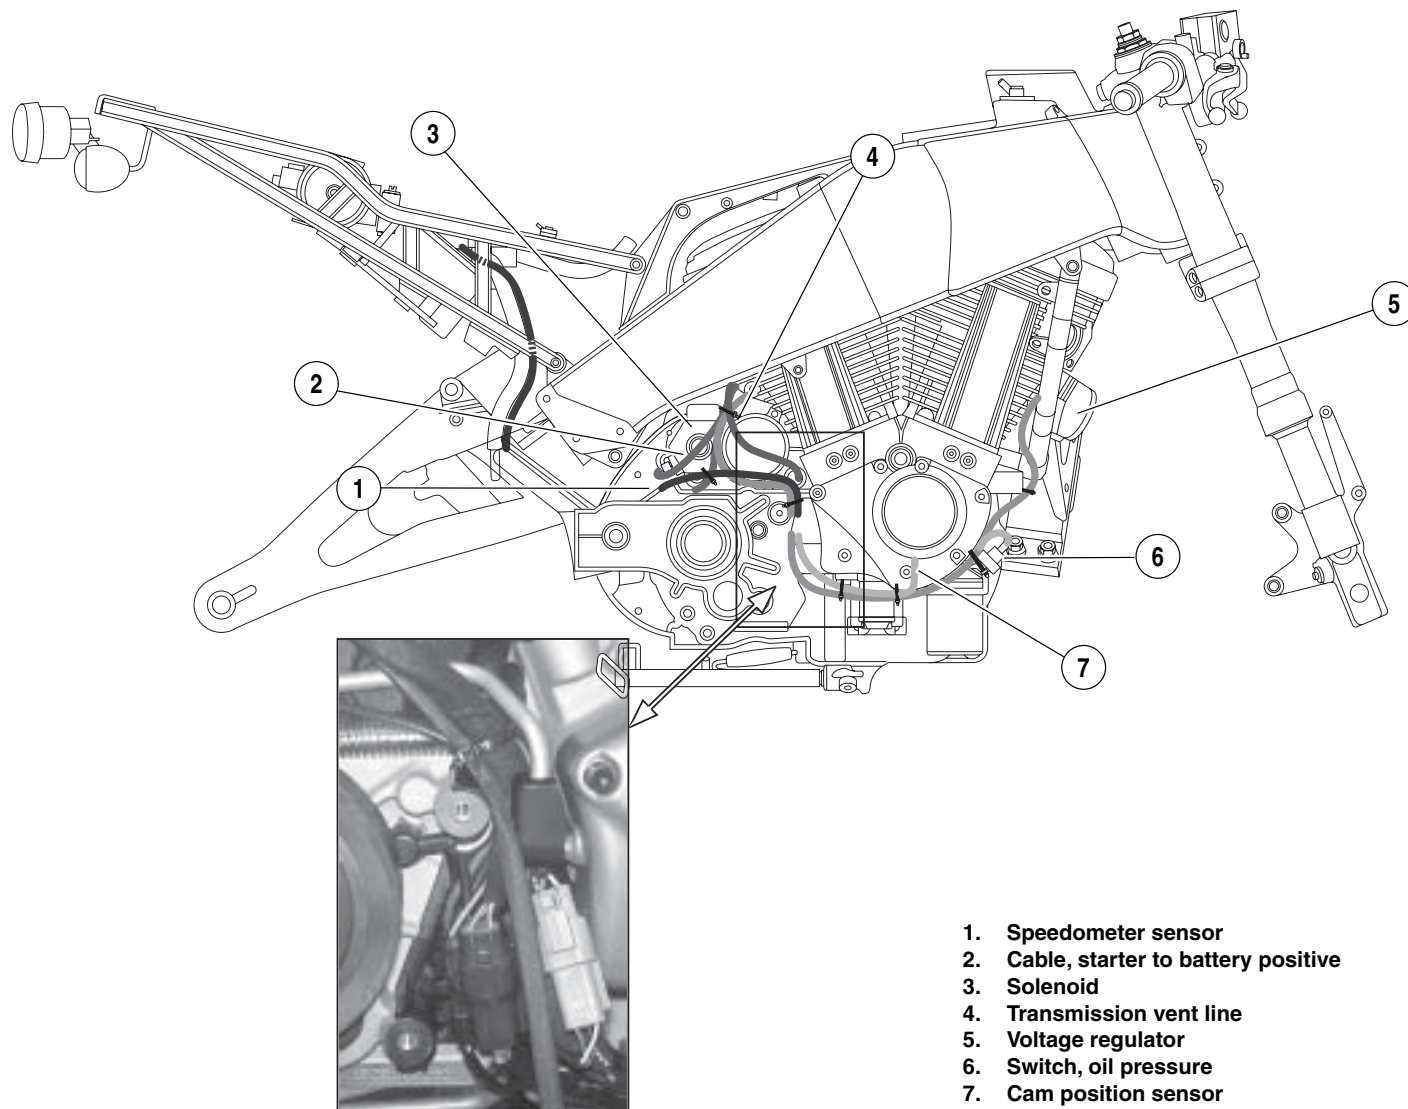


Figure D-8. Wiring Harness, Right Side View

b1122absxu

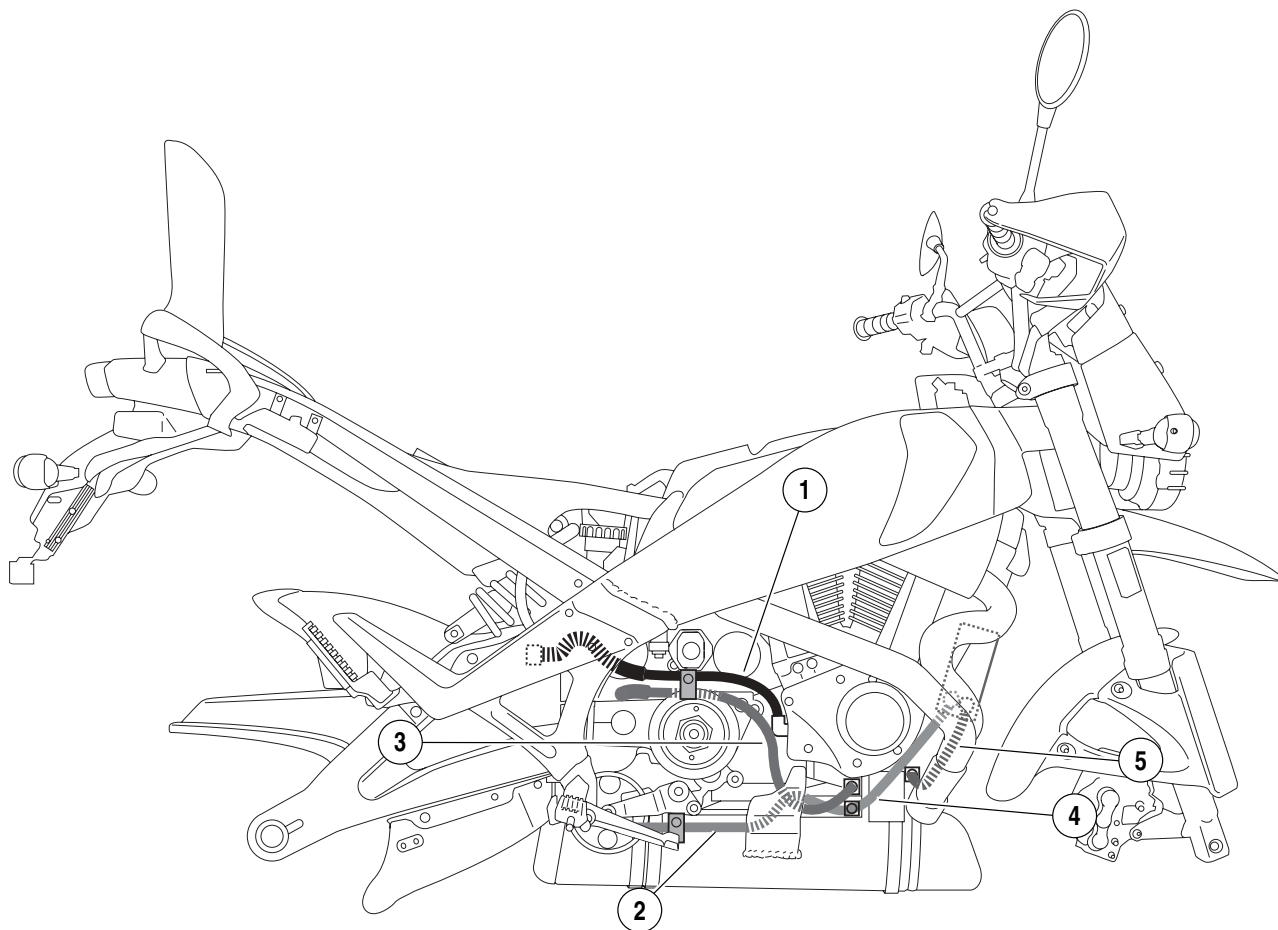


- 1. Vent line
- 2. Feed oil line
- 3. Return oil line

- 4. Feed oil line from the oil pump to the oil cooler
- 5. Return oil line from the oil cooler to the oil filter housing

Figure D-9. Oil Lines, Right Side View

b1123absxu

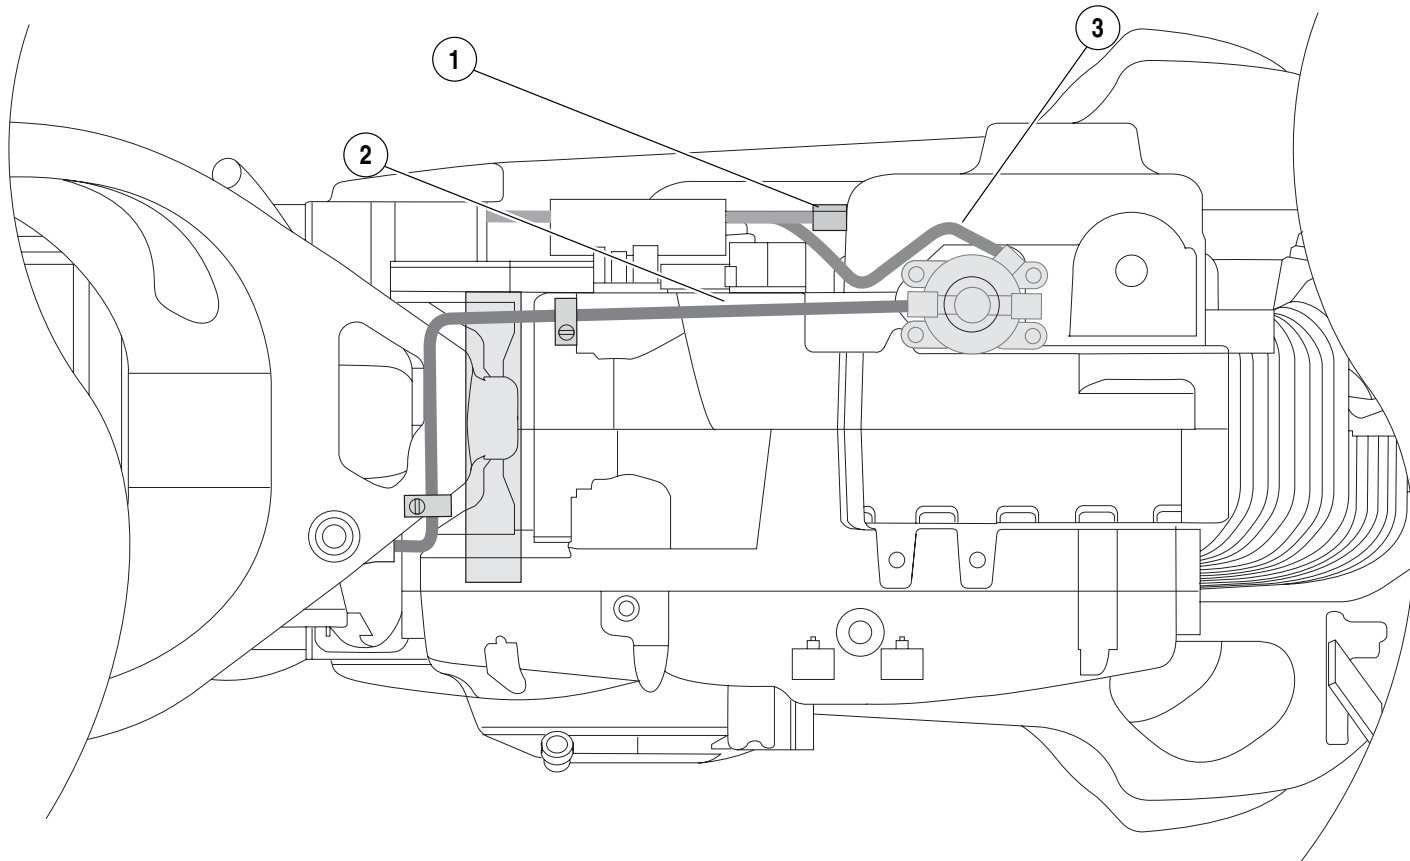

1. Vent line

2. Feed oil line

3. Return oil line

Figure D-10. Oil Lines, Bottom View

b1124absx

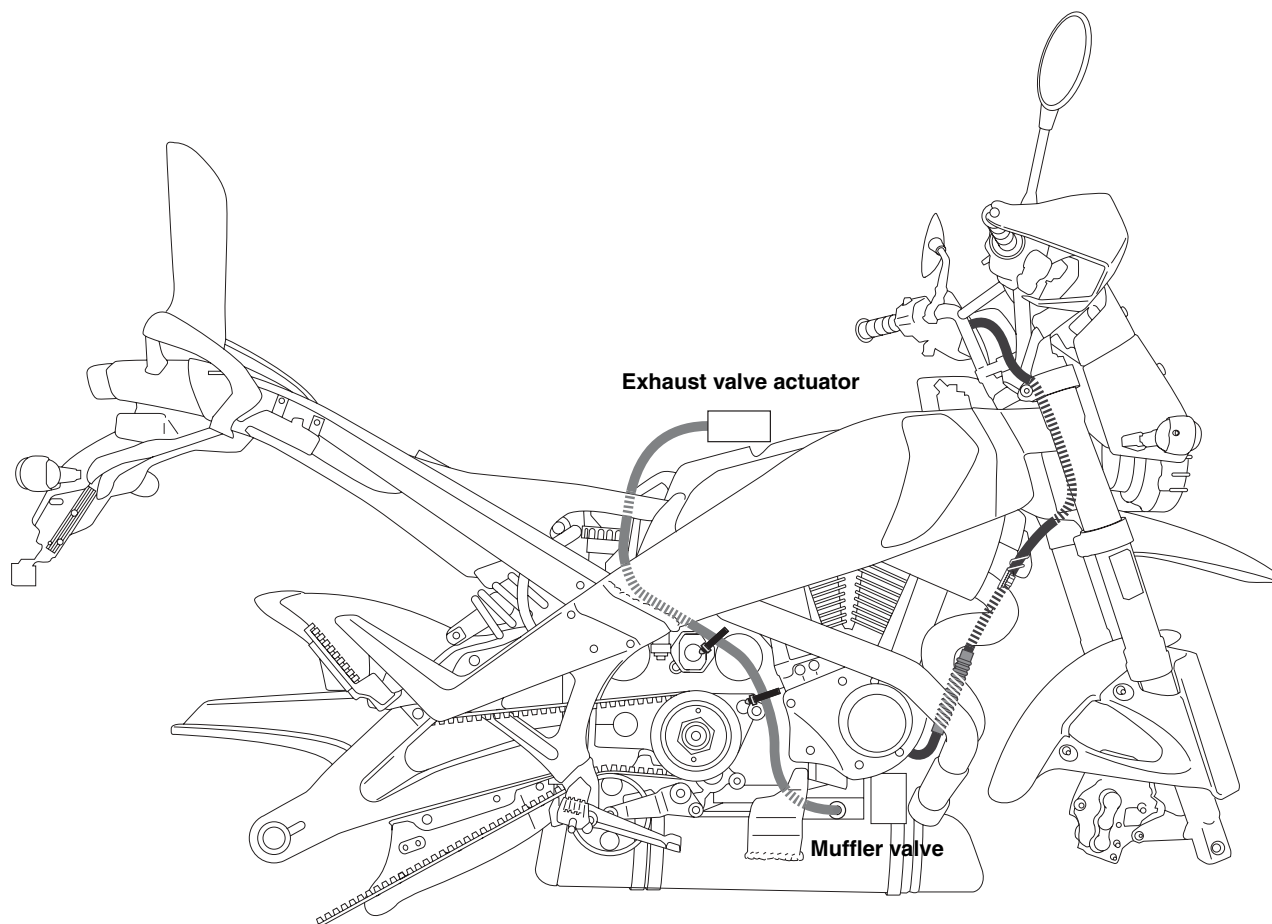


Figure D-11. Clutch Cable and Exhaust Valve Actuator, Right Side View

b1125acsxu

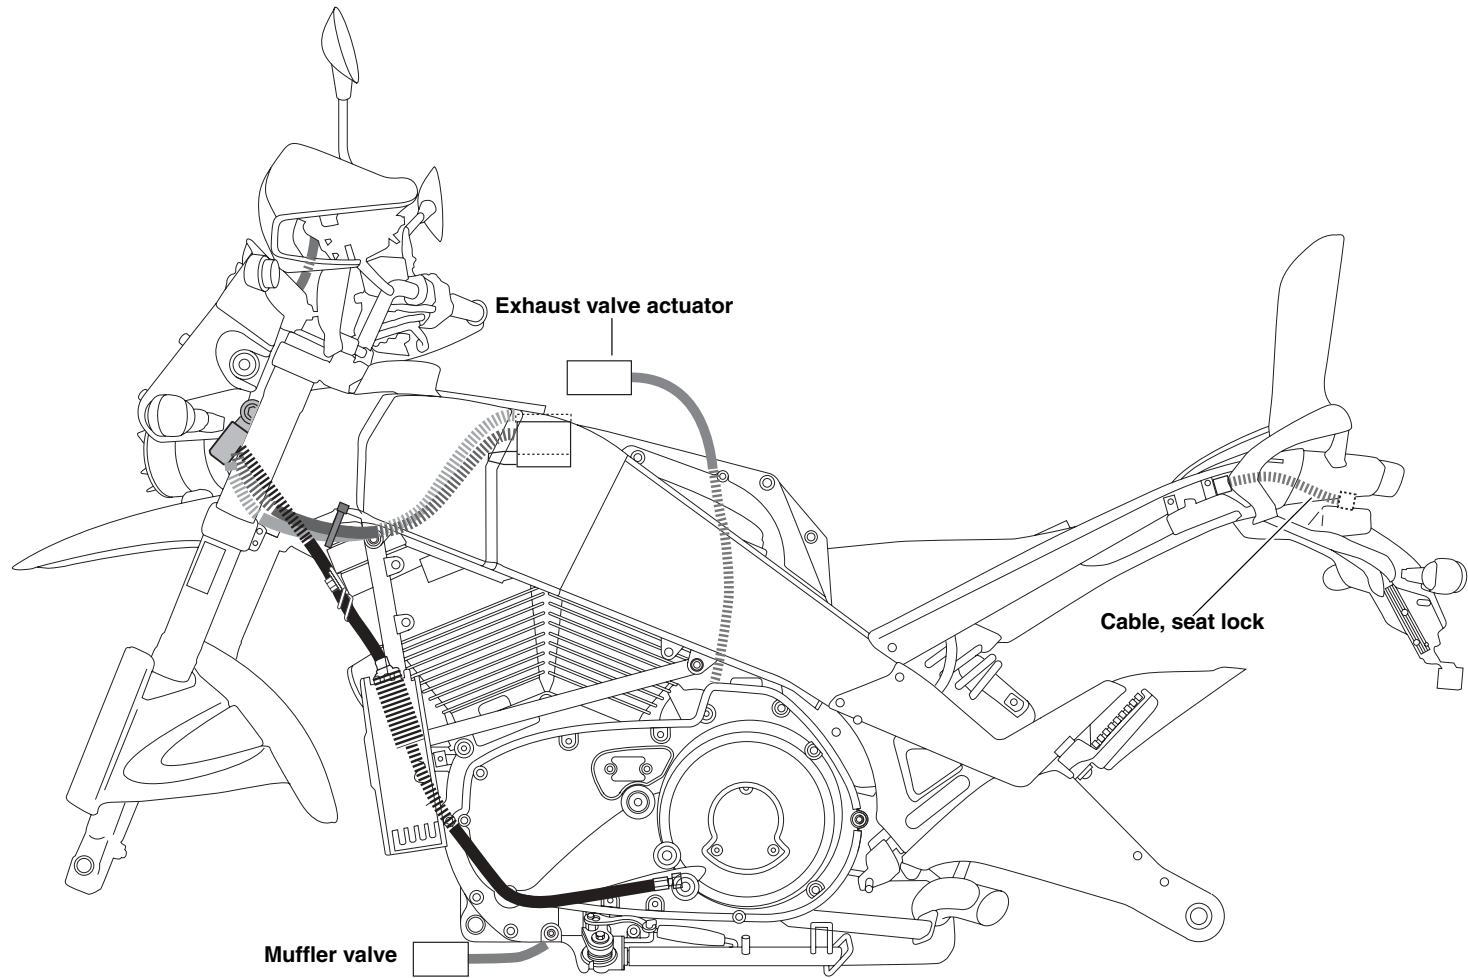


Figure D-12. Clutch, Throttle, Seat Release Cables and Exhaust Valve Actuator, Left Side View

b1126acsxu

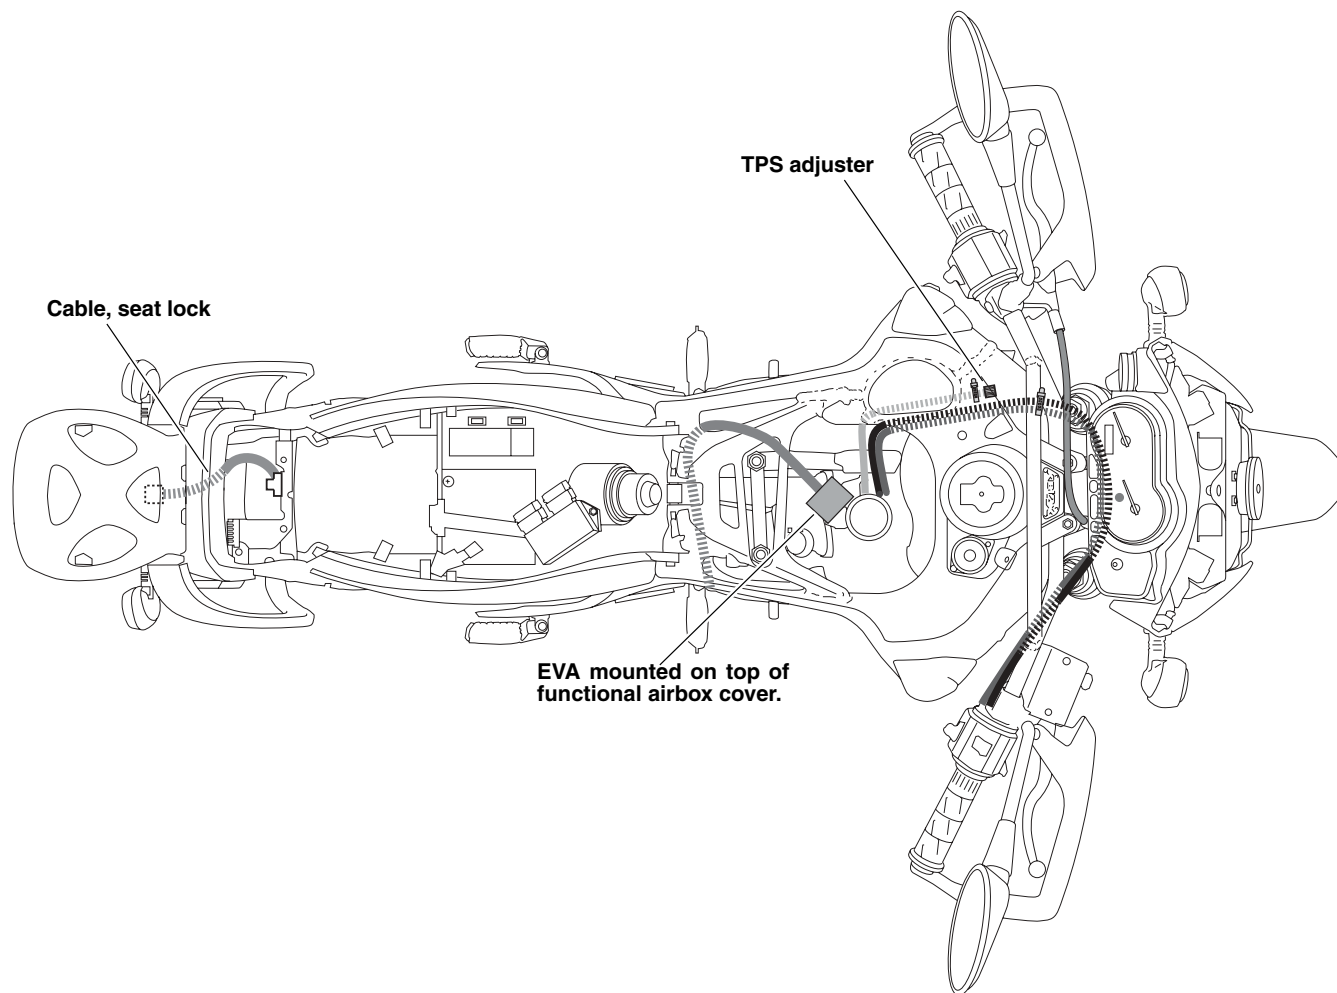


Figure D-13. Clutch, Throttle, Seat Release Cables and Exhaust Valve Actuator, Top View

